

# Samsung GALAXY METRIX™ 4G

S C H - I 4 0 5™

M O B I L E P H O N E

**User Manual**

**Please read this manual before operating your  
phone and keep it for future reference.**

## Intellectual Property

All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the SAMSUNG Phone, including but not limited to, accessories, parts, or software relating there to (the “Phone System”), is proprietary to Samsung and protected under federal laws, state laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with SAMSUNG and its suppliers.

### Open Source Software

Some software components of this product incorporate source code covered under GNU General Public License (GPL), GNU Lesser General Public License (LGPL), OpenSSL License, BSD License and other open source licenses. To obtain the source code covered under the open source licenses, please visit:

<http://opensource.samsung.com>.

## Disclaimer of Warranties; Exclusion of Liability

EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED ON THE WARRANTY PAGE ENCLOSED WITH THE PRODUCT, THE PURCHASER TAKES THE PRODUCT "AS IS", AND SAMSUNG MAKES NO EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE; THE DESIGN, CONDITION OR QUALITY OF THE PRODUCT; THE PERFORMANCE OF THE PRODUCT; THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING

THERE TO. NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS.

SAMSUNG IS NOT LIABLE FOR PERFORMANCE ISSUES OR INCOMPATIBILITIES CAUSED BY YOUR EDITING OF REGISTRY SETTINGS, OR YOUR MODIFICATION OF OPERATING SYSTEM SOFTWARE.

USING CUSTOM OPERATING SYSTEM SOFTWARE MAY CAUSE YOUR DEVICE AND APPLICATIONS TO WORK IMPROPERLY.

## **Samsung Telecommunications America (STA), LLC**

Headquarters:

1301 E. Lookout Drive

Richardson, TX 75082

Customer Care Center:

1000 Klein Rd.

Plano, TX 75074

Toll Free Tel: 1.888.987.HELP (4357)

Internet Address:

<http://www.samsung.com>

©2012 Samsung Telecommunications America, LLC. Samsung is a registered trademark of Samsung Electronics Co., Ltd.

Do you have questions about your Samsung Mobile Device?

For 24 hour information and assistance, we offer a new FAQ/ARS System (Automated Response System) at:

[www.samsung.com/us/support](http://www.samsung.com/us/support)

U.S. Cellular® and the U.S. Cellular logo are trademarks of United States Cellular Corporation.

Vlingo®, the Vlingo logo, and Vlingo Virtual Assistant™ are trademarks of Vlingo, Inc.

ACCESS® and NetFront™ are trademarks or registered trademarks of ACCESS Co., Ltd. in Japan and other countries.

The Bluetooth® word mark, figure mark (stylized “B Design”), and combination mark (Bluetooth word mark and “B Design”) are registered trademarks and are wholly owned by the Bluetooth SIG.

microSD™ and the microSD logo are Trademarks of the SD Card Association.

AccuWeather® and AccuWeather.com® are registered trademarks of AccuWeather Inc.

Polaris™ Office is a trademark of Infraware.

Microsoft® and Microsoft Office® are registered trademarks of Microsoft, Inc. Microsoft Live™ is a trademark of Microsoft, Inc.

Openwave® is a registered Trademark of Openwave, Inc.

Google™, the Google logo, Android™, the Android logo, Google Play, Gmail, Google Mail, Google Maps, Google Music, Google Talk, Picasa™, YouTube™, and other marks are trademarks of Google Inc.

Wi-Fi is a registered trademark of the Wireless Fidelity Alliance, Inc.

Swype™ and the Swype logos are trademarks of Swype, Inc.

DivX®, DivX Certified® and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.

DivX Certified® to play DivX® video up to HD 720p, including premium content.



ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that plays DivX video. Visit [www.divx.com](http://www.divx.com) for more information and software tools to convert your files into DivX videos.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu (touch **Applications > Settings > About phone > Legal information > License settings > DivX® VOD > Register**). Go to [vod.divx.com](http://vod.divx.com) for more information on how to complete your registration.

# Table of Contents

---

## Section 1: Getting Started ..... 6

Understanding this User Manual .....	6
Setting Up Your Phone .....	7
Turning Your Phone On and Off .....	15
Your Google Account .....	15
Displaying Your Phone Number .....	16
System Tutorial .....	16
Voicemail .....	16
TTY Mode .....	17
Roaming .....	17
Memory Card .....	18
Securing Your Phone .....	19

## Section 2: Understanding Your Phone ..... 21

Features .....	21
Front View .....	22
Side Views .....	23
Open View (Front) .....	24
Back View .....	25
Touch Screen Display .....	26

Navigation .....	29
Notification Panel .....	30
Home Screen .....	31
Primary Shortcuts .....	32
Customizing the Home Screen Panels .....	32

## Section 3: Call Functions .....38

Making Calls .....	38
Answering Calls .....	41
Silencing an Incoming Call Ringtone .....	42
Ending a Call .....	42
Call Log .....	43
Voicemail .....	44

## Section 4: Entering Text .....46

Using the Sliding QWERTY Keypad .....	46
Screen QWERTY Keyboards .....	47
Screen Keyboard Types .....	48
Changing the Keyboard Type .....	48
Using the Samsung Keypad .....	48
Using the Swype Keyboard .....	51

<b>Section 5: Accounts and Contacts .....</b>	<b>54</b>
Accounts .....	54
Contacts .....	59
Favorites .....	64
My Profile .....	65
Groups .....	65
History .....	67
Activities .....	67
Speed Dials .....	68
<b>Section 6: Messaging .....</b>	<b>69</b>
Types of Messages .....	69
Text and Multimedia Messaging .....	69
Gmail .....	72
Email .....	74
Google Talk .....	78
<b>Section 7: Web and Social Networking ....</b>	<b>79</b>
Browser .....	79
Maps .....	85
YouTube .....	87
Voice Search .....	87

<b>Section 8: Music .....</b>	<b>88</b>
Play Music App .....	88
Music Player .....	94
<b>Section 9: Pictures and Videos .....</b>	<b>96</b>
Camera .....	96
Camcorder .....	98
Video Player .....	100
Media Hub .....	102
Gallery .....	103
<b>Section 10: Connections .....</b>	<b>106</b>
Wi-Fi .....	106
Enabling Wi-Fi Direct .....	108
Portable Wi-Fi Hotspot .....	109
Bluetooth .....	111
Internet connection mode .....	112
VPN .....	112
Memory Card .....	113

## **Section 11: Applications ..... 115**

Accessing Applications .....	115
Customizing the Applications Screens .....	115
AllShare .....	116
Amazon .....	117
Amazon Kindle .....	117
Amazon MP3 .....	117
Appstore .....	117
Audible .....	117
Browser .....	118
Calculator .....	118
Calendar .....	118
Camera .....	120
City ID .....	120
Clock .....	120
Daily Perks .....	120
Desk Cradle .....	121
Downloads .....	121
Email .....	121
Gallery .....	121
Gmail .....	121
Google+ .....	121

HD Games .....	121
IMDb .....	121
Latitude .....	122
Let's Golf 3 .....	124
Maps .....	125
Media Hub .....	127
Memo .....	127
Messenger .....	127
Mobile TV .....	128
Music Player .....	128
My files .....	128
Navigation .....	129
Places .....	129
Play Books .....	129
Play Music .....	129
Play Store .....	130
Portable Wi-Fi Hotspot .....	131
Quick office .....	131
Search .....	131
Settings .....	131
Talk .....	132
Task manager .....	132

Tone Room Deluxe .....	132	Voice input & output .....	169
Video Player .....	132	Accessibility .....	171
Voice Dialer .....	133	Date & time .....	172
Voice Recorder .....	134	About phone .....	172
Voice Search .....	134		
Your Navigator Deluxe .....	134	<b>Section 13: Health and Safety</b>	
YouTube .....	135	<b>Information .....</b>	<b>174</b>
Zappos .....	136	Exposure to Radio Frequency (RF) Signals ...	174
<b>Section 12: Settings .....</b>	<b>137</b>	Specific Absorption Rate (SAR)	
Accessing Settings .....	137	Certification Information .....	179
Wireless & networks .....	137	FCC Part 15 Information to User .....	180
Call settings .....	146	Smart Practices While Driving .....	181
Sound .....	149	Battery Use and Safety .....	182
Display .....	153	Samsung Mobile Products and Recycling ...	184
Power saving mode .....	154	UL Certified Travel Charger .....	185
Location & security .....	156	Display / Touch-Screen .....	185
Applications .....	160	GPS .....	186
Accounts & sync .....	163	Emergency Calls .....	186
Privacy .....	164	Care and Maintenance .....	187
SD card & phone storage .....	165	Responsible Listening .....	188
Search .....	166	Operating Environment .....	190
Language & keyboard .....	166	FCC Hearing Aid Compatibility (HAC)	
		Regulations for Wireless Devices .....	192

Restricting Children's Access to	
Your Mobile Device .....	194
FCC Notice and Cautions .....	194
Other Important Safety Information .....	195
<b>Section 14: Warranty Information .....</b>	<b>197</b>
Standard Limited Warranty .....	197
End User License Agreement for Software ..	202
Social Hub .....	207
LIMITATION OF LIABILITY .....	212
Social Hub Privacy Policy .....	215
INFORMATION THAT WE COLLECT .....	215
USE OF INFORMATION WE COLLECT .....	216
DISCLOSURE OF INFORMATION	
TO THIRD PARTIES .....	217
CHILDREN .....	218
SECURITY OF THE INFORMATION	
WE COLLECT .....	218
CHAT ROOMS AND OTHER PUBLIC AREAS ..	218
CONTESTS AND SWEEPSTAKES .....	219
ACCURACY OF THE INFORMATION	
WE COLLECT .....	219
CHANGES TO PRIVACY POLICY .....	220

Social Hub End User License Agreement ...	220
<b>Index .....</b>	<b>225</b>

## Section 1: Getting Started

---

This section allows you to quickly start using your Samsung SCH-I405 phone by installing the 4G LTE SIM Card and microSD card, installing and charging the battery, activating your service, and setting up your voicemail account.

### Understanding this User Manual

The sections of this manual generally follow the features of your phone. A robust index for features begins on page 225. Also included is important safety information that you should know before using your phone. Most of this information is near the back of the guide, beginning on page 174.

This manual gives navigation instructions according to the default display settings. If you select other settings, navigation steps may be different.

Unless otherwise specified, all instructions in this manual assume that you are starting from the Home screen. To get to the Home screen, you may need to unlock the phone or keypad. (For more information, refer to “*Securing Your Phone*” on page 19.)

---

**Note:** Instructions in this manual are based on default settings, and may vary from your phone, depending on the software version on your phone, and any changes to the phone’s Settings.

Unless stated otherwise, instructions in this User Manual start with the phone unlocked, at the Home screen.

All screen images in this manual are simulated. Actual displays may vary, depending on the software version of your phone and any changes to the phone’s Settings.

---

### Special Text

In this manual, you’ll find text that is set apart from the rest. These are intended to point out important information, share quick methods for activating features, to define terms, and more. The definitions for these methods are as follows:

- **Notes:** Presents alternative options for the current feature, menu, or sub-menu.
- **Tips:** Provides quick or innovative methods, or useful shortcuts.


- **Example:** Gives an example of the feature or procedure.
- **Important:** Points out important information about the current feature that could affect performance.
- **Warning:** Brings to your attention important information to prevent loss of data or functionality, or even prevent damage to your phone.

## Text Conventions

This manual provides condensed information about how to use your phone. To make this possible, the following text conventions are used to represent often-used steps:

- Arrows are used to represent the sequence of selecting successive options in longer, or repetitive, procedures.

---


**Example:** “From the Home screen, touch  **Menu** → **Settings** → **Wireless & networks** → **Wi-Fi settings**.”

---

## Setting Up Your Phone

Before using your phone, you need to install the 4G LTE SIM Card and the battery into their respective internal slots and compartment.

---

**Important!** Before removing or replacing the battery cover, make sure the phone is switched off. To turn the phone off, hold down the power key  (on the right side of the phone) until the **Phone options** menu pops-up, then touch **Power off**.

---



 
## Removing the battery cover

---

**Caution!** Do not bend or twist the back cover excessively. Doing so may damage the cover.

---

- Pull up using the slot provided (1), while lifting the cover off the phone (2).

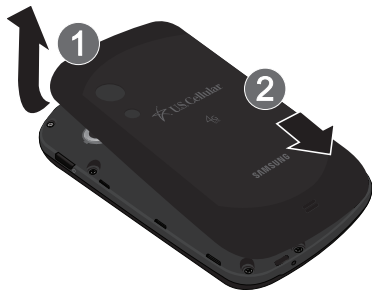

## Installing the 4G LTE SIM Card

When you subscribe to a 4G LTE cellular network, you are provided with a 4G LTE SIM Card loaded with data for the Samsung Galaxy Metrix 4G. This 4G LTE SIM Card will only work with this device.

---

**Important!** The 4G LTE SIM Card must be installed for your phone to establish a network connection.

The 4G LTE SIM Card information can be easily damaged by scratching or bending, so be careful when handling, inserting, or removing the card. Keep all SIM cards out of reach of small children.

---

1. Remove the battery cover. (See “Removing the battery cover” on page 8.)
2. Locate the SIM card slot on the bottom inside of the phone.
3. Make sure the gold contacts of the 4G LTE SIM Card face downward and that the notched corner of the card faces outward to the right (as shown).
4. Carefully slide the SIM card into the SIM card socket (as shown) until the card locks into place.



---

**Note:** If the SIM card is not inserted correctly, the phone cannot make a network connection. Once the SIM card is inserted, do not remove it.

---

If your SIM card is ever separated from the device or damaged, your device will not function. If you experience any issues with your device, contact Customer Service at 1-888-944-9400 or visit your nearest U.S. Cellular<sup>®</sup> retail location.

## SIM Card Limited Warranty

Subject to the exclusions contained below, United States Cellular Corporation (“U.S. Cellular”) warrants to the original purchaser (“You” or “Your”) of the handset with which the SIM card was provided that the SIM card will be free from defects in material and workmanship for a period of one (1) year from the date You purchased the handset (the “Warranty Period”). This warranty is not transferable. Should a defect appear during the Warranty Period, U.S. Cellular will send a replacement SIM card to Your address within the United States without charge provided that you request the replacement SIM card during or within thirty (30) days following the Warranty Period by calling U.S. Cellular Customer Service at 1-888-944-9400 (or dialing 611 on Your U.S. Cellular handset) or by visiting a U.S. Cellular retail store.

REPLACEMENT OF THE SIM CARD AS PROVIDED HEREIN IS YOUR EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY, AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED INCLUDING, WITHOUT LIMITATION, ANY WARRANTIES OF TITLE, FITNESS FOR A PARTICULAR PURPOSE, MERCHANTABILITY, NONINFRINGEMENT OR ARISING FROM COURSE OF DEALING OR USAGE OF TRADE. NEITHER U.S. CELLULAR NOR ANY OF ITS AFFILIATES OR

RETAILERS SHALL BE LIABLE TO YOU FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, ECONOMIC, EXEMPLARY, PUNITIVE OR CONSEQUENTIAL DAMAGES (INCLUDING, WITHOUT LIMITATION, LOSS OF DATA, LOSS OF REVENUE OR PROFITS, DAMAGE TO PROPERTY OR LOSS OF USE). IN NO EVENT SHALL U.S. CELLULAR'S, ITS AFFILIATES' OR RETAILERS' LIABILITY TO YOU OR ANY THIRD PARTY WITH RESPECT TO THE SIM CARD EXCEED THE COST OF REPLACING THE SIM CARD.

THIS LIMITED WARRANTY SHALL BE CONSTRUED UNDER THE LAWS OF THE STATE OF ILLINOIS, EXCLUDING ITS CONFLICTS OF LAW PROVISIONS. SOME STATES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, OR THE DISCLAIMER OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS AND DISCLAIMERS MAY NOT APPLY TO YOU.

No agent, employee, dealer, retailer, representative or reseller is authorized to modify or extend the terms of this Limited Warranty.

### **Removing the 4G LTE SIM Card**

1. Remove the battery cover.
2. Remove the battery.
3. Firmly press the SIM card into the slot and release it. The card should pop partially out of the slot.
4. Remove the SIM card from the slot.
5. Replace the battery cover.

## Battery

Your phone is powered by a rechargeable, standard Li-Ion battery. A Wall/USB Charger (Charging Head and USB cable) are included with the phone, for charging the battery.

The battery is under a removable cover on the back of the phone.

---

**Note:** The battery comes partially charged. You must fully charge the battery before using your phone for the first time. A fully discharged battery requires up to 4 hours of charge time.

After the first charge, you can use the phone while charging.



---

---

**Warning!** Use only Samsung-approved charging devices and batteries. Samsung accessories are designed to maximize battery life. Using other accessories may invalidate your warranty and may cause damage.


---

## Battery Indicator

The battery icon  in the Annunciator Line shows battery power level. Two to three minutes before the battery becomes too low to operate, the empty battery icon  will flash and a tone will sound. If you continue to operate the phone without charging, the phone will power off.

## Installing the Battery

 1. Remove the battery cover. (For more information, refer to *"Removing the battery cover"* on page 8.)
2. Insert the battery into the phone (1), aligning the gold contacts on the battery with the gold contacts in the phone. Push down on the bottom of the battery (2) until it snaps into place.

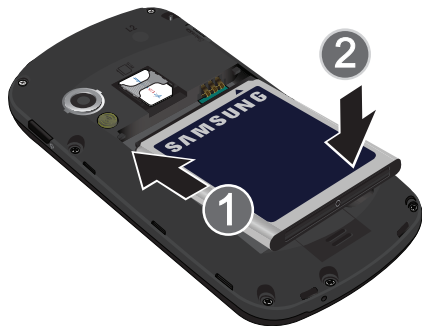

3. Install the battery cover.

## Installing the battery cover

- Align the cover (1) and press it into place (2), making sure it snaps into place at the corners.



## Charging the Battery

Your phone comes with a Wall/USB Charger (Charging Head and USB cable) to rapidly charge your phone from any 120/220 VAC outlet.

 
---

**Note:** The battery comes partially charged. You must fully charge the battery before using your phone for the first time. A fully discharged battery requires up to 4 hours of charge time.

After the first charge, you can use the phone while charging.

---

1. Connect the USB cable to the charging head.

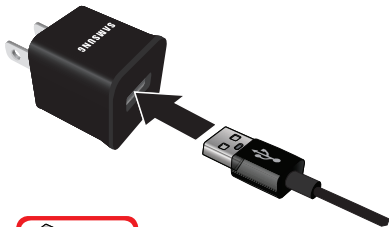


2. Insert the USB cable into the port at the bottom of the phone.



3. Plug the charging head into a standard AC power outlet.
4. When charging is complete, unplug the charging head from the power outlet and remove the USB cable from the phone.

## Removing the Battery

 
1. Remove the battery cover. (For more information, refer to *"Removing the battery cover"* on page 8.)
2. Lift the battery up by the slot provided (1).
3. Lift the battery up and out of the phone (2).

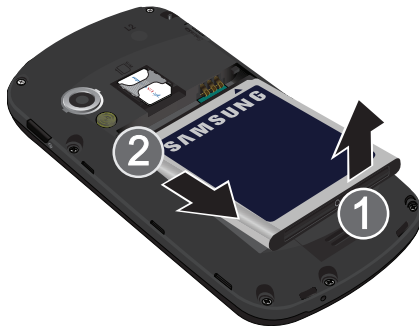

## Turning Your Phone On and Off

### Turning Your Phone On

 - Press and hold  **Power/Lock** (on the right side of the phone) for three seconds as shown.

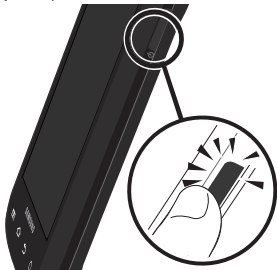


While powering on, the phone connects with the network, then displays the Home screen and active alerts.

---

**Note:** Your phone's internal antenna is located along the bottom back of the phone. Do not block the antenna; doing so may affect call quality or cause the phone to operate at a higher power level than is necessary.

---

### Turning Your Phone Off

1. Press and hold  **Power/Lock** (on the right side of the phone) for two seconds. The **Phone options** menu pops-up.
2. Touch **Power off**.

## Your Google Account


Your new phone uses your Google account to fully utilize its Android features, including Gmail, Google Maps, Google Talk and Google Play. When you turn on your phone for the first time, set up a connection with your existing Google account, or create a new Google account.

To create a Google account, or set up your Google account on your phone:

- Use Gmail. (For more information, refer to “*Gmail*” on page 121.)
- Use Accounts & sync settings (see “*Accounts & sync*” on page 163.)




## Displaying Your Phone Number

- From the Home screen, touch  **Menu** → **Settings** → **About phone** → **Status**.

Your phone number displays under **Phone number**.

## System Tutorial



Learn about important concepts to get the most out of your phone.

- From the Home screen, touch  **Menu** → **Settings** → **About phone** → **System tutorial**.



## Voicemail

All unanswered calls to your phone are sent to voicemail, even if your phone is turned off, so you'll want to set up your voicemail and personal greeting as soon as you activate your phone.

### Setting up Voicemail

1. Navigate to a Home screen panel, then touch  **Phone**, then touch and hold  **1**.
2. Follow the automated instructions to set up your new password and record a greeting.

### Checking Voicemail

1. Navigate to a Home screen panel, then touch  **Phone**, then touch and hold  **1**.
2. Follow the automated instructions to manage voicemail.

---

**Tip:** You can also access **Voicemail** by dialing your phone number from any touch-tone phone.


---

## TTY Mode

Your phone is fully TTY-compatible, allowing you to connect a TTY device to the phone's headset jack. Before you can use your phone with a TTY device, you'll need to enable TTY Mode.

For more information, refer to “*TTY mode*” on page 148.

## Roaming

When you travel outside your home network's coverage area, your phone can roam to acquire service on other compatible digital networks. When Roaming is active, the Roaming icon  appears in the Annunciator Line of the display.

---

**Tip:** You can set your phone's roaming behavior. For more information, refer to “*Mobile networks*” on page 145.

---

During roaming, some services may not be available. Depending on your coverage area and service plan, extra charges may apply when making or receiving call.

---

**Note:** Contact U.S. Cellular® for more information about your coverage area and service plan.

---

## Memory Card

Your phone includes a removable microSD™ memory card, for storage of music, pictures, and other files, and supports optional microSD™ or microSDHC™ memory cards of up to 32GB capacity.

---

**Note:** You can only store music files that you own (from a CD or purchased using the phone) on a memory card.

---

### Installing a Memory Card

1. Remove the battery cover. (For more information, refer to “*Removing the battery cover*” on page 8.)

2. With the gold contacts facing down, carefully slide the memory card into the slot, pushing gently until it clicks into place (1).




3. Install the battery cover. (For more information, refer to “*Installing the battery cover*” on page 12.)

## Removing a Memory Card

---

**Important!** To prevent damage to information stored on the memory card, unmount the card before removing it from the phone.

---

1. From the Home screen, touch  **Menu** → **Settings** → **SD card & phone storage** → **Unmount SD card**.
2. Remove the rear cover. (For more information, refer to “*Removing the battery cover*” on page 8.)
3. Gently press on the memory card, then release so that it pops out from the slot, and carefully pull the card out (2).
4. Install the cover. (For more information, refer to “*Installing the battery cover*” on page 12.)

## Securing Your Phone

By default, the phone locks automatically when the screen times out, or you can lock it manually. You can unlock the phone using one of the default Unlock screens, or for increased security, use a personal screen unlock pattern.

For more information about creating and enabling a Screen unlock pattern, see “*Screen unlock settings*” on page 157.

For other settings related to securing your phone, see “*Location & security*” on page 156.

---

**Note:** Unless stated otherwise, instructions in this User Manual start with the phone unlocked, at the Home screen.

 
---

### Locking the phone manually

- Press the **Power/Lock Key** on the top, right of the phone.


## Unlocking the phone

1. Press the **Power/Lock Key** to wake the screen.
2. Touch and swipe left or right to show the screen that was visible when the phone was locked.

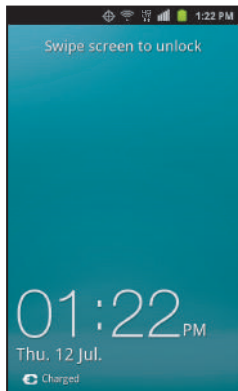

## Unlocking with a Personal Screen Unlock Pattern

 1. Press the **Power/Lock Key** to wake the screen.
2. Draw your personal unlock pattern on the screen.

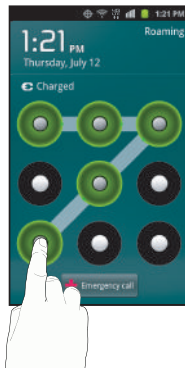

For information on setting a personal unlock pattern, see *"Screen unlock settings"* on page 157.

## Section 2: Understanding Your Phone

---

This section outlines key features of your phone, including keys, displays, and icons.

### Features

- 3.97-inch (800x480 pixel) WVGA AMOLED full-screen touch screen
- High Speed Data [4G LTE, EVDO Rev A, 1X Capable Technology]
- Android platform (2.3)
- Connections
  - 4G LTE
  - Wi-Fi 802.11 b/g/n
  - Portable Wi-Fi Hotspot
  - Bluetooth® 3.0 + HS
- Messaging Services (with slide-out and on-screen QWERTY Keypads)
  - Text Messaging
  - Multimedia Messaging
  - Voice Messaging
  - Email
  - Mobile Instant Messenger (IM)
  - Chat
- 5 Megapixel CMOS Camera-Camcorder, rear-facing;  
1.3 Megapixel CMOS Camera-Camcorder, front-facing
- Picture Gallery, supporting JPEG, PNG, GIF, A-GIF, WBMP, and BMP formats
- Video Player (720x240 pixels), supporting H.263, H.264, MPEG4, 3GP, 3G2 (v9), VC-1, DivX, and XviD formats
- DivX Certified® to play DivX video up to HD 720 pixels
- Music Player, supporting MP3, AAC, and AAC+ formats
- Ringtone and Alert tone support for MP3, WMA, WAV, AAC, AAC+, AMR-NB, AMR-WB, QCELP, EVRC, MIDI, SP-MIDI, OGG, and FLAC formats
- Full-HTML Browser
- Global Positioning (GPS) Technology
- Voice recognition by Nuance®
- Support for microSD™ and microSDHC™ Memory Cards (up to 32 GB capacity) (A 4GB microSDHC Memory Card is included with your phone.)

## Front View



## Features

1. **Earpiece:** Listen to callers.
2. **Menu Key:** Touch to display options for the current screen.
3. **Home Key:** Touch to display the Home screen. Touch and hold to display the **Recent** applications screen.

 
---

**Tip:** From the Recent applications screen, you can launch the Task Manager. (For more information, refer to “*Task manager*” on page 132.)

---

4. **Back Key:** Touch to return to the previous screen or option.
5. **Search Key:** Touch to launch Search, to search your device or the web.
6. **Power / Lock Key:** Press and hold to power your phone on or off, also to restart your phone or place it in Silent mode or Airplane mode. With the phone on, press to lock your phone and blank or waken the display.

## Side Views

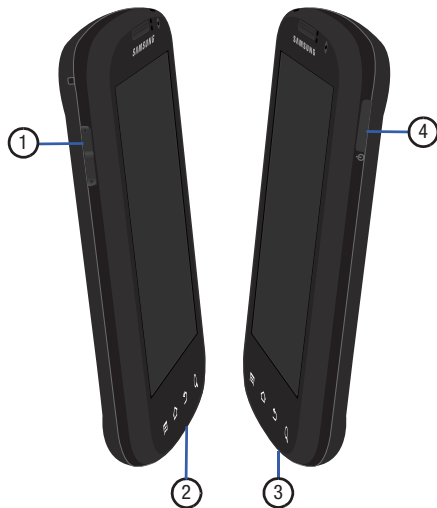

## Features

1. **Volume Key:** From a Home screen, press to adjust Master Volume. During calls or music playback, press to adjust volume. Press to mute the ringtone of an incoming call.
2. **USB Power/Accessory Port:** Plug in a USB cable for charging or to sync music and files.
3. **Microphone:** Passes your voice to other parties in a call. Used when recording voice notes. Passes your voice to Voice Dialer. (For more information, refer to “Voice Dialer” on page 133.)
4. **Power / Lock Key:** Press and hold to power your phone on or off, also to restart your phone or place it in Silent mode or Airplane mode. With the phone on, press to lock your phone and blank or waken the display.



## Open View (Front)

 


## Features

1. **Display:** The image in the Display automatically rotates when you slide open the QWERTY keypad.
2. **Menu Key:** Press to display options for the current screen.
3. **Home Key:** Press to display the Home screen. Press and hold to display the **Recent** applications screen.

4. **Shift Key:** Toggles capitalization between **ABC**, **Abc**, and **abc**.
5. **Fn Key:** Function Key: Toggles the QWERTY keypad keys between their default characters/functions and their alternate symbols/functions.
6. **Messaging Key:** Launches the New Message screen (see “*Messaging*” on page 69).
7. **Browser Key:** Launches the Browser application (see “*Browser*” on page 79).
8. **Space / Smiley Key:** Press to insert space in text. Press Fn-Space to pop-up **Insert smiley** menu.
9. **Period / .com Key:** Inserts a period in a text entry. Press Fn-Period to insert “.com” in a text field.
10. **Arrow (Navigation) Keys:** Left and Right and Up and Down arrow keys let you move through text, highlight icons, menu options, and screen fields.
11. **OK / Next Line Key:** Selects a highlighted icon, shortcut, or menu option. In text entry mode, moves the cursor to a fresh, blank line.
12. **Back Key:** Press to return to the previous screen or option.
13. **Delete Key:** Deletes characters from a text entry.
14. **Search Key:** Press to launch Search, to search your device or the web.

## Back View

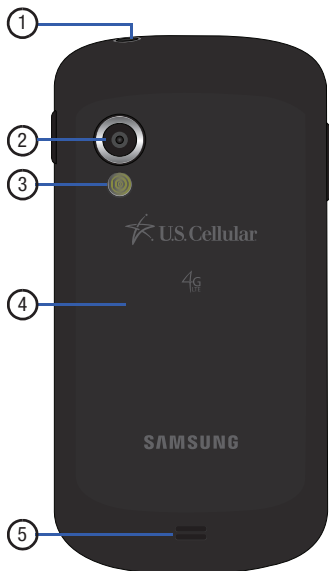

## Features

1. **3.5mm Headset Jack:** Plug in an optional headset or TTY equipment.
2. **Camera Lens:** Used when taking photos or recording videos.
3. **Flash:** Used when taking photos or recording videos in low light conditions.
4. **Back Cover:** Protects the battery and Memory Card slot.
5. **Speaker Grill:** Plays ringtones, call audio when in Speakerphone mode, music and other sounds.

## Touch Screen Display

Your phone's touch screen display is the interface to its features.



## Features

1. **Annunciator Line:** Presents icons to show network status, notifications battery power, and connection details. (For more information, refer to “*Annunciator Line*” on page 27.)
2. **Home screen:** The starting point for using your phone. Place icons, widgets, and other items to customize your phone to your needs. (For more information, refer to “*Home Screen*” on page 31.)
3. **Primary Shortcuts:** Shortcuts to your phone's common features. (For more information, refer to “*Primary Shortcuts*” on page 32.)
4. **Widgets:** Applications that run on a Home screen panel. These widgets are found on this Home screen panel by default. (For more information, refer to “*Adding Widgets to a Home Screen panel*” on page 33.)

5. **Shortcuts:** Shortcuts to applications and folders on your phone. You can add more shortcuts by using the **Add to Home screen** menu. (For more information, refer to “Customizing the Home Screen Panels” on page 32 and For more information, refer to “Adding Shortcuts to a Home Screen panel” on page 35.)

## Display settings

You can customize display settings to your preferences. (For more information, refer to “Display” on page 153.)

## Changing the Screen Orientation

You can manually change the orientation of most of your phone’s screens by opening the QWERTY keypad.

Your SCH-I405 can also automatically change the orientation of some screens. The phone’s built-in accelerometer senses movement and changes a screen’s orientation from portrait to landscape.

---

**Note:** Some screens, especially those for applications and games, do not respond to changes in the phone’s position.

---

## Annunciator Line

The Annunciator line displays icons to show network status, notifications, battery power, and other details.



**Signal Strength:** Current signal strength. The greater the number of bars, the stronger the signal.



**Airplane Mode Active:** All wireless communications are disabled. (See “Airplane mode” on page 143.)



**System Alert:** Check Notifications Panel for alerts.



**Voice Call:** A voice call is in progress.



**Speakerphone:** Speakerphone is enabled.



**Missed Call:** Displays when there is a missed call.



**Battery Level:** Shown fully charged.



**Charging Indicator:** Battery is charging.



**Device Power Critical:** Battery has only three percent power remaining. Charge immediately.



**1X Connection Active:** Phone is active on a 1X system.



**3G Connection Active:** Phone is active on a 3G system.



**4G Connection Active:** Phone is active on a 4G system.



**USB Connected:** The phone is connected to a computer using a USB cable.



**New Voicemail:** You have new voicemail.



**New Email Message:** You have new email.



**Alarm Set:** An alarm is active. (For more information, refer to “Clock” on page 120.)



**Silent mode:** All sounds except media and alarms are silenced. (See “Silent mode” on page 149.)



**Vibrate mode:** All sounds are silenced, but the phone vibrates for alerts. (See “Volume” on page 150.)



**SD Card Ready:** An optional memory card is installed.



**SD Card Removed:** A memory card was uninstalled.



**Bluetooth Active:** Bluetooth is turned on.



**Bluetooth Connected:** The phone is paired with another Bluetooth device.



**Wi-Fi Active:** Wi-Fi is connected, active, and communicating with a Wireless Access Point (WAP).



**Wi-Fi Action Needed:** Action needed to connect to Wireless Access Point (WAP).



**TTY:** TTY Mode is active.

## Navigation

Navigate your phone's features using the command keys and the touch screen.


---

**Warning!** If your handset has a touch screen display, please note that a touch screen responds best to a light touch from the pad of your finger. Using excessive force or a metallic object when pressing on the touch screen may damage the tempered glass surface and void the warranty. (For more information, refer to “*Warranty Information*” on page 197.)

---

## Command Keys


### Menu Key

Touch  **Menu** to display a context-sensitive menu of options for the current screen or feature.

### Home Key

Touch  **Home** to display the Home screen.

### Back Key

Touch  **Back** to return to the previous screen, option or step.

## Search Key

Touch  **Search** to launch Google Search, to search the web.

## Context-sensitive Menus

While using your phone, context-sensitive menus offer options for the feature or screen. To access context-sensitive menus:

- Touch  **Menu**.
- Touch and hold on an item.

## Touch

Touch items to select or launch them. For example:

- Touch the on screen keyboard to enter characters or text.
- Touch a menu item to select it.
- Touch an application's icon to launch the application.

## Touch and Hold

Activate on-screen items by a touch and hold gesture. For example:

- Touch and hold a widget on the home screen to move it.
- Touch and hold on a field to display a pop-up menu of options.

## Sweep

 
To sweep, lightly drag your finger vertically or horizontally across the screen. Use sweep when:

- Unlocking the screen
- Scrolling the Home screen or a menu

## Notification Panel

The Notification Panel shows information about connections, messages and other items.

- Sweep your finger downward from the top of the screen. To close Notification Panel, touch the panel.

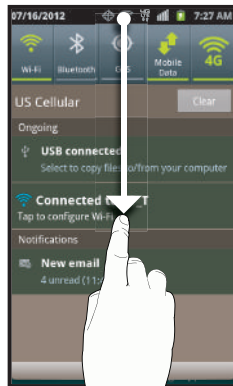

Tap to clear all notifications

Touch a notification to open the related application

Touch/swipe up to close the Notification panel

## Connection Buttons

Buttons at the top of the Notification Panel show connection statuses for **Wi-Fi**, **Bluetooth**, **GPS**, **Mobile Data**, and **4G**. You can enable or disable any of these connections by touching the appropriate button.

## Clearing Notifications

1. Sweep your finger downward from the top of the screen to display the Notifications Panel.
2. Touch **Clear** to clear all notifications.

## Home Screen

The Home screen (see “*Touch Screen Display*” on page 26) is the starting point for using your phone.

---

**Note:** Unless stated otherwise, instructions in this User Manual start with the phone unlocked, at the Home screen.

---



## Extended Home Screen

The Home screen consists of the Home panel, plus 4 panels that extend beyond the display width to provide more space for adding shortcuts, widgets and folders.

Slide your finger horizontally across the screen to scroll to the left or right side panels. As you scroll, the indicator at the top of the display shows your current position.

## Adding and removing Home screen panels

Your phone comes with 5 Home screen panels. You can delete, add, and customize all 5 of the Home screen panels, and set any one panel as Home.

1. Navigate to a Home screen panel, then touch  **Menu**.
2. Touch **Edit page**. An array of thumbnail images of the Home screen panels appears in the display.
3. To remove a panel, touch, hold, and drag the panel image to the **Remove** icon.
4. To add a panel, touch .
5. To set a panel as the Home panel, touch, hold, and drag the panel image to the center (panel 3) position.



## Primary Shortcuts

Primary Shortcuts appear at the bottom of the display. You can edit the Primary Shortcuts, except for the **Applications** / **Home** shortcut.

---

**Note:** When you access **Applications**, the **Home** shortcut replaces the **Applications** shortcut to provide quick return to the Home screen.

---

The default primary shortcuts are:



**Phone:** Launches the Phone, to make calls. (For more information, refer to “*Making Calls*” on page 38.)



**Contacts:** Store and manage your contacts. (For more information, refer to “*Contacts*” on page 59.)



**Messaging:** Send and receive messages. (For more information, refer to “*Messaging*” on page 69.)



**Applications:** Access your phone’s applications. (For more information, refer to “*Accessing Applications*” on page 115.)

## Editing the Primary Shortcuts

1. Touch **Home**, then touch **Applications**.
2. Touch **Menu**, then touch **Edit**.
3. Touch and drag an icon to replace a primary shortcut.
4. When you are finished, touch **Menu**, then touch **Save**.

## Customizing the Home Screen Panels

Customize the Home screen to suit your preferences.

- **Add Widgets:** For more information, refer to “*Adding Widgets to a Home Screen panel*” on page 33.
- **Add Shortcuts:** For more information, refer to “*Adding Shortcuts to a Home Screen panel*” on page 35.
- **Add Folders:** For more information, refer to “*Adding Folders to a Home Screen panel*” on page 36.
- **Change the Wallpaper:** For more information, refer to “*Changing the Wallpaper on a Home Screen panel*” on page 37.

## Adding Widgets to a Home Screen panel

Widgets are self-contained applications that you can place on the Home screen to access favorite features.

1. Navigate to the desired Home screen, then touch and hold on the screen to display the **Add to Home screen** menu.
2. Touch **Widgets**, then touch a selection to add it to the Home screen.

### Widgets



**AccuWeather.com:** Display weather information from AccuWeather.com®.



**Agenda:** Display today's events list.



**Amazon MP3:** Shop for, download, and play MP3 music files from Amazon.com.



**Audible Large:** Download and play audio books from audible.com. (Requires an audible.com account.)



**Audible Medium:** Download and play audio books from audible.com. (Requires an audible.com account.)



**Audible Small:** Download and play audio books from audible.com. (Requires an audible.com account.)



**Daily Perks:** View helpful tips, discounts, local weather, news, and more.



**Dual clock:** Display current times for two selected locations in digital format.



**Google Play Music:** Play music you have added to your music file and any music you copied from your personal computer.



**Google Search:** Add a universal, Web-only, Apps-only, or Contacts-only Google Search bar.



**Google+:** Makes messaging and sharing with your friends a lot easier.



**Home screen tips:** Display tips about the Home screen. Widget appears on the main Home screen panel by default.



**IMDb:** Display information from Amazon.com's IMDb (Internet Movie Database).



**Latitude:** See locations of friends on a map or in a list. Share or hide your own location.



**Media Hub:** Browse, preview, rent/purchase, and play movies and TV shows.



**Picture frame:** Display a picture.



**Play Store:** Browse and download Android applications, books, movies and TV shows, and music.



**Power control:** Set network and power settings.



**Power savings:** Set network and power settings.



**Program Monitor:** Monitor active applications, and running in the background.



**Software update:** Directly access your device software status information and browse and download software updates.



**TeleNav GPS Navigator:** Locate and obtain directions to places of interest surrounding your current, or a given, location.



**TeleNav Search:** Search for location of a place of interest by Address, Business name, or Category.



**TeleNav Traffic:** Obtain and map current traffic information between two specified locations.



**Traffic:** Display traffic information for a particular destination.



**U.S. Cellular® Mobile TV (large):** Watch television shows on your device.



**U.S. Cellular Mobile TV (small):** Watch television shows on your device.



**Yahoo! Finance:** Display financial information from Yahoo!® Finance.



**Yahoo! News:** Display the latest news from Yahoo!® News.



**YouTube:** Directly Access and search YouTube, and record videos for posting on YouTube.

## Removing Widgets

- Touch and hold the Widget until the **Remove** icon appears at the bottom of the Home screen panel, then drag the Widget to the **Remove** icon.

## Adding Shortcuts to a Home Screen panel

Use Shortcuts for quick access to applications or features, such as Email or other applications.

1. Navigate to a Home screen panel, then touch and hold on the screen to display the **Add to Home screen** menu.
2. Touch **Shortcuts**, then touch a selection:
3. Follow the prompts to configure the Shortcut and add it to the Home screen.

### Shortcuts



**Applications:** Launch an application. For a list, see “Applications” on page 115.



**Bookmark:** Launch a bookmarked web page.



**Contact:** View a contact you specify.



**Direct dial:** Automatically call a contact you specify.



**Direct message:** Create a message to a contact you specify.



**Directions & Navigation:** Provides turn-by-turn directions for car, bus, bike, or walking trips. You can also save directions to a particular destination.



**Music Playlist:** Play a selected music playlist.



**Settings:** Go to a specific setting.

### Removing Shortcuts

- Touch and hold the Shortcut until the **Remove** icon appears at the bottom of the Home screen panel, then drag the Shortcut to the **Remove** icon.

## Adding Folders to a Home Screen panel

Place Folders on the Home screen to organize items together on the Home screen.

1. Navigate to the desired Home screen, then touch and hold on the screen to display the **Add to Home screen** menu.
2. Touch **Folders**, then touch a selection to add it to the Home screen:

## Folders



**New folder:** Create a new empty folder.



**All contacts:** Create a folder containing all contacts.



**Contacts with phone numbers:** Create a folder containing contacts with stored phone numbers.



**Received list from Bluetooth:** Create a folder containing a list of items received via Bluetooth.



**Starred contacts:** Create a folder containing contacts marked as Favorites.

## Removing Folders


- Touch and hold the Folder shortcut until the **Remove** icon appears at the bottom of the Home screen panel, then drag the Folder shortcut to the **Remove** icon.

## Changing the Wallpaper on a Home Screen panel

Choose a picture to display in the background of a Home screen panel. You can choose from pre-loaded wallpaper images, or select a picture you've taken with the Camera or downloaded.

1. From a Home screen panel, touch and hold on the screen to display the **Add to Home screen** menu, then touch **Wallpapers**.

— or —

From the Home screen, touch  **Menu**, then touch **Wallpaper**.

2. Choose a source for images:
  - **Gallery:** Access the Gallery to choose a picture from an optional installed memory card. Touch a picture to select it, then use the crop tool to resize the picture, if desired. Touch **Save** to save the picture as wallpaper.
  - **Live wallpapers:** Choose from pre-loaded animated wallpaper images. Touch a wallpaper, then touch **Set wallpaper**.
  - **Wallpaper gallery:** Choose from pre-loaded wallpaper images. Touch a wallpaper, then touch **Set wallpaper**.

## Adding Applications to a Home Screen panel

You can add shortcuts to applications to a Home screen panel, for quick access to the application.

1. Navigate to a Home screen panel.
2. Touch **Applications**. (For a list of Application icons, see “Applications” on page 115.)
3. Touch and hold on an application icon. The Shortcut icon is automatically placed on the selected Home screen panel.

## Removing Applications

- Touch and hold the Application shortcut until the **Remove** icon appears at the bottom of the Home screen panel, then drag the Application shortcut to the **Remove** icon.

## Section 3: Call Functions

---


This section describes how to make, answer or end calls.

### Making Calls


Your phone offers multiple ways to make calls:

- Use the touch screen **Keypad** to enter a telephone or speed dial number.
- Use the **QWERTY keypad** to enter a telephone or speed dial number.
- Call a contact from **Contacts**.
- Speed dial using **Favorites**.
- Return a call, or call a recent caller via the **Call log**.
- Voice dial with **Voice Commands**.

### Making Calls Using the Phone Dialer


1. From a Home screen panel, touch  **Phone**.
2. Touch the digits of the telephone or speed dial number on the **Keypad** screen.

While dialing, touch  **Menu**, then use these options:

- Touch **Add to Contacts** to save the dialed number for reuse. (For more information, refer to “*Creating Contacts from the Phone Dialer*” on page 60.)
  - Touch **Speed dial setting** to dial or set Speed Dials. (For more information, refer to “*Speed Dials*” on page 68.)
  - Touch **Add 2 sec pause** to insert a 2-second pause in the telephone number.
  - Touch **Add wait** to insert a Wait pause in the telephone number, to pause dialing to wait for input from you.
3. Touch  **Call**.

## Dialing Emergency Numbers

When you call an Emergency Number, such as 911, your phone locks itself in emergency mode, only allowing you to make calls to the emergency call center you originally contacted. This enables emergency operators to more easily dispatch aid, such as police, fire fighting, and emergency medical personnel.

1. From a Home screen panel, touch **Phone**. The **Keypad** screen appears in the display.
2. Enter **911**.
3. To place the call, touch .

---

**Important!** Emergency number 911 is preset into your phone.

If you call 911, an Emergency Call prompt appears in the display for the duration of the call.

In a crisis situation, you can aid emergency personnel in finding you by setting **Emergency tone** to **Alert** or **Vibrate**. (For more information, refer to “*Emergency tone*” on page 152.)

---

---

**Important!** Because of various transmission methods, network parameters, and user settings necessary to complete a call from your wireless phone, a connection cannot always be guaranteed. Therefore, emergency calling may not be available on all wireless networks at all times.

---

---

**Important!** DO NOT depend on this phone as a primary method of calling 911 or for any other essential or emergency communications.

---

---

**Note:** You can specify other numbers than 911 as emergency numbers using the **Emergency #** settings. (For more information, refer to “*Emergency Number*” on page 149.)


---



## Making Calls from Contacts

A contact is an entry that you have created to store the name, numbers, and other information for people or groups of interest.

(For more information, refer to “*Contacts*” on page 59.)

1. From a Home screen, touch  **Contacts**.
2. Find the contact and touch it to open the Contact entry.
3. Touch **Call** to dial the default number for the Contact.

## Making Calls using Favorites

Favorites are contacts that you designate as favorites by starring them. (For more information about creating favorites, see “*Favorites*” on page 64.)

1. From a Home screen, touch **Phone → Favorites** to display favorites.
2. Find the contact and touch it to open the Contact entry.
3. Touch **Call** to dial the default number for the Contact.


## Making Calls using Voice Dialer

Call a contact or telephone number by speaking the name or number.

---

**Note:** Voice Dialer is a voice recognition application you can use to make calls, and to launch other phone features.

---

1. From the Home screen, touch  **Applications → Voice Dialer**.
2. The phone displays “**Listening**” and prompts you to speak a command. Follow the voice prompts or touch an on-screen option. Select or speak the following command:
  - **Call <Name>**: Call an entry in your Contacts list.
  - **Dial <Number>**: Call a spoken phone number.

## Making Calls from Call Log


Return a call, or call a number from a recent call stored in Call log. (For more information about Call log, see “*Call Log*” on page 43.)

1. From the Home screen, touch **Phone** → **Call log** to display recent calls.
2. Find and touch a call, then touch **Call** to dial the number.

## Three-Way Calling


Merge two calls to set up a three-way call between you and two other parties.

### Setting up a Multi-Party Call

1. Establish a call, either by dialing or answering an incoming call.
2. Touch **Add Call**. The first call is placed on hold, and the **Keypad** displays.
3. Enter the second phone number, then touch .
4. Touch **Merge calls**. The two calls are joined into one, 3-way call.

## Answering Calls

To answer an incoming call:


- On the Incoming call screen, touch and drag  to the right.

## Sending Calls to Voicemail

When your phone alerts you to an incoming call, you can ignore the call by rejecting it to send the caller to voice mail, or reject the call and send a message to the caller.

### Rejecting a call

When you reject a call, the caller is directed to leave a voice mail.

- On the Incoming call screen, touch and drag . The caller is directed to leave a voice mail.

## Rejecting a call with a message

You can reject an incoming call by sending the caller a text message. You can create a new message, or choose a message you previously created. (For more information about creating reject messages, see *“Ignore with message”* on page 147.)

- On the Incoming call screen, touch and drag **Reject call with message** upward, then touch a pre-composed message or touch **Create new message** to enter new text.

## Answering Call-Waiting Calls

When you receive a call while on a call, the following options are available:

- Touch and drag **Answer** to answer the incoming call. The original call is placed on hold, and remains on hold until you end the second call, or swap calls back to the original call.
  - You can join the two calls into one, 3-way call by touching **Merge**.
- Touch **Swap** to place the second call on hold and return to the original call.

## In-Call Options



While in a call, you can use these features:

- **Dialpad**: Display a dialpad to enter numbers.
- **End call**: End the phone call.
- **Add call**: Display the Phone Dialer to set up a multi-party call.
- **Speaker**: Enable or disable speakerphone.
- **Mute**: Mute or unmute your voice on the call.
- **Bluetooth**: Switch the call audio to a Bluetooth headset.

## Silencing an Incoming Call Ringtone

When your phone alerts you to an incoming call, you can silence the ringtone for the call by pressing the **Volume Key** down.

## Ending a Call

1. Press  **Power/Lock**. The In-Call screen appears.
2. Touch  **End call**.

## Call Log

When you place, answer, or miss a call, a record of the call is saved in the Call log.

### Accessing Call Log

- From the Home screen, touch **Phone** → **Call log**.

### Making Calls using Call Log

Return a call, or call a number from a recent call stored in Call log. (For more information, refer to “*Making Calls from Call Log*” on page 41.)

### Sending Messages using Call Log

1. From the Home screen, touch **Phone** → **Call log**.
2. Touch a call record to display details.
3. Touch **Send message** to create a new message, with the phone number entered in the **To** list.
4. Continue composing the message, as desired. (For more information, refer to “*Creating and Sending Messages*” on page 69.)

## Creating or Updating Contacts Using Call Log


1. From the Home screen, touch **Phone** → **Call log**.
2. Touch the desired call record to display details.
3. Touch **Create contact** or **Update existing**.
4. Continue entering contact information. (For more information, refer to “*Contacts*” on page 59.)

## Managing the Call Log


### Deleting a Single Call log record

1. From the Home screen, touch **Phone** → **Call log**.
2. Touch and hold on the call record to be deleted.
3. From the pop-up menu, touch **Delete**.

### Deleting Multiple Call log records


1. From the Home screen, touch **Phone** → **Call log**.
2. While viewing the Call log, touch  **Menu**, then select **Delete**.
3. Touch call records to mark them for deletion, or touch **Select all**. A check appears in the check box to show marked records.
4. Touch **Delete** to delete marked records.

## Filtering Call log records

1. From the Home screen, touch **Phone** → **Call log**.
2. While viewing the Call log, touch  **Menu**, then select **View by**.
3. Select a filter type, from **All calls**, **Missed calls**, **Dialed calls**, or **Received calls**.

## Viewing call durations

View the length of the Last call, all Dialed calls, all Received calls, and All calls. Also, view the amount of data transferred in data calls as All data, Sent data, and Received data.

1. From the Home screen, touch **Phone** → **Call log**.
2. While viewing the Call log, touch  **Menu** → **Call duration**. The **View call timer** screen appears.

## Voicemail

All unanswered calls to your phone are sent to voicemail, even if your phone is turned off, so you'll want to set up your voicemail and personal greeting as soon as you activate your phone.

### Setting up Voicemail

1. From the Home screen, touch **Phone**, then touch and hold speed dial 1.
2. Follow the automated instructions to set up your new password and record a greeting.

### Checking Voicemail

1. From the Home screen, touch **Phone**, then touch and hold speed dial 1.
2. Follow the automated instructions to listen to messages and manage your voicemail.

---

**Tip:** You can also access **Voicemail** by dialing your phone number from any touch-tone phone.

---

## Ignoring Calls

You can ignore an incoming call, allowing it to role over to voice mail, sending it directly to voice mail, or sending the caller a text message.

### Rolling a call over to voice mail


- When a call is incoming, allow your phone to ring until it rolls the incoming call to voice mail.

---

**Note:** You can temporarily silence the ringer by pressing the **Volume** key (on the left side of your phone). (For more information, refer to “*Side Views*” on page 23.)

---

### Sending a call directly to voice mail

- When a call is incoming, touch and drag . The caller is prompted to leave a voice mail.

### Rejecting a call with a message

- When a call is incoming, touch and drag **Reject call with message** upward.

## Section 4: Entering Text

This section describes how to enter words, letters, punctuation, and numbers when you need to enter text. Your phone provides both sliding and screen QWERTY keyboards to support quick and easy text input.

 
- **Sliding keypad**



- **Screen keypad, landscape**



- **Screen keypad, portrait**

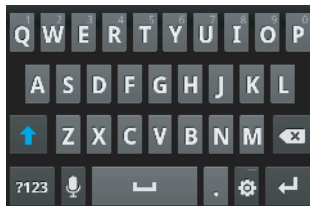

### Using the Sliding QWERTY Keypad

You access the sliding keypad by sliding it from beneath the body of the phone. (For more information, refer to “*Open View (Front)*” on page 24.)

The keys are labeled with a letter or number on the lower half and a symbol on the upper half.

### Entering Upper and Lower Case Letters

The default case is initial capital case (Abc). Enter upper and lower case alphabet letters by pressing the **Shift** key to toggle the case, before pressing the letter key(s).

- Press once to toggle from abc to Abc mode.
- Press a second time to toggle to ABC mode.
- Press a third time to toggle to abc mode.

## Entering Numbers and Symbols

The default entry mode is initial capital case (Abc). Enter symbols by pressing the **Fn** key to toggle the entry mode, before pressing the key(s) corresponding to the number(s) or symbol(s) you want to enter.

- Press once to enter a single number or symbol.
- Press a second time to enter a string of numbers and/or symbols.
- Press a third time to return to abc or ABC mode.

---

**Tip:** For more information, refer to “*Open View (Front)*” on page 24.

---

## Screen QWERTY Keyboards

Your phone provides screen QWERTY keyboards for text entry. Touching the keyboard on the screen enters letters, punctuation, numbers, and other characters into text entry fields or applications. Access a screen keyboard by touching any text entry field.

The screen QWERTY keyboards appear at the bottom of the screen. By default, when you rotate the phone, the screen orientation updates to keep the keyboard at the bottom of the screen.





## Screen Keyboard Types

Your phone offers two screen QWERTY keyboards:

- **Samsung Keypad** (default): Use the Samsung Keypad to enter text by touching keys on the screen. The Samsung Keypad includes predictive text. You can also use XT9 predictive text and, with the screen in portrait mode, you can use a 3x4 phone style keypad.
- **Swype**: Use the Swype keyboard to enter words by gliding your finger over the virtual QWERTY keyboard, lifting your finger between words. You can also touch individual keys or use Swype Word Prediction or Voice Recognition.

## Changing the Keyboard Type

When entering text, you can select the type of virtual keyboard you wish to use.

- Touch and hold on a text input field, then select a keyboard type:
  - **Samsung keypad**
  - **Swype**

## Using the Samsung Keypad

The Samsung Keypad is a custom screen QWERTY keyboard, featuring predictive text and handwriting recognition. Input characters by touching the on-screen keys with your finger, or trace characters on the screen with your finger.

As you enter characters, predictive text matches your key touches to common words and displays them. Select a word from the display to insert it into your text.



## Configuring the Samsung Keypad

Configure the Samsung Keypad to your preferences.

- While entering text, touch . The **Samsung keypad settings** screen appears in the display.
- For more information, refer to “*Samsung keypad*” on page 168.

## Changing the Text Input Mode - Keypad


There are two main keypad layout keys that will change the on-screen keys within the QWERTY keypad.

The available Text Input modes are: **Sym** and **Abc**.



**Symbol/Numeric Mode:** activates the number, symbol, and emoticon keys.













**Abc Mode:** activates the default alphabet keys. Can also be set to **ABC** or **abc** by using the shift key (.

---

**Note:** When in **Abc** mode, the **?123** key appears. When in **Symbol/Numeric** mode, the **ABC** key appears.

---

## Using Abc Mode

1. If desired, rotate your phone counterclockwise to Landscape orientation.
2. Touch a text input field. The Samsung screen keypad appears in ABC mode.
3. Touch the desired alphabetic characters.
4. To change capitalization to the Abc mode, touch the shift key (). The shift key () will change to .
5. After typing the first letter, the shift key () will change to  and additional letters will be lowercase.
6. Touch  once to input another upper-case letter or touch and hold  to switch to ABC mode. The shift key will change to  in ABC mode. Any additional letters will be uppercase, until you touch the shift key () again.
7. Touch **Send** to send the message, or touch  for more options. (For more information, refer to “*Creating and Sending Messages*” on page 69.)

## Using Symbol/Numeric Mode

Use Symbol/Numeric Mode to add numbers, symbols, or emoticons.


1. On the Samsung Keypad screen, touch **?123** at the bottom of the screen. The following screen appears in the display:



2. Touch the desired number, symbol, or emoticon characters.
3. Touch **1/3** repeatedly to cycle through additional symbol sets.
4. Touch **ABC** to return to Abc mode.

## Using XT9 Predictive Text

XT9 is a predictive text system that has next-letter prediction and regional error correction, which compensates for users pressing the wrong keys on QWERTY keyboards.


1. Rotate your phone counterclockwise to a Landscape orientation.
2. Touch  at the bottom of the screen. The **Samsung keypad settings** screen displays.
3. Touch the **XT9** field. A green check mark will appear next to the field.
4. Touch the **XT9 advanced settings** field to modify XT9 associated settings. (For more information, refer to “*Samsung keypad*” on page 168.)

---

**Note:** The **XT9** option is available only when Abc mode has been selected.

---

5. Begin typing a word. A list of word options is displayed. Touch one of the words to replace the word that has already been typed.

6. Continue typing your message. Touch **Send** to send the message, or touch  for more options. (For more information, refer to “*Creating and Sending Messages*” on page 69.)

## Using the Swype Keyboard

The Swype Keyboard offers a new way to enter text on touch screens. Instead of touching each key, use your finger to trace over each letter of a word. For each word, place your finger on the first letter and glide to the subsequent letters, lifting on the last letter.

This example shows how to enter the word “this”. Put your finger down on the “t”, and without lifting, glide it to the “h”, then to the “i” then over to the “s”.




Here are a few tips to get you started:

- **Spacing is automatic:** When you finish a word, just lift your finger and start the next word.
- **Double letters:** Just “scribble” on the key.

- **Capitalization:** Swype recognizes and capitalizes the first word of sentences. If you want to capitalize a word that isn't at the beginning of a sentence, just glide above the keyboard before gliding over the next letter.
- **Contractions:** Swype recognizes most words that include an apostrophe; just swype the letters of the word, including the apostrophe.
- **Punctuation:** Touch and hold a key to view a punctuation menu and make a selection.
- **Accented characters:** Just glide through the letters of the word. Swype usually recognizes the word and correctly accents the letters.
- **Error correction:** If you make a mistake, double-touch on the word you want to change.

## Configuring Swype

Configure Swype to your preferences.

- While entering text, touch and hold  **Swype** → **Preferences**.
- For more information, refer to “Swype” on page 167.

 
## Swype Help

While entering text, you can get tips and help about using Swype.

- Touch and hold  **Swype** → **How to Swype** for an interactive tutorial.


## Entering Symbols and Numbers

Using the Swype Keyboard:

- Touch and hold on a key to enter the symbol or number at the top of the key.
- Touch and hold on a key until a menu of all characters available on that key appears, then touch a character to enter it.
- Touch  **Symbol** to switch to Symbol mode, then touch a key.

## Using the Numeric Keyboard

 Switch to a Numeric Keyboard, to quickly enter numbers and mathematical operators:

- Touch and hold  **Symbol.**

From the Numeric Keyboard, you can switch to an Alphanumeric Keyboard:

- Touch  **ABC.**

## Editing Keyboard

The Editing Keyboard provides a quick way to move the cursor and highlight text. If the application in which you are working supports editing, you can cut, copy or paste highlighted text.

To access the Editing Keyboard:

- Touch and hold .

## Using Swype Speech Recognition

Enter text by speaking. Swype recognizes your speech and enters text for you.

To use Swype Speech Recognition:

- Touch  **Speech Recognition.**

## Section 5: Accounts and Contacts

---

This section explains how to manage your accounts and contacts.

### Accounts

Your phone provides the ability to synchronize information from a variety of accounts, including Google, a Microsoft Exchange® server and Web interface, and social networking sites such as Facebook and Twitter. With synchronization, you can ensure that information on your phone is updated with any information that changes in your accounts, including Contacts information.

---

**Note:** You must register your phone with your social network site before using the phone to access and or synchronize with the site.

---

With Microsoft Exchange and Google accounts you can synchronize Calendar events as well as Contacts.




---

**Tip:** For more information on setting up your email, contact U.S. Cellular® and your email Service Provider.



---

For information about setting up other, non-synchronized email accounts, see “*Configuring Email Accounts*” on page 74.

### Adding a Google account

1. Touch  **Home** →  **Menu** → **Settings** → **Accounts & sync**.
2. Touch **Add account** →  **Google**.
3. At the **Add a Google Account** screen, touch **Next** to begin, then touch an option:
  - **Create:** Follow the prompts to create a new account.
  - **Sign in:** Enter your Google **Username** and **Password**, then touch **Sign In**.
4. The phone communicates with the Google server to set up your account. When complete, your Google account appears in the **Manage accounts** area of the **Accounts & sync** screen.

## Managing a Google account

1. Touch  **Home** →  **Menu** → **Settings** → **Accounts & sync**.
2. Touch your Google account to show the **Data & synchronization** menu.
3. Touch a setting to enable or disable synchronization. When enabled, a check mark becomes highlighted in the check box:
  - **Sync Instant Upload:** When enabled, synchronizes your Google books with your phone.
  - **Sync Picasa Web Albums:** When enabled, synchronizes your Picasa Web Album photos with the Gallery on your phone.
  - **Sync Books:** When enabled, synchronizes your Google books with your phone.
  - **Sync Contacts:** When enabled, synchronizes your Google contacts with your phone's Contacts.
  - **Sync Gmail:** When enabled, synchronizes your Gmail messages on your phone.
  - **Sync Calendar:** When enabled, synchronizes your Google calendar with your phone.




## Adding a Microsoft Exchange® account

The **Corporate** option lets you directly access a Microsoft Exchange server account.

---

**Note:** Before adding a Microsoft Exchange account, obtain the exact server Exchange Domain name from your company's Network Support.



---

1. Touch  **Home** →  **Menu** → **Settings** → **Accounts & sync**.
2. Touch **Add account** →  **Microsoft Exchange ActiveSync**.
3. At the **Add Exchange account** screen, enter your **Email address** and **Password**, touch **Done**, then touch **Next**. The phone begins retrieving your account information.
4. At the **Exchange server settings** screen, enter /change the server settings, then touch **Next**. The phone communicates with the server to confirm your account.
5. At the **Account options** screen, select account settings, then touch **Next**.



6. At the **Set up email** screen, enter a name for the account (this name will display on screen). Touch **Done** to complete set-up.
7. Your Corporate account appears in the **Manage accounts** area of the **Accounts & sync** screen, and in the Email application.

## Managing a Microsoft Exchange account

1. Touch  **Home** →  **Menu** → **Settings** → **Accounts & sync**.
2. Touch your Exchange account to display settings, then touch **Account settings** for these settings:
  - **General settings**
    - **Account name:** Enter a name to identify the account.
    - **Add signature:** When active, adds pre-composed signature text to send messages.
    - **Signature:** Enter or change signature text.
    - **Default account:** When active, sends email from this account by default.
    - **Always Cc/Bcc myself:** Adds your email address to None of send email messages or to Cc or Bcc field of send email messages.
  - **Exchange ActiveSync settings**
    - **Period to synch email:** Choose a time period to determine how many days' email messages to synchronize.
    - **Empty server trash:** Removes deleted messages from the email server's trash folder.

- **Sync schedule:** Choose a frequency for the phone to check the server for new email messages.
- **Out of office settings:** Select whether to send a pre-composed message to originators of Internal and/or External email messages.
- **Period to sync Calendar:** Choose a time period to determine how many Calendar days' to synchronize.
- **Size to retrieve emails:** Select how much of each incoming email message (in Kilobytes or All) to initially download from the email server.
- **Security options:** Set advanced email security options (encryption, sign, S/MIME certificate, types of email message contents to accept or reject).
- **In case if sync conflict:** Assign the main source of emails. If there is a conflict with the current email sync you can assign the server as the main source for all emails (**Update to phone**) or assign the phone to be the main source and update the server accordingly (**Update to server**).

- **Auto resend times:** Select how many times your phone will automatically attempt to resend messages before notifying you of a problem (No limit, 1 time, 3 times, 5 times, 7 times, or 10 times).

#### • Notification settings

- **Email notifications:** Enable or disable display of a new email icon in the Annunciator line when new mail arrives.
- **Select ringtone:** Assign a ringtone for new email notifications.
- **Vibration:** Enable or disable vibration with new email notifications.

#### • Server settings

- **Incoming settings:** Modify settings for accessing the email server for incoming email messages.
- **Sync Contacts:** When active, synchronizes your Exchange contacts with your phone's Contacts.
- **Sync Calendar:** When active, synchronizes your Exchange calendar with your phone's calendar.
- **Sync Task:** When active, synchronizes your Exchange task list with your phone's task list.




- **Common settings**

- **Split view mode:** When enabled, rotating the handset to landscape mode shows both the email folder contents and a selected message.

## **Adding a Facebook account**

When you add a Facebook account, you can merge and synchronize your Facebook contacts, and messages to the phone.




Once you synchronize your Facebook account you can view messages sent and received from contacts, as well as History and other activities, see “*History*” on page 67.

1. Touch  **Home** →  **Menu** → **Settings** → **Accounts & sync** → **Add account** →  **Facebook**.
2. Enter your Email and Password, then touch **Log in**.
3. Follow the prompts to complete the set-up.

## **Adding a Twitter account**

When you add a Twitter account, you can merge and synchronize your Twitter contacts, and messages to the phone.

Once you synchronize your Twitter account you can view messages sent and received from contacts, as well as History and other activities, see “*History*” on page 67.

1. Touch  **Home** →  **Menu** → **Settings** → **Accounts & sync** → **Add account** →  **Twitter**.
2. Enter your Email and Password, then touch **Log in**.
3. Follow the prompts to complete the set-up.







## **Adding other Email accounts**

You can configure your phone to access public and private Email accounts not supported by the Accounts & sync settings.






For more information, refer to “*Email*” on page 74.





## Contacts

To access Contacts:

- Touch  **Home** →  **Contacts** →  .
- or –
- Touch  **Home** →  **Phone** →  .

## Creating Contacts

1. Touch  **Home** →  **Contacts** →  →  .
2. Select a storage location: **Phone**, **Google**, or **Microsoft Exchange Account** (such as personal or business email).
3. Touch the Add Photo box to choose a picture to identify the contact. (For more information, refer to “*Gallery*” on page 103.)
4. Touch the **First name** and **Last name** fields then enter a name for the contact using the displayed keypad. After entering a last name, touch  to enter a Name prefix, Middle name, Name suffix, Phonetic given name, Phonetic middle name, or Phonetic family name.
5. Touch the image icon (next to the **First name** and **Last name**) and select a photo for this contact. Selections are: **Album**, or **Take photo**.

6. Touch **Phone number** to enter a phone number, then touch the label button (for example, **Mobile**) to choose a label from **Home**, **Mobile**, **Work**, **Work Fax**, **Pager**, **Other**, or **Custom** to create a custom label.
  - Touch and hold  on the QWERTY keyboard to remove a previously entered phone number.
  - Touch  to enter an additional phone number
  - Touch  to remove a previously entered phone number.
7. Touch **Email address** to enter an email address, then touch the label button (for example, **Work**) to choose a label from **Work**, **Home**, **Mobile**, **Other**, or **Custom** to create a custom label. To add another address, touch  .
8. Touch **Instant msg.** to enter an instant message address, then touch the label button to choose a label, from **Google Talk**, **AIM**, **Windows Live**, **Yahoo!**, **Skype**, **QQ**, **ICQ**, **Jabber**, or **Custom** to create a custom label. To add another IM, touch  .

9. Enter additional information such as: **Groups**, **Ringtone**, **Postal address**, **Organization** or **More** fields to input additional category information.

- Touch **Groups** to assign the contact to a group. (For more information, refer to “*Groups*” on page 65.)
- The **More** field contains the following options: Notes, Nickname, Website, Internet call, Birthday, and Anniversary.
- Use your finger to slide the page up or down to see additional fields and categories.



10. Touch **Save** to complete and store the new entry.

### Creating Contacts from Call log

Save a phone number from a recent call record to create a new contact, or update an existing contact. (For more information, refer to “*Creating or Updating Contacts Using Call Log*” on page 43.)





### Creating Contacts from the Phone Dialer

Enter a phone number with the Phone Dialer keypad, then save it.

1. Touch  **Home** →  **Phone**.
2. Touch the digits of the phone number on the keypad.
3. Touch **Add to Contacts**, then select **Create contact** from the pop-up menu.
4. Continue entering contact information. (For more information, refer to “*Creating Contacts*” on page 59.)



### Updating Contacts

Make changes to update an existing contact.

1. Touch  **Home** →  **Contacts** →  **Contacts**.
2. Touch a contact to view its information, then touch  **Menu** → **Edit**.  
– or –  
Touch and hold on a contact, then select **Edit** from the pop-up menu.
3. Continue entering contact information. (For more information, refer to “*Creating Contacts*” on page 59.)

## Updating Contacts from the Phone Dialer

Enter a phone number with the Phone Dialer keypad, then save it.

1. Touch  **Home** →  **Phone**.
2. Touch the digits of the phone number on the keypad.
3. Touch **Add to Contacts**, then select **Update existing** from the pop-up menu.
4. Select a contact to update, then touch **Save**, or continue entering contact information. (For more information, refer to “*Creating Contacts*” on page 59.)






## Updating Contacts from Call log

Save a phone number from a recent call record to create a new contact, or update an existing contact. (For more information, refer to “*Creating or Updating Contacts Using Call Log*” on page 43.)





## Get Friends

Use the Get Friends feature to sync with your accounts. You can choose from an account you’ve already set up on your phone, or set up a new account.

(For more information about setting up accounts on your phone, see “*Accounts*” on page 54.)

1. Touch  **Home** →  **Contacts** → .
2. Touch  **Menu** → **Get friends**.
3. Touch **Add Account**, then touch an account.
4. Touch  **Menu** → **Sync now**.

## Contacts Display Options

1. Touch  **Home** →  **Contacts** →  .
2. Touch  **Menu** → **More** → **Display options** to set these options:
  - Touch **Only contacts with phones** to restrict display to contacts with phone numbers.
  - **Sort by**: Choose to list your Contacts alphabetically by their First name or Last name.
  - **Display contacts by**: Choose to display your Contacts First name first or Last name first.
  - Touch **Phone** to choose contacts for display by group.
  - Touch an account to choose display categories.
3. Touch **Done** to save options.

## Linked Contacts

Your phone can synchronize with multiple accounts, including Google, Microsoft Exchange, and other email providers, plus social networking sites like Facebook and Twitter. When you synchronize contacts from these accounts with your phone, you may have multiple contacts for one person.





Linking imported contact records to a phone contact allows you to see all the contact's numbers and addresses together in one Contact entry. Linking also helps you keep your contacts updated, because any changes that your contacts make to their information in the respective accounts is automatically updated the next time you synchronize with the account.

---




**Note:** Phone contacts are always the primary contact for linking. You can link imported contacts to a Phone contact, but the Phone contact will always display; the imported contact will show as the linked contact.

---

## Joining contacts

1. Touch  **Home** →  **Contacts** →  .
2. Touch a contact to display its information.
3. Touch  **Menu** → **Join contact**.
4. Touch another contact record to join it to the selected contact.

## Separating joined contacts

1. Touch  **Home** →  **Contacts** →  .
2. Touch a contact to display its information.
3. Touch the **Joined Contacts** field to display joined contacts.
4. Touch a contact to separate it.

## Sending Namecards






You can send a contact's information as a namecard over a Bluetooth connection to another Bluetooth device, or as an attachment to a Gmail message.

---

**Important!** Not all Bluetooth devices will accept contact information. Check the target device's documentation.

---

## Sending a Namecard

1. Touch  **Home** →  **Contacts** →  .
2. Touch a contact to display its information.
3. Touch  **Menu** → **Send via**.
4. At the prompt, choose a sending method, then follow the prompts to send the namecard:
  - **Bluetooth:** For more information, refer to “*Bluetooth*” on page 111.
  - **Email:** This option appears only if you define an Email account to your phone using  **Email**. (For more information, refer to “*Composing and Sending Email*” on page 76 and “*Email*” on page 74.)
  - **Gmail:** For more information, refer to “*Composing and Sending Gmail*” on page 73.







## Exporting and Importing Contacts

You can send multiple contacts' information as namecards over Bluetooth connections to other Bluetooth devices, or as attachments to Email or Gmail messages.

---

**Important!** Not all Bluetooth devices will accept contacts, and of those that do, not all devices support transfers of multiple contacts. Check the target device's documentation.

---




1. Touch  **Home** →  **Contacts** → .
2. Touch  **Menu** → **Import/Export** → **Send namecard via**.
3. Touch contacts to mark them for sending, or touch **Select all** to mark all contacts. A check mark appears in the check box for marked contacts.
4. Touch **Send**.
5. Follow the prompts to send the namecards. (For more information, refer to “*Sending Namecards*” on page 63.)

## Favorites

Mark existing contacts with a star to identify them as Favorites.

Favorites display on the Favorites tab in the Phone keypad, for fast dialing or messaging, and are indicated by the ★ in Contacts.

### Creating Favorites

1. Touch  **Home** →  **Contacts** → .
2. Touch and hold on a contact, then select **Add to Favorites** from the pop-up menu.






– or –

Touch a contact to display it, then touch the ★ **Star** at the top right of the screen.

## My Profile






My profile is your own contact record. You can send My profile as a vCard via Bluetooth or as an attachment via Gmail.

### Viewing My Profile

1. Touch  **Home** →  **Contacts** →  .
2. Touch  **Menu** → **My profile** to display your contact information.
3. To add information to your profile, touch  **Menu** → **Edit**. (For more information, refer to “*Creating Contacts*” on page 59.)

### Sending My Profile

You can send My Profile as a vCard via Bluetooth to other Bluetooth devices, or as an attachment to a Gmail.

1. Touch  **Home** →  **Contacts** →  .
2. Touch  **Menu** → **My profile** to display your contact information.
3. Touch  **Menu** → **Send namecard via**.

4. Choose a sending method, **Bluetooth**, **Gmail**, or **Email**, then follow the prompts to send the profile. (For more information, refer to “*Sending Namecards*” on page 63.)

## Groups

Assign Contacts to Groups to make searching for contacts faster, or to quickly call or send messages to group members.

---




**Note:** You can assign only those Contacts saved to your Phone to Groups.

---




### Accessing Groups

- Touch  **Home** →  **Contacts** → **Groups**.




### Creating a New Group

1. Touch  **Home** →  **Contacts** → **Groups**.
2. Touch  **Menu** → **Create**.
3. Touch the **Group name** field to enter a Group name.
4. Touch **Ringtone** to choose a ringtone for calls from members of this group. Touch **Default Ringtone**, **Sound**, or **Phone Ringtone** to select a new ringtone.
5. Touch **Save** to save the new group.

## Editing a Group

1. Touch  **Home** →  **Contacts** → **Groups**.
2. Touch a Group to display it.
3. Touch  **Menu** → **Edit group**.
4. Touch the **Group Name** field to change the Group Name.
5. Touch **Ringtone** to choose a ringtone for calls from members of this group. Touch **Default ringtone**, **Sound**, or **Phone ringtone** to select a new ringtone.
6. Touch **Save** to save the changes.

## Deleting a Group




1. Touch  **Home** →  **Contacts** → **Groups**.
2. Touch  **Menu** → **Delete**.
3. Touch a group to mark it for deletion, or touch **Select all** to mark all groups. When selected, a check mark appears in the check box.
4. Touch **Delete** to delete the selected group(s).
5. Touch **Group only** or **Group and group members**.

## Adding Contacts to a Group

---

**Tip:** You can also add a contact to a group when you create the contact. (For more information, refer to “*Creating Contacts*” on page 59.)

---




1. Touch  **Home** →  **Contacts** → **Groups**.
2. Touch a Group to display it, then touch .
3. Touch contact(s) to mark them for addition, or touch **Select all** to mark all contacts. When selected, a check mark appears in the check box.
4. Touch **Add** to add the selected contact(s).

## Removing Contacts from a Group

---




**Tip:** You can also add a contact to a group when you edit the contact. (For more information, refer to “*Updating Contacts*” on page 60.)

---

1. Touch  **Home** →  **Contacts** → **Groups**.
2. Touch a **Group** to display it.
3. Touch  **Menu** → **Remove member**.




4. Touch contact(s) to mark them for removal, or touch **Select all** to mark all contacts. When selected, a check mark appears in the check box.
5. Touch **Remove** to delete the selected contact(s) from the Group.

### ***Sending a Message to Group Members***

1. Touch  **Home** →  **Contacts** → **Groups**.
2. Touch a **Group** to display it.
3. Touch  **Menu** → **Send message**.
4. Touch contacts to mark them as recipients for the new message, then touch **Send**.
5. The new message opens, with the marked contacts as recipients. Continue creating the message, as desired. (For more information, refer to “*Creating and Sending Messages*” on page 69.)

## **History**

History displays all calls, messages, emails, IMs, Facebook, and Twitter messages sent and received from your Contacts.

1. Touch  **Home** →  **Contacts** → **History**.
2. A list of calls, messages and emails displays, sorted by time, with most recent first.
3. Touch  **Menu** for these options:
  - **Delete**: Erase history records.
  - **View by**: Filter records by type. Choose from **Call**, **Message**, **Facebook**, or **Twitter**.

## **Activities**

Use Activities to view updates to Contacts from your social networking accounts, such as Facebook or Twitter.

---

**Note:** If you haven't updated Contacts from any accounts, the Activities tab will be blank.

---

- Touch  **Home** →  **Contacts** → **Activities**.

## Speed Dials

Speed Dials are 1-, 2-, or 3-digit shortcuts (1 to 100) you assign to contacts, to allow you to quickly call the contact.




---

**Note:** Some Speed Dials are reserved by default, and cannot be assigned:





Speed Dial 1 is reserved for Voicemail.

---

### Assigning Speed Dials

1. Touch  **Home** →  **Contacts**.
2. Touch  **Menu** → **More** → **Speed dial**. A list of speed dial numbers appears in the display.
3. Touch a speed dial, then touch a Contact to assign the contact to the speed dial.

### Removing or Reassigning a Speed Dial

1. Touch  **Home** →  **Contacts**.
2. Touch  **Menu** → **More** → **Speed dial**.
3. Touch  **Menu**, then touch an option:
  - **Remove:** Touch a speed dial to remove it.
  - **Change order:** Touch and hold a speed dial, then drag it to a new location in the list.

## Section 6: Messaging

---

This section describes how to send and receive messages, and other features associated with messaging.

### Types of Messages


Your phone supports these types of messages:


- **Text messages:** Send and receive simple messages containing text to other mobile phones or email addresses (also known as SMS).
- **Multimedia messages:** Send and receive text messages with pictures and/or sound to other mobile phones or email addresses (also known as MMS).
- **Email:** Send and receive email from your email accounts, including Corporate Exchange mail.
- **Gmail:** Send and receive Gmail from your Google account.
- **Google Talk:** Chat with other Google Talk users.

### Text and Multimedia Messaging

Your phone can send and receive text and multimedia messages to other mobile phones and to email addresses.

#### Creating and Sending Messages

1. From the Home screen, touch  **Messaging → New message.**
2. Touch the **To** field to enter recipients:
  - **Enter contacts by name.** As you enter a name, matching contacts appear on screen. Touch a contact to add it to the list.
  - **Enter phone numbers.** As you enter a number, matching contacts appear. Touch a contact to add it to the list.
  - **Enter email addresses:** As you enter addresses, matching contacts appear on screen. Touch a contact to add it to the list.

3. Touch the **Type to compose** field, or touch **Next**, and compose your message. While composing a message, touch  **Menu** for these options:



- **Add subject:** Add a subject field to the message and enter a subject. (This option also converts the message to MMS.)
- **Attach:** Add content to the message to convert it to MMS.
  - **Pictures:** Add a picture.
  - **Capture picture:** Take a new picture.
  - **Videos:** Add a video.
  - **Capture video:** Record a new video.
  - **Audio:** Add a sound clip.
  - **Record audio:** Create a new audio clip.
  - **Slideshow:** Add a slideshow of pictures to this message.
- **Add text:** Add information from **Contacts**, **Calendar** events, and/or **Memos**.
- **Insert smiley:** Add a text emoticon to the message.
- **Discard:** Discard the message.

4. Touch **Send** to send the message.

## Managing Messages

### Threaded View



Messages you send and receive to the same contact, number or address are grouped together as a “thread”. Threaded messages allow you to see all the messages you exchanged with a contact, or other recipient, with the latest message displayed first.

1. From a Home screen, touch  **Messaging**.
2. Message threads display by contact, number, or address. While viewing message threads, you have these options:
  - Touch and hold a thread to choose from:
    - **View thread:** Display the entire message thread.
    - **Add to contacts:** Save the sender/recipient's information as a new contact, or to update an existing contact.
    - **Delete thread:** Erase the entire message thread.
  - Touch  **Menu** for these options:
    - **Compose:** Create a new message.
    - **Delete threads:** Touch message threads to mark them for erasure, or touch **Select all** to mark all message threads for erasure.

- **Search:** Enter characters to search messages and recipient lists.
- **Settings:** Configure message settings.

## Message Settings

Configure message settings.

1. From a Home screen, touch  **Messaging**.
2. Touch  **Menu** → **Settings** to set:
  - **Storage settings:**
    - **Delete old messages:** Touch to enable or disable automatic erasure of messages when stored message reach default limits. When disabled, the phone will prompt you to delete old messages to make room.
    - **Text message limit:** Touch to set a limit for the number of text messages per thread.
    - **Multimedia message limit:** Touch to set a limit for the number of multimedia messages per thread.
  - **Text message (SMS) settings:**
    - **Delivery reports:** Touch to request delivery reports for each text message sent.

### • Multimedia message (MMS) settings:

- **Delivery reports:** Touch to request delivery reports for each Picture/Video message sent.
  - **Auto-retrieve:** Touch to enable or disable automatic retrieval of MMS messages. When enabled, MMS messages download automatically. When disabled, the phone prompts to download new MMS messages.
  - **Roaming auto-retrieve:** Touch to enable or disable automatic retrieval of MMS messages when in Roaming mode. When enabled, MMS messages download and display automatically. When disabled, the phone prompts you to download new MMS messages.
- ### • Notification settings:
- **Notifications:** Touch to enable or disable alerts in the status bar.
  - **Screen On:** Touch to enable or disable awakening the screen when a message alert occurs.
  - **Select ringtone:** Touch to select a ringtone for message alerts.
  - **Vibrate:** Touch to enable or disable vibration for message alerts.





- **Signature:**

- **Enable Signature:** Touch to enable or disable adding pre-composed signature text to messages you send.
- **Signature Text** (activated when you enable **Enable Signature**): Enter or change your signature text.

## Gmail

Send and receive emails via Gmail, Google's web-based email.

- From the Home screen, touch  **Applications** →  **Gmail**.

### *Configuring Your Gmail Account*




Set up your Google account to synchronize contacts, calendars, and allow access to Gmail. (For more information, refer to “Adding a Google account” on page 54)

### *Refreshing Your Gmail Account*


Refresh your account to update your phone from the Gmail servers.

1. From the Home screen, touch **Applications** → **Gmail**.
2. Touch  **Menu** → **Refresh**.

## Composing and Sending Gmail

1. From the Home screen, touch **Applications** → **Gmail**.
2. Touch  **Menu** → **Compose**.
3. Touch the **To** field to enter recipients. As you enter names or numbers, matching contacts display. Touch a contact to add it to the field.
4. Touch the **Subject** field to enter a subject.
5. Touch **Compose Mail** to enter the text of your email.
6. While composing a message, touch  **Menu** for these options:
  - **Send**: Send the message.
  - **Save draft**: Save the message as a draft.
  - **Add/Remove Cc/Bcc**: Create/remove Cc (copy) and Bcc (blind copy) fields in the message. After creating the fields, touch to enter recipients.
  - **Attach**: Launch Gallery to select a picture to add to the message.
  - **Discard**: Close the message without saving.
  - **Help**: Launches Browser with Google Mobile Help.
7. Touch  to send the message.

## Gmail account settings

1. From the Home screen, touch **Applications** → **Gmail**.
2. Touch  **Menu** for these options
  - **Refresh**: Update Gmail on your phone from the Google servers.
  - **Compose**: Create a new email.
  - **Accounts**: View and choose from your Google account(s).
  - **Go to labels**: View Google content by label.
  - **Search**: Find Gmail items.
3. Touch **More** for these additional options:
  - **Settings**:
    - **General preferences**: Set Message Actions to Always show at the top of the screen, Only show in portrait mode, or Don't show. Clear search history of all of your searches. Clear "Show pictures" to not show pictures in messages automatically.
    - **Account settings**: Select a Gmail account to reconfigure.
    - Priority Inbox**: Touch to enable/disable the Priority Inbox as the default inbox for this account.
    - Signature**: Create a text signature to add to outgoing messages.
    - Confirm actions**: Have your phone prompt you to confirm archivals, deletions, and messages sent.

**Reply all:** When active, responding messages are sent to all addressees by default.

**Auto-advance:** Choose whether to show a Newer or Older conversation or a Conversation list after you delete or archive a conversation.

**Message text size:** Choose Tiny, Small, Normal, Large, or Huge text for your messages.

**Batch operations:** Allow changes to labels on more than one conversation.

**Sync inboxes and labels:** Choose which labels are synchronized.

— **Notification settings:**

**Email notifications:** When enabled, notifications for new email appears in the Notifications Panel.

**Labels to notify:** Choose notification preferences for the Inbox and/or Priority Inbox for this account.

- **Help:** Launches Browser with Google Mobile Help.
- **About:** Shows Gmail version installed on your phone.

## Email

Send and receive email using popular email services.

---

**Note:** Only some paid “Plus” accounts include POP access to allow this program to connect. If you are not able to sign in with your correct email address and password, you may not have a paid “Plus” account. Please launch the Web browser to access your account.

---

### Configuring Email Accounts



You can configure Email for most accounts in just a few steps.

---

**Note:** For Microsoft Exchange® ActiveSync email accounts, use the **Accounts & sync** setting to configure and manage them. (For more information, refer to “*Adding a Microsoft Exchange® account*” on page 55.)

---

## Configuring the first email account

1. From the Home screen, select  **Applications** →  **Email**.
2. Touch **Email address** to enter your email address, then touch **Password** or touch **Next** to enter your password.
3. Touch a setup option:
  - **Manual setup:** Configure the account manually. Touch **POP3**, **IMAP** or **Exchange**, then enter the account details.
  - **Next:** Connect to the server to set up the account automatically. Follow the prompts to complete set-up, then touch **Done**.

---

**Tip:** For more information on setting up your email, contact U.S. Cellular®.


---

## Configuring additional email accounts


1. From the Home screen, touch **Applications** → **Email**. Your email account Inbox appears in the display.



Account Selector

2. Touch the Account Selector button.
3. Touch  **Menu** → **Add account**.
4. Touch the **Email address** field to enter your email address.
5. Touch the **Password** field or touch **Next** to enter your password.
6. Touch a setup option:
  - **Manual setup:** Configure the account manually. Touch **POP3**, **IMAP** or **Exchange**, then enter the account details.
  - **Next:** Connect to the server to set up the account automatically. Follow the prompts to complete set-up, then touch **Done**.

## Composing and Sending Email

1. From the Home screen, touch **Applications** → **Email**.
2. Touch and hold on an account, then touch **Compose**.
3. Touch the **To** field to enter recipients. As you enter names or numbers, matching contacts display. Touch a contact to add it to the field.
4. Touch the **Subject** field to enter a subject.
5. Touch **Compose Mail** to enter the text of your email.
6. While composing a message, touch  **Menu** for these options:
  - **Add Cc/Bcc:** Create Cc (copy) and Bcc (blind copy) fields to the message. After creating the fields, touch to enter recipients.
  - **Save as draft:** Close the message and save it in Drafts.
  - **Discard:** Erase this message without saving it in Drafts.
  - **Priority:** Choose High, Normal, or Low priority for this message.
  - **Security options:** Enable/disable Encrypt and/or Sign for this message.
7. Touch **Send** to send the message.

## Managing Emails

### Combined Inbox

Emails you receive to all accounts are presented in the combined inbox, or you can view email accounts individually.

1. From an Email inbox screen, touch the Account Selector button in the upper left corner of the screen. The **Email** screen appears in the display.

---




**Note:** For more information about the Account Selector, see “Configuring additional email accounts” on page 75.

---

2. Touch **All inboxes**, or touch an account.

### Refreshing Your Email Account

Refresh your account to update your phone from the servers.

1. From the Home screen, select  **Applications** →  **Email**.
2. Touch  **Menu** → **Refresh**.


## Email Account Settings

Use Account settings to configure handling of email from your accounts.

---

**Note:** Account settings may vary, depending on your email provider.

---

1. From the Home screen, touch **Applications → Email**.
2. Touch an account to view it.
3. Touch  **Menu → More → Account settings**.
4. Touch fields to configure the account:
  - **General settings:**
    - **Account name:** Enter a name for the account's display.
    - **Your name:** Enter your name, to be used on emails.
    - **Add signature:** Add precomposed, stored Signature text to message.
    - **Signature:** Edit or replace Signature text.
    - **Email check frequency:** Choose an interval for checking for email.
    - **Default account:** When enabled, this account is the default account for sending email from your phone.

- **Always Cc/Bcc myself:** Include your email address in None of your message address lines or in the Cc/Bcc line of all of your messages.

- **Notification settings:**

- **Email notifications:** Enable or disable alerts in the Status Bar.
- **Select ringtone:** Choose a ringtone to use for new email alerts.
- **Vibrate:** Enable or disable vibration with new email alerts.

- **Server settings:**

- **Incoming settings:** Modify incoming email server settings.
- **Outgoing settings:** Configure the SMTP server, Port and Security type, Username and Password settings.

- **Common settings:**

- **Forward with files:** Include any attached files when forwarding a message.
- **Split view mode:** Touch to enable/disable display of email list on left side of landscape mode screen.



## Google Talk

Chat with other Google Talk users.

---

**Tip:** Talk requires that you have a Google account. For information on setting up a Google account, see “*Adding a Google account*” on page 54

---

1. From the Home screen, touch **Applications** →  **Talk**.
2. If you have already set up your Google account, you are automatically logged in. If you do not have a Google account, you can touch **Create** to create a new Google account.
3. Use the application's on-screen controls to chat with other Google Talk users.
4. Touch  **Menu** to select or add friends, search, sign out, and change Talk settings and/or your status.

## Section 7: Web and Social Networking

---

### Browser

Your phone is equipped with a full HTML Browser, which allows you to access the internet.

- Navigate to a Home screen panel, then touch





**Applications** →



**Browser.**

### Browser Features

#### Command Keys

- Touch  **Back** to return to the previous page.
- To go forward, touch  **Menu** → **Forward**.

#### Zoom In – Zoom Out

- To zoom in on a page, with your thumb and index finger pressed together, touch the screen and drag your fingers apart.
- To zoom out from a page, with your thumb and index finger separated, touch the screen with both fingers and drag your fingers together.

### Touching and dragging

- Touch and drag your finger on the screen to navigate pages, and to reposition pages within the screen.

### Entering text in a field

- While browsing, touch a text field to display the on-screen QWERTY keypad to enter text.

### Selecting items on a page

While browsing pages, use gestures and menus to navigate links on pages:



- Touch an item or hyperlink to select it.
- Touch and hold on a hyperlink for these options:
  - **Open:** Go to the linked page.
  - **Open in new window:** Open a new window to display the linked page.
  - **Bookmark link:** Add a bookmark to linked page (without loading it).
  - **Save link:** Save the linked page to Download history.



- **Share link:** Send the link via Bluetooth, Email, Gmail, or Messaging.
- **Copy link URL:** Save the link's URL to the clipboard.
- **Save image** (linked image only): Save the selected image to your phone.
- **View image** (linked image only): Show the selected image by itself.
- **Set as wallpaper** (linked image only): Save the selected image and set it as the Home screen wallpaper.







## Entering a URL

Access a web site quickly by entering the URL.

1. Navigate to a Home screen panel, then touch  **Applications** →  **Browser**.
2. Touch the **URL** field at the top of the screen, then enter the URL using the on-screen QWERTY keypad.
3. As you enter characters, potential matches display. Continue entering characters, or touch a match to complete the URL.
4. Touch **Go** to load the page.

## Using Browser Windows

You can have up to eight windows open at one time, switching between windows.




1. Navigate to a Home screen panel, then touch  **Applications** →  **Browser**.
2. To open a new window, touch  **Menu** → **New window**.
3. To switch to another open window, touch  **Menu** → **Windows**. Touch a window to display it.
4. To close a window, touch  **Menu** → **Windows**. Touch  **Close** beside a window to close it.

## Using Bookmarks

While browsing, bookmark a site to quickly access it in the future.





### Creating a bookmark

Create a bookmark to a page, for later browsing.


1. Navigate to a Home screen panel, then touch  **Applications** →  **Browser**.
2. Browse to the desired web site, then touch  → **Bookmarks** next to the **URL** field.
3. The new web site is displayed as a thumbnail with the command **Add**. Touch the bookmark to add it.
4. At the **Add bookmark** prompt, confirm the Name and Location for the bookmark, then touch **OK** to save the bookmark.

## Accessing bookmarks and history

Launch a bookmarked page, or reload recent pages.

1. Navigate to a Home screen panel, then touch  **Applications** →  **Browser**.
2. Touch  → **Bookmarks** next to the **URL** field.
3. Touch the **Bookmarks** tab, the following options are available:
  - Touch a bookmark to load the page.
  - Touch and hold on a bookmark for these options:
    - **Open**: Launch the bookmarked page.
    - **Open in new window**: Open the linked page in a new window.
    - **Edit bookmark**: Modify the URL.
    - **Add shortcut to Home**: Create a bookmark on the Home screen.
    - **Share link**: Send the page's URL via Bluetooth, Email, Gmail, Google+, Messaging, or Wi-Fi.
    - **Copy link URL**: Save the link's URL to the clipboard.
    - **Delete bookmark**: Remove the bookmark.
    - **Set as homepage**: Assign the bookmarked link as the home page.
  - Touch  **Menu** → **List view** to view bookmarks as a list.



4. Touch the **Most visited** tab, the following options are available:
- Touch a page to reload it.
  - Touch the star next to a page to bookmark it.
  - Touch and hold on a page for these options:
    - **Open**: Launch the web page.
    - **Open in new window**: Launch the web page in a new window.
    - **Add bookmark/Remove from bookmarks**: Bookmark the page, or remove the bookmark for this page.
    - **Share link**: Send the page's URL via Bluetooth, Email, Gmail, Google+, Messaging, or Wi-Fi.
    - **Copy link URL**: Copy the page's URL to the clipboard for pasting.
    - **Remove from history**: Remove the record of this page.
    - **Set as homepage**: Set this page as the default first page when opening Browser.

5. Touch the **History** tab, the following options are available:
- Touch a page to load it.
  - Touch the star next to a page to bookmark it.
  - To clear the history, touch  **Menu** → **Clear history**.
  - Touch and hold on a page for these options:
    - **Open**: Launch the web page.
    - **Open in new window**: Launch the web page in a new window.
    - **Add bookmark/Remove from bookmarks**: Bookmark the page, or remove the bookmark for this page.
    - **Share link**: Send the page's URL via Bluetooth, Email, Gmail, Google+, Messaging, or Wi-Fi.
    - **Copy link URL**: Copy the page's URL to the clipboard to paste in another location.
    - **Remove from history**: Remove the record of this page.
    - **Set as homepage**: Set this page as the default first page when opening Browser.


## Copying Fields or Text

Copy information from a web page to the clipboard for pasting.


### Copying a hyperlink or URL

1. Navigate to a Home screen panel, then touch  **Applications** →  **Browser**.
2. Browse to the desired web site.
3. Touch and hold on a hyperlink. These options are available:
  - **Open:** Displays the linked web page in the current window.
  - **Open in new window:** Displays the linked web page in a new window
  - **Bookmark link:** Create a bookmark to the page (without loading it).
  - **Save link:** Save the linked page to Download history.
  - **Share link:** Send the page's URL via Bluetooth, Email, Gmail, or Messaging.
  - **Copy link URL:** Save the link's URL to the Browser clipboard.

## Browser Menu



While viewing a web page, touch  **Menu** for these options:

- **New window:** Open a new browser window. The previous browser windows remain open in the background (use the Windows option to switch between windows).
- **Windows:** Switch between windows, or open a new window.
- **Browser brightness:** Select brightness (Automatic or manual) of the Browser screen.
- **Refresh:** Update the current page's content from the server.
- **Forward:** Move forward to a previously-viewed page.
- **More:**
  - **Add bookmark:** Create a bookmark for the current page.
  - **Add shortcut to home:** Create a shortcut to home.
  - **Add RSS feeds:** Search the Really Simple Syndication feeds/channels to which you subscribe for new information.
  - **Find on page:** Search for content on the current page.
  - **Page info:** View information about the current page, including the URL.
  - **Share page:** Send the current page's URL via Bluetooth, Email, Gmail, or Messaging.

- **Downloads:** View a list of downloads. While viewing downloads, touch  **Menu** for access to **Sort by size** or **Sort by time** commands. Touch a download's check box for access to **Delete** and **Clear selection**.
- **Settings:** Customize the Browser (see “*Browser Settings*”).

## Browser Settings

1. Navigate to a Home screen panel, then touch

 **Applications** →  **Browser**.

2. Touch  **Menu** → **More** → **Settings**:

- **Page content settings:**

- **Default zoom:** Choose a default zoom level for web pages.
- **Open pages in overview:** When enabled, displays an overview of newly-opened pages.
- **Text encoding:** Choose a default character set for web pages.
- **Block pop-up windows:** When enabled, blocks pop-up windows.
- **Load images:** When enabled, images are automatically loaded when you visit a page. When disabled, images are indicated by a link, which you can touch to download the picture.
- **Auto-fit pages:** When enabled, the browser automatically sizes web pages to fit your phone's display.

- **Landscape view only:** When enabled, Browser displays all pages in the wider landscape orientation (rotate your phone counterclockwise to view pages in landscape mode).
- **Enable JavaScript:** When enabled, Browser will automatically run JavaScript scripts on pages you visit.
- **Enable plug-ins:** When enabled, Browser will automatically load and run plug-ins (Always or On demand) on pages you visit.
- **Open in background:** When enabled, new windows open behind the current window.
- **Set home page:** View and set the default first page that displays when you launch Browser.
- **Default storage:** Select where Browser stores files.
- **Privacy settings:**
  - **Clear cache:** Delete content and databases stored on the phone.
  - **Clear history:** Delete the list of previously-visited pages.
  - **Accept cookies:** When enabled, allows Browser to save and read cookie information used by web pages.
  - **Clear all cookie data:** Delete cookie information saved to the phone.

- **Remember form data:** When enabled, stores information you enter into forms to make future forms easier.
- **Clear form data:** Deletes saved form information.
- **Enable location:** When enabled, sites you visit can request access to your location.
- **Clear location access:** Clear location access for all web sites.
- **Security settings:**
  - **Remember passwords:** When enabled, saves user names and passwords for sites you visit, to make future visits easier.
  - **Clear passwords:** Clear all saved user names and passwords.
  - **Show security warnings:** When enabled, Browser will warn you if there is a problem with a site's security.
- **Advanced settings:**
  - **Select search engine:** Select your default search engine (Google, Yahoo!, or Bing).
  - **Website settings:** View and manage settings for individual webs it es.
  - **Reset to default:** Clear all browser data and reset all settings to the factory defaults.

## Maps

Use Google Maps to find your current location, get directions, and other location-based information.

---

**Note:** You must enable location services to use Maps, and some features require Standalone or Google location services. (For more information, refer to “*Location & security*” on page 156.)

You can locate selected friends and share your location with them using Latitude. (For more information, refer to “*Latitude*” on page 122 and to “*Maps*” on page 85.)

---

- Navigate to a Home screen panel, then touch



Applications →



Maps.

## Navigating the Map

### Zooming

- Double-touch on the screen to zoom in.
- Touch Zoom in or Zoom out.



### Scrolling

- Touch and drag on the screen to reposition the map in the display.


## Touch and Touch and hold

- **Touch and hold** on an area of the map to display pop-up information about the location.
- **Touch** a pop-up for these options:
  - **What's nearby:** Display nearby points of interest.
  - **Search nearby:** Enter search criteria to find nearby points of interest.
  - **Share this place:** Shares this location as a message, sends to a Bluetooth enabled device, sends this location as an Email or Gmail.
  - **Report a problem with the map:** Send an error report to Google Maps.

## Maps Menu

1. Navigate to a Home screen panel, then touch   
**Applications** →  **Maps**.
2. Locate the top row of the applications to access additional options:
  - **Map options:** displays a list of application shortcuts such as **Map**, **Places**, **Navigation**, **Check in** (appears only after you check in using Latitude), **Latitude**, **Location history**, and **My Places**.
  - **Search Maps:** allows you to search for a place of interest.

- **Layers:** allows you to switch map views:
  - **Traffic:** (available only in selected areas) Real-time traffic conditions are displayed over roads as color-coded lines. Each color represents how fast the traffic is moving.
  - **Satellite:** Maps uses the same satellite data as Google Earth. Satellite images are not real-time. Google Earth acquires the best imagery available, most of which is approximately one to three years old.
  - **Terrain:** combines a topographical view of the area's terrain with the current map location.
  - **Transit Lines:** displays the overlapping transit lines on your map.
  - **Latitude:** allows you to see your friend's locations and share your location with them.
  - **My Maps:** displays a list of your preferred maps.
  - **Bicycling:** displays the overlapping cycling trails on your map.
  - **Wikipedia:** displays any Wikipedia markers and info on your map.
- **My Location:** Shows the map perspective to your current location.

3. While viewing a map, touch  **Menu** for these options:

- **Search:** Enter text criteria to find locations or points of interest.
- **Directions:** Get driving, public transport, or walking directions.
- **Clear Map:** Reset the map after searching or following directions.
- **More:** displays a list of application shortcuts such as **Map**, **Places**, **Navigation**, **Check in** (appears only after you check in using Latitude), **Latitude**, **Location history**, and **My Places**.
- **Settings:**
  - **Cache Settings:** provides the ability to setup maps that are cached into the phone's memory (while not on a Wi-Fi connection) or to clear the cache of map titles.
  - **Labs:** this is a testing ground for experimental features that aren't quite ready for prime time. They may change, break or disappear at any time.
  - **Terms, Privacy & Notices:** displays the Terms and Conditions, Privacy Policy, or Legal Notices information. Select the desired information from the pop-up menu.

– **About:** displays general information about Google maps such as Version, Platform, Locale, Total data sent, Total data received, Free memory, etc.

- **Help:** Displays Maps online support information.

## YouTube



View and upload YouTube videos, right from your phone.

- Navigate to a Home screen panel, then touch

 **Applications** →  **YouTube**.

## Voice Search

Voice Search offers voice-activated Google searches.

1. Navigate to a Home screen panel, then touch  **Applications** →  **Voice Search**.
2. Voice Search uses your location to improve search results and offer other services. Touch **Agree** to allow location-based searches, or **Disagree** to disallow.
3. At the **Speak now** prompt, speak your search criteria slowly and clearly. Google searches for the information and displays results.



## Section 8: Music

---

### Play Music App

Also known as Google Play Music, allows you to browse, shop, and playback songs purchased from Google Play Store. The music you choose is automatically stored in your Google Music library and instantly ready to play or download.

### *How to Register for Play Music*



1. Login to your Gmail account or create a Gmail account.
2. Use the browser to access <http://play.google.com/about/>.
3. Touch **TRY IT NOW**.
4. Sign in to your Google account or create one.
5. Touch **OK**, got it after reading the One policy, one Google experience or touch **Read policies now**.
6. If you have not already created this account or downloaded any music the Google Music screen displays blank.
7. If you have already created this account and downloaded music the Google Music screen displays the available music files.

## Play Music


The Play Music application supports multiple ways to add music to the library:

1. Download songs from Google Play to your phone.
2. Copy music from your personal computer to your phone using a USB cable.
3. Transfer music from another Bluetooth or Wi-Fi device.

Once you have downloaded or transferred music to My Music folder, follow these procedures:




1. From the Home screen, touch  **Applications** →  **Play Music**.

The Music app searches both your online library and your device's internal storage for music and playlists; this can take from a few seconds to several minutes, depending on the amount of new music added since you last opened the application. It then displays a carousel view of your new and recent music, organized by **RECENT, ARTISTS, ALBUMS, SONGS, PLAYLISTS,** and **GENRES**.





2. Swipe left or right to browse through your new and available music. **RECENT, ARTISTS, ALBUMS, SONGS, PLAYLISTS,** and **GENRES** (grouped into categories).
3. Touch an on-screen song to open it and begin playback.
4. Return to the Library screen from most other screens in the Music application by touching the Music application icon  (**Music notification icon**) at the top-left of the Application bar.

## Changing Library View

You can change the way you view the contents of your library.

1. From the Home screen, touch  **Applications** →  **Play Music**.
2. Touch  or tab name near the top-left of the Application bar to back up to the main Music App menu.
3. Available tabs include: **RECENT, ARTISTS, ALBUMS, SONGS, PLAYLISTS,** or **GENRES**.

## Searching for Music in Your Library



1. From the Home screen, touch  **Applications** →  **Play Music**.
2. Touch  **Search** to search through your available songs.  
– or –  
Touch  **Search**.
3. Type the name of an artist, album, song, or playlist. Matching songs display in window as you type.
4. Touch a matching song to play it, touch a matching album, artist or playlist to view a list of its' songs.


## Listening to Music

You can listen to music by using your device's built-in speakers, through a wired headset, or through a wireless Bluetooth stereo headset.


Press the Volume key on the side of the device to activate on-screen volume control, then touch and drag on the scale to set volume.

## Playing Music

1. From the Home screen, touch  **Applications** →  **Play Music**.
2. Touch a song in your library to listen to it.  
– or –

While viewing a list of songs, touch  and touch **Play**.

– or –

While viewing a list of albums, artists, playlists, or genres, the label area  under an item and touch **Play**.





The **Now playing** screen opens and the song you touched or the first song in the album or playlist starts to play. The tracks in the current list play in order until you reach the end of the list (unless you choose a repeat option). Otherwise, playback stops only if you stop it, even when you switch applications.

---

**Note:** If you navigate away from the **Now playing** screen in the Music application, the Now Playing bar appears at the bottom of the screen.

---

## Shuffling Music

1. From the Home screen, touch  **Applications** →  **Play Music**.
2. From the **SONGS** tab, touch  and select **Shuffle all**.
  - **Shuffle all**: Play all songs in a random order.
3. While the song is playing, touch the  **Shuffle** to turn Shuffle on or off.

## Displaying the Now Playing Screen




To return to the **Now playing** screen from other Music screens:

- Touch  **Music notification icon** in the System bar.  
— or —

Touch the name of the current song in the list (where you see the music bars displayed).




## Tab Options

There are various options available from the different tabs:

1. From the Home screen, touch  **Applications** →  **Play Music**.
2. Select one of the following tabs and touch  to access an available option.
  - **ARTISTS**: Play, Add to playlist, Shop for artist, or Search.
  - **ALBUMS**: Play, Add to playlist, More by artist, Shop for artist, and Search.
  - **SONGS**: Play, Add to playlist, Shop for artist, Delete, and Search.
  - **PLAYLISTS**: Play, Rename, or Edit.
  - **GENRES**: Play.

## Options While Playing a Song

When you play a song, the **Now playing** screen displays. There are various options and controls available while a song is playing:

1. From the Home screen, touch  **Applications** →  **Play Music**.
2. Touch a song.
3. While the music is playing, touch  **Menu** to display the following options:



Touch to go back to the previous song. Touch and hold to scan backward through the current song.



Touch to pause playback.



Touch to advance to the next song. Touch and hold to scan forward through the current song.

4. Touch the screen to view more options:



When Shuffle mode is enabled via **Show options**, songs play in random order. When disabled (as shown), songs play in the order they appear in List view.



When Shuffle mode is enabled via **Show options**, songs play in random order. When enabled, songs play in random order.



Touch to repeat the current song, repeat all songs, or disable repeat mode.



Searches your phone for music.



Toggles between small screen and full screen.



Marks this song as one you like.




Marks this song as one you dislike.






Displays options for this particular song.






Progresses from left to right to show the amount of time left before the song ends.

5. Touch the Album cover to see it full screen.
6. Touch  (Menu) → **Settings** to display the following options:
  - **Open source licenses:** Displays the Open source licenses for this device.
  - **Music version:** Displays the music version.



 
### *Creating a Playlist*

1. From the Home screen, touch  **Applications** →  **Play Music.**
2. Touch an album or song list and touch  → **Add to playlist.**
3. Touch **New playlist.**
4. Touch the **Playlist name** field and enter a name for the playlist then touch **OK** to save the new playlist.




### *Adding Songs to Playlists*

1. From the Home screen, touch  **Applications** →  **Play Music.**
2. Touch an album or song list and touch  → **Add to playlist.**
3. Touch the name of the playlist in which to add this song.  
The selected song is added to the playlist.

### *Playing a Playlist*

1. From the Home screen, touch  **Applications** →  **Play Music.**
2. Select the **PLAYLISTS** tab.
3. Touch  next to a playlist title and touch **Play.**

## Deleting a Playlist

1. From the Home screen, touch  **Applications** →  **Play Music**.
2. Select the **PLAYLISTS** tab.
3. Touch  next to a playlist title and touch **Remove from playlist**.

## Music Player



Music Player plays music files stored on a microSD or microSDHC Memory Card. (For information on installing a Memory Card, page 18.)

---

**Important!** For information on transferring media files to a memory card, see “*Transferring Files to a Memory Card*” on page 114.

---

## Playing Music




1. From the Home screen, touch  **Applications** →  **Music Player**.
2. Select a tab to display your music files, from **All**, **Playlists** **Albums**, or **Artists**.
3. Browse through your available music to find songs.
4. Touch a song or playlist to begin playback.



5. During playback, use the sound and playlist controls:
  - **Volume:** Enable on-screen volume control.



- **Now playing:** Display the current song title and information.
- **5.1 Channel Mode:** Enable surround sound (headphones only).
- **Shuffle:** Touch to enable or disable shuffle mode. When enabled, songs play in random order. When disabled, songs play in the order they appear.
- **Repeat:** Touch to repeat the current song, repeat all songs, or disable repeat mode.
- **Playback Controls:** Touch to play a previous song, the current song, or the next song. Touch and hold to rewind or fast forward playback of the current song.

## Creating a Playlist

1. From the Home screen, touch  **Applications** →  **Music Player**.
2. Touch  **Menu** → **Add to playlist**.
3. Select one or more songs, or touch **Select all**, then touch **Add**.
4. Select an existing playlist to add the selected song(s) to it, or touch **Create playlist** to create a new named playlist and add the selected song(s) to it.

## Setting a song as a ringtone

You can set a song as a ringtone for all voice calls, for calls from an individual contact, or as an alarm tone.

1. From the Home screen, touch  **Applications** →  **Music Player**.
2. Touch and hold a music file, then touch **Set as** and choose from these options:
  - **Phone ringtone:** Set the song as the default ringtone for all calls.
  - **Caller ringtone:** Choose a contact to set the song as the ringtone for calls from the contact.
  - **Alarm tone:** Set the song as the alarm ringtone for a new alarm, or for an existing alarm.





 
## Section 9: Pictures and Videos

---

### Camera

Use your phone's built-in Camera to take pictures and record videos.

- From the Home screen, touch  **Applications** →  **Camera**.

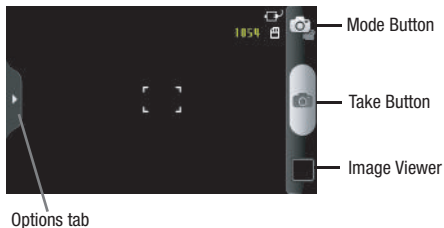





---

**Important!** Do not take photos of people without their permission.  
Do not take photos in places where cameras are not allowed.  
Do not take photos in places where you may interfere with another person's privacy.

---

### Taking Pictures

1. From the Home screen, touch  **Applications** →  **Camera**.
2. Using the display as a viewfinder, compose your picture by aiming the lens at the subject.
  - Touch the screen to focus on the area you touched.
  - To configure settings, see “*Camera Options*” on page 97
3. To take the picture, touch  **Take**.
4. After taking a picture, touch **Image Viewer** to view the picture. While viewing the picture, use these options:
  - Touch the zoom icons to zoom incrementally, or double-touch on the picture to zoom all the way in or out.
  - Touch **Delete** to erase the picture.
  - Touch **Share** to send the picture via **AllShare**, **Bluetooth**, **Email**, **Gmail**, **Google+**, **Messaging**, **Picasa**, or **Wi-Fi**.
  - Touch **Set as** to assign the picture as a contact icon, or as wallpaper.
  - Touch  **Back** to return to the Camera to take more pictures.

## Camera Options



### ■ While in Camera mode, touch the **Options** tab to configure:





- **Switch Cameras:** Toggle between the front and rear cameras.
- **Shooting mode:** Choose a camera shooting mode (**Single Shot:** take a single photo, **Continuous:** touch and hold the Camera button to take 9 consecutive pictures, **Panorama:** take multiple pictures by moving the device to create a panorama, **Add me:** Detects action to automatically take multiple pictures to create a panorama), **Action shot:** Increases the shutter speed for fast action photography, and **Cartoon:** Applies a cartoon-like effect to your image.

 
- **Flash:** Choose **Off** (never flash), **On** (always flash), or **Auto flash** (flash only when the light is low).
- **Exposure value:** Choose a positive exposure value to brighten the next picture. Choose a negative exposure value to darken the next picture.
- **Settings** → **Camera:**
  - **Focus mode:** Choose a type of automatic focus.
  - **Scene Mode:** Choose a mode to match conditions (None, Portrait, Landscape, Night, Sports, Party/Indoor, Beach/Snow, Sunset, Dawn, Fall colour, Firework, Text, Candelight, Backlight).
  - **Timer:** Set a delay before taking a picture.
  - **Resolution:** Choose a size for the image.
  - **White balance:** Choose a setting for the light source.
  - **Effects:** Apply an effect to pictures.
  - **ISO:** Choose an ISO setting to ensure best picture clarity for conditions.
  - **Metering:** Select a method for measuring light.
  - **Auto contrast:** Select to let the camera automatically adjust picture contrast to match conditions.
  - **Blink detection:** Select to ensure camera takes picture when subject's eyes are open.

- **Image quality:** Choose a quality setting for photos.
- **Adjust:** Set Contrast, Saturation, and Sharpness.
- **Settings → ⚙ Settings**
  - **Guidelines:** Enable or disable an on-screen grid to aid in photo composition.
  - **Review:** Enable or disable the instant review feature, to display images immediately after capture.
  - **Shutter Sound:** Select a tone to play when the camera's shutter opens and closes.
  - **GPS:** Enable or disable inclusion of location information with each new photo.
  - **Reset:** Set all Camera settings to the defaults.

## Camcorder

Use your phone's built-in Camcorder to record video.

- From the Home screen, touch  **Applications →**  
 **Camera**, then touch the  **Mode** button. The icon changes to .

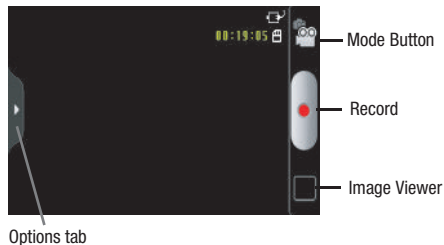







---

**Important!** Do not record videos of people without their permission.  
 Do not record videos in places where cameras are not allowed.  
 Do not record videos in places where you may interfere with another person's privacy.





---

## Capturing Video

1. From the Home screen, touch  **Applications** →  **Camera** →  **Mode** button. The icon changes to .
2. Using the display as a viewfinder, compose your shot by aiming the lens at the subject.
  - To configure settings, see “*Camcorder Options*” on page 99.
3. To start recording, touch the **Record** button.
4. To stop recording, touch the **Stop** button.
5. After recording, touch **Image Viewer** to view the video. While viewing the video, use these options:
  - Double-touch on the picture to zoom all the way in or out.
  - Touch **Share** to send the picture via **AllShare**, **Bluetooth**, **Email**, **Gmail**, **Messaging**, **Wi-Fi**, or **YouTube**.
  - Touch **Play** to review the video.
  - Touch **Delete** to erase the video.
  - Touch  **Back** to return to the Camera to take more pictures.

## Camcorder Options






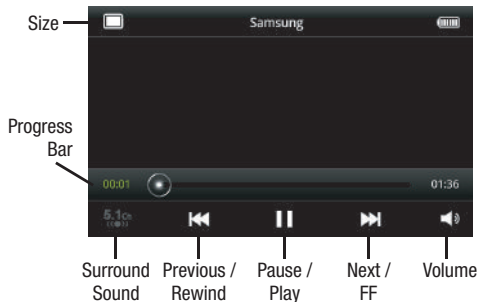 
- While in Camcorder mode, touch the **Options** tab:
  -  **Switch Cameras**: Toggle between the front and rear cameras.
  -  **Recording mode**: Choose a recording mode from **Normal** (Record a video of any length), or **Limit for MMS** (Record a video up to 1 minute long, suitable for sending in a Video message).
  -  **Flash**: Choose **Off** (never flash) or **On** (always flash).
  -  **Exposure value**: Choose an exposure value.

-  **Settings** →  **Camcorder**
  - **Timer:** Set a delay before starting recording.
  - **Resolution:** Choose a size for the recording.
  - **White balance:** Choose a setting for the light source.
  - **Effects:** Apply an effect to videos.
  - **Video quality:** Choose a quality setting for videos.
  - **Adjust:** Set Contrast, Saturation, and Sharpness.
-  **Settings** →  **Settings.**
  - **Guidelines:** Enable to display a grid to aid in video composition.
  - **Audio recording:** Enable to record sound along with video.
  - **Review:** Enable or disable the instant review feature, to display videos immediately after recording.
  - **Reset:** Set all Camcorder settings to the defaults.


## Video Player

View and manage videos stored on an optional installed memory card, or shop for new videos.

1. Navigate to a Home screen panel, then touch  **Applications** →  **Video Player**. A list of available videos appears in the display.
2. For additional options, touch  **Menu**:
  - **Remove:** Delete one or more videos from the list.
  - **List by:** Sort the files in the list by Size, Name, Date, or Type.
3. To play a video, touch it.



4. To display or hide on-screen playback controls, touch the Video Player screen. The following controls are available:
- **Size:** Touch to change image size from full screen to small-size proportional image or large-size proportional image.
  - **Surround Sound:** Reproduces surround sound in headphones.
  - **Previous / Rewind:** Touch to play the previous video in the list. Touch and hold to rewind playback of the current video.
  - **Pause / Play:** Pause / resume playback of the current video.
  - **Next / FF:** Touch to play the next video in the list. Touch and hold to fast forward playback of the current video.
  - **Volume:** Activates on-screen volume control.

5. Touch  **Menu** for these options:
- **Share video:** Send the video via AllShare, Bluetooth, YouTube, Wi-Fi, Messaging, Email, or Gmail.
  - **Details:** View information about the video.
  - **Add bookmark:** Place a marker in the video, to view later.
  - **Bookmarks:** Display markers from the video.
  - **Via Bluetooth:** Send the video via Bluetooth.
  - **Settings:** Choose Repeat (All videos / 1 video / Off), Brightness, Color tone (Normal / Warm / Cold), and Outdoor Visibility settings.



## Media Hub

Samsung Media Hub is your one stop for the hottest movie and TV content. With hundreds of titles available at your fingertips, entertaining on the go has never been easier. You can rent or purchase your favorite content and watch from the convenience of anywhere. Featuring the stunning viewing quality Samsung is known for, Samsung Media Hub is your gateway to mobile video like you've never experienced it before.

---

**Note:** Media Hub service requires a Media Hub account, and depends on service availability.

---


1. Navigate to a Home screen panel, then touch  **Applications** →  **Media Hub**.
2. Touch **OK** at the 'Attention' prompt to install the Samsung Account App so you can run Media Hub.

---

**Important!** You must turn on **Unknown sources** to install the Samsung Account App. For more information, refer to "Unknown sources" on page 160.

---

3. Touch **Install** to install the application then touch **Done**.

4. Read the Terms and Conditions, then touch the **I agree to the Terms and Conditions** check box and touch **Accept**.
5. Touch  to browse content using these options:
  - **Movies:** Displays a list of the most recently available movies.
  - **TV Shows:** Displays shows that aired by date.
  - **My Media:** Content you have previously purchased or rented.
6. Touch the media you want to view then touch one of the following options:
  - **View Trailer:** View a short clip from the movie.
  - **Buy SD:** Purchase the movie or show for unlimited viewing on your device. Follow the prompts to enter payment details.
  - **Rent SD:** Purchase a time-limited download of the movie or show. Follow the prompts to enter payment details.

## Gallery

Use Gallery to view, capture, and manage pictures and videos.

---

**Note:** To take pictures or record video, you must install an optional memory card in your phone.

---

- Navigate to a Home screen panel, then touch






**Applications** →






**Gallery**.

## Viewing Pictures

1. Navigate to a Home screen panel, then touch  **Applications** →  **Gallery**.
2. Touch a category, then touch a picture to view it.
3. While viewing a picture, touch on the screen or touch  **Menu** for options:
  - **Share:** Share the selected picture via **AllShare**, **Bluetooth**, **Picasa**, **Wi-Fi**, **Google+**, **Messaging**, **Email**, **Gmail**, or **Online Album**.
  - **Delete:** Erase the picture.
  - **More:**
    - **Details:** Display information about the picture.
    - **Set as:** Assign the picture as a Contact icon, or as Wallpaper.
    - **Crop:** Drag the edges of the crop tool to select an area of the picture, then touch **Save** to save just the selected area, removing the rest of the picture.
    - **Rotate left:** Change the orientation of the picture.
    - **Rotate right:** Change the orientation of the picture.





## Viewing Videos


1. Navigate to a Home screen panel, then touch  **Applications** →  **Gallery**.
2. Touch a category, then touch a video to play it.
3. While browsing videos, touch the screen or touch  **Menu** for these options:
  - **Share video:** Share the selected video via **AllShare**, **Bluetooth**, **YouTube**, **Wi-Fi**, **Messaging**, **Email**, or **Gmail**.
  - **Details:** View information about the video.
  - **Via Bluetooth:** Send the video via Bluetooth.

## Sharing pictures and video

Share pictures and videos via Email, AllShare, Bluetooth, Messaging, Picasa, or Gmail.

1. Navigate to a Home screen panel, then touch  **Applications** →  **Gallery**.
2. Touch a category, then touch a picture or video to select it.




---

**Tip:** To select multiple pictures or videos, touch  **Menu** → **Multiselect**. Touch thumbnails to mark them, then touch **Share**.




---

3. Touch  **Menu** → **Share / Share video** to send the picture or video via **AllShare**, **Bluetooth**, **Picasa**, **YouTube**, **Wi-Fi**, **Messaging**, **Google+**, **Email**, **Gmail**, or **Online Album**, then follow the prompts.

### ***Setting a Picture as a Contact Icon***

1. Navigate to a Home screen panel, then touch  **Applications** →  **Gallery**.
2. Touch a category, then touch a picture to select it.
3. Touch  **Menu** → **More** → **Set as** → **Contact icon**.
4. Select a contact, or create a new contact, with the selected picture as the contact's icon.

### ***Setting a Picture as Wallpaper***

1. Navigate to a Home screen panel, then touch  **Applications** →  **Gallery**.
2. Touch a category, then touch a picture to select it.
3. Touch  **Menu** → **More** → **Set as** → **Home screen wallpaper**.
4. Use the crop tool to edit the picture, then touch **Save** to set the edited picture as the Home screen wallpaper.

## Section 10: Connections

---

Your phone includes features to connect to the internet and to other devices, via Wi-Fi, Bluetooth, and Dial Up Networking.

### Wi-Fi

Wi-Fi is a wireless networking technology that provides access to local area networks. Use your phone's Wi-Fi feature to:

- Access the Internet for browsing, or to send or receive email.
- Access your corporate network.
- Use hotspots provided by hotels or airports while traveling.

Wi-Fi communication requires access to an existing Wireless Access Point (WAP), also called a “hot spot”. WAPs can be Open (unsecured, as with most hotspots), or Secured (requiring you to provide login credentials). Your phone supports the 802.11 b/g Wi-Fi protocol.

### Configuring Wi-Fi Settings

Configure your phone's Wi-Fi settings. (For more information, refer to “*Wi-Fi settings*” on page 137.)

### Turning Wi-Fi On or Off

Turn your phone's Wi-Fi service on or off. When you turn Wi-Fi service on, your phone automatically searches for available, in-range WAPs (Wireless Access Points).

#### Turning Wi-Fi On

1. From the Home screen, sweep your finger downward to display the Notification Panel.
2. Touch **Wi-Fi** to turn Wi-Fi On.

#### Turning Wi-Fi Off

1. From the Home screen, sweep your finger downward to display the Notification Panel.
2. Touch **Wi-Fi** to turn Wi-Fi Off.

## Scanning and Connecting to a Wi-Fi Network

When you turn on Wi-Fi, your phone searches for available Wi-Fi connections, then displays them on screen.




1. From the Home screen, sweep your finger downward to display the Notification Panel.
2. Touch **Wi-Fi** to turn Wi-Fi On.
3. When your phone completes a scan, a list of detected networks pops-up in the display.
4. Touch a Wi-Fi network to connect.
  - If the Wi-Fi network is open, you will be automatically connected.
  - If the Wi-Fi network is secured, enter the password at the prompt to connect.

## Adding a Wi-Fi Network Manually

1. From the Home screen, sweep your finger downward to display the Notification Panel.
2. Touch **Wi-Fi** to turn Wi-Fi On.
3. Under **Notifications**, touch **Wi-Fi network available**.
4. Touch **Add Wi-Fi network**, then enter these fields:
  - **Network SSID**: Enter the name of the Wi-Fi Wireless Access Point.
  - **Security**: Select the type of security used by the WAP.
  - **Password** or **Key**: If the WAP is secured, enter the password or hex key.

## Enabling Wi-Fi Direct

Wi-Fi Direct allows device-to-device Wi-Fi connections so you can transfer large amounts of data.

1. Touch  **Home** →  **Menu** →  **Settings** → **Wireless & networks** → **Wi-Fi Direct settings**.
2. Touch **Wi-Fi Direct** to enable Wi-Fi Direct. A green check mark appears in the check box.




## Viewing Wi-Fi Direct Status

- Touch  **Home** →  **Menu** →  **Settings** → **Wireless & networks** → **Wi-Fi Direct settings**.



The Status field shows the Wi-Fi Direct status.

## Connecting to a Wi-Fi Direct device


When you turn on Wi-Fi Direct, your phone scans for nearby available Wi-Fi Direct devices, then displays them.

1. Touch  **Home** →  **Menu** →  **Settings** → **Wireless & networks** → **Wi-Fi Direct settings**.
2. Touch **Wi-Fi Direct** to enable Wi-Fi Direct. A green check mark appears in the check box.
3. When your phone completes a scan, touch a Wi-Fi Direct device to connect, then follow the prompts to complete the connection.

## Sharing Files using Wi-Fi Direct

1. From the **Applications** screen, touch  **Gallery**.
2. Select a photo, video, or other file type to share.
3. Touch  **Menu** → **Share** → **Wi-Fi**. The **Wi-Fi Direct settings** screen appears in the display.
4. Select a device to receive the file.

## Disconnecting Wi-Fi Direct

1. Touch  **Home** →  **Menu** →  **Settings** → **Wireless & networks** → **Wi-Fi Direct settings**.
2. Touch **Disconnect Wi-Fi Direct** to disconnect.

## Portable Wi-Fi Hotspot

Use Portable Wi-Fi Hotspot to share your phone's network connection with a PC or other device through Wi-Fi, using your phone as the portable hotspot.

---

**Important!** Portable Wi-Fi Hotspot requires a data connection and consumes battery power. There is a monthly charge for the Portable Wi-Fi Hotspot feature, and all data used by connected devices will apply to the customer's data allowance. Contact your service provider for more information.



---

### Configuring Portable Wi-Fi Hotspot Settings

Configure your phone's Portable Wi-Fi Hotspot settings, including your phone's name and password, security, and visibility of your phone's Portable Wi-Fi Hotspot. For more information, refer to *"Portable Wi-Fi Hotspot"* on page 139.

## Turning On Portable Wi-Fi Hotspot

Activate your phone's Portable Wi-Fi Hotspot application to allow other devices to use your phone's internet connection.

1. From the Home screen, touch  **Applications** →  **Portable Wi-Fi Hotspot**.
2. Read the **Introduction for Portable Wi-Fi Hotspot**, then touch **Accept** to proceed.
3. Touch **Portable Wi-Fi Hotspot** to turn the service on.

---

**Note:** Portable Wi-Fi Hotspot consumes battery power.

---

4. Read the information about battery usage, then touch **Turn on Portable Wi-Fi Hotspot** to proceed.

---

**Important!** When using Portable Wi-Fi Hotspot, charges apply when roaming. Check your calling plan for applicable charges in the location where you plan to use service.

---

5. Touch **Continue** to acknowledge the Roaming message.
6. Touch **Automatic** (An SSID and key are created for your Hotspot) or **Manual** (allows customized settings).

7. Touch **Network Settings** then touch one of the following:

- **Configure:** Select Automatic or Manual configuration. Automatic creates an SSID and Key for your Hotspot. Manual lets you customize the settings.
- **Manage Devices:** touch View Connected Devices to display a list of connected devices, or Manage Allowed Devices to configure which device automatically connect, or Add a device.
- **Battery Management:** to select a time interval to shut off Portable Wi-Fi Hotspot if there is no activity. Selections are: **Never Turn-Off, 5 minutes, 10 minutes, 20 minutes, 30 minutes, or 60 minutes.**

Your phone establishes a connection to the network for the Portable Wi-Fi Hotspot service.

8. Touch **Portable Wi-Fi Hotspot** to turn the service off when you are finished using Portable Wi-Fi Hotspot.

## **Connecting a Device via Portable Wi-Fi Hotspot**

Use the other device's Wi-Fi control to connect to your phone's Portable Wi-Fi Hotspot.

---

**Tip:** In order for other devices to connect to your Portable Wi-Fi Hotspot, you can set your device to allow all devices to connect, or add the device.

---

1. Activate Portable Wi-Fi Hotspot on your phone. For more information, refer to *"Turning On Portable Wi-Fi Hotspot"* on page 109.
2. Locate **SCH-I405** in the Wi-Fi network list.
3. Enter **<phone number>** as the password to connect to this device.
4. On the other device, scan for Wi-Fi hotspots, and select your phone from the list.

---

**Tip:** Your phone's default Name (SSID) and Password are displayed on the screen. (For more information about Portable Wi-Fi Hotspot settings, see *"Portable Wi-Fi Hotspot"* on page 139.)

---

5. At the prompt on the other device, enter your phone's Portable Wi-Fi Hotspot password.

## Bluetooth

Bluetooth is a short-range wireless communications technology for exchanging information over a distance of about 30 feet.

You don't need to line up the devices to send information with Bluetooth. If the devices are in range, you can exchange information between them, even if they are in different rooms.

### Configuring Bluetooth Settings

Configure your phone's Bluetooth settings. (For more information, refer to “*Bluetooth settings*” on page 143.)

### Turning Bluetooth On or Off

#### Turning Bluetooth On


1. From the Home screen, sweep your finger downward to display the Notification Panel.
2. Touch **Bluetooth** to turn Bluetooth on.

#### Turning Bluetooth Off

1. From the Home screen, sweep your finger downward to display the Notification Panel.
2. Touch **Bluetooth** to turn Bluetooth off.

### Pairing with a Bluetooth Device

Search for a Bluetooth device and pair with it, to exchange information between your phone and the device.

1. From the Home screen, touch  **Menu** → **Settings** → **Wireless & networks** → **Bluetooth settings**.
2. Touch **Bluetooth** to turn on Bluetooth.
3. Activate the target device's discoverable mode.
4. Touch **Scan devices**.
5. From the list of scanned devices, touch the target device. Your phone begins automatic pairing and connection with the selected device.

---

**Note:** If automatic pairing fails, at the prompt, enter the passkey for the target device and touch **OK**.


---

Your phone is now paired with the target device, and ready to transfer information via Bluetooth.



## Internet connection mode

Use Internet connection mode to share your device's 4G internet connection with another device that connects to your device via USB cable.

1. From the Home screen, touch  **Menu** → **Settings** → **Wireless & network** → **Internet connection mode**.
2. Connect the other device to the phone via USB cable.
3. Touch **USB Tethering** to turn Internet connection mode On or Off. When On, a check appears in the check box.

---

**Note:** Using your phone as a tethered wireless internet connection consumes battery power and increases your data usage. Roaming while using your phone as a tethered wireless internet connection will incur extra data charges.

---

## VPN


You can use your phone's VPN (Virtual Private Network) feature to connect to VPNs.

---

**Important!:** Before you can use a VPN you must add it to your phone. (For more information, refer to “*Adding a VPN*” on page 144.)

---

### Connecting to a VPN

1. From the Home screen, touch  **Menu** → **Settings** → **Wireless & networks** → **VPN settings**.
2. Touch the desired VPN connection in the **VPNs** list.
3. Enter a password at the prompt, then touch **OK**. Your phone completes the VPN connection.

### Adding a VPN

To add a VPN to your phone's **VPNs** list, see “*VPN settings*” on page 144.

## Memory Card

Your phone supports optional, removable microSD™ or microSDHC™ memory cards of up to 32 GB capacity, for storage of music, pictures, videos, and other files.

### Installing and Removing a Memory Card

For information about installing and removing a memory card, see “*Memory Card*” on page 18.

---

**Important!** To prevent damage to information stored on the memory card, unmount the card before removing it from the phone.

---


## Format a Memory Card

Formatting prepares a used microSD Memory Card for use with your phone by erasing all content and adding required folders.

---

**Caution!** Do not routinely format Memory Cards when you simply wish to delete some files. Repeated formatting of a Memory Card can shorten its useful life.

---

1. From the Home screen, touch  **Menu** → **Settings** → **SD Card & phone storage**.
2. Touch **Unmount SD card**.
3. After unmounting the SD card, touch **Format SD card**.
4. Follow the prompts to confirm the formatting of the card.

## ***Transferring Files to a Memory Card***

1. Attach your phone to the computer with the USB Data Cable. Your phone recognizes the connection and the **USB mass storage** screen appears in the display.
2. Touch **Connect storage to PC** to enable copying of files between your computer and the memory card. An **Autoplay** window pops up on your computer's display.
3. In the Autoplay pop-up, select **Open folder to view files using Windows Explorer**. A Windows Explorer window appears on your computer's display.
4. Within the Windows Explorer window, drag and drop files from the PC to the memory card installed in your phone.
5. When finished, in the **USB mass storage** screen on your phone, Touch **Disconnect storage from PC**. The Windows Explorer window closes. You can now disconnect the USB Data Cable.


## Section 11: Applications

---

Applications display on the Applications screens to provide access to your phone's applications.

You can also place shortcuts to applications on the Home screen, for quick access to the application. (For more information, refer to “*Adding Applications to a Home Screen panel*” on page 37.)



### Accessing Applications

1. Navigate to a Home screen panel, then touch  **Applications**.
2. Sweep your finger right or left to scroll the Applications screens.
3. Touch an application's icon to launch the application.


### Customizing the Applications Screens

#### Choosing a view

By default, application icons appear in Grid view. You can change the view to List view.

1. Navigate to a Home screen panel, then touch  **Applications**.
2. Touch  **Menu** → **List view / Grid view**.




### Moving Application icons

With the Applications screen in Grid view, you can arrange the application icons to suit yourself. This includes replacing the Primary Shortcut icons, except for the **Home** icon (). (For more information, refer to “*Editing the Primary Shortcuts*” on page 32.)

---

**Note:** The **Edit** option is not available with the Applications screen in List view.

---

1. Navigate to a Home screen panel, then touch  **Applications**.
2. Touch  **Menu** → **Edit**.
3. To move an application icon, touch and hold it, then drag it to a new location.
4. When you are finished, touch  **Menu**, then touch **Save**.

## AllShare

Share your media content with other DLNA certified™ (Digital Living Network Alliance) Devices over Wi-Fi connections.

---


**Note:** You must activate Wi-Fi and connect to a Wi-Fi network to use this application. (For more information, refer to “Wi-Fi” on page 106.)

---

With **AllShare**, you can share media files stored on your phone or download media files from other devices for later sharing.

### Setting Up AllShare

Before using AllShare, you must setup its parameters.


1. From the **Applications** screen, touch  **AllShare**.
2. Touch **Settings**. The following options are available:
  - **Media server name:** Enter or change the name of your phone, then touch **Save**.
  - **Share media:**
    - **Share picture:** When enabled, allows sharing of pictures stored on your phone.

- **Share video:** When enabled, allows sharing of video stored on your phone.
- **Share audio:** When enabled, allows sharing of music and songs stored on your phone.


- **Access point network:** Select a Wi-Fi hotspot. (For more information, refer to “*Scanning and Connecting to a Wi-Fi Network*” on page 107.)
- **Copy from other devices:** You can set your phone to **Always accept** media file uploads, **Always ask** you for approval, or **Always reject** media file uploads from other devices.

3. Touch  to return to the previous page.



### Connecting with Other Devices

1. From the **Applications** screen, touch  **AllShare**.
2. Power on the device you wish to connect with Allshare on your phone.
3. Touch **Remote device**. Your phone begins searching for compatible Wi-Fi devices.
4. Select a device to connect to AllShare on your phone, and follow the prompts to complete the connection.

## Selecting Media to Play


1. From the **Applications** screen, touch  **AllShare**.
2. Select **Videos**, **Audio**, or **Pictures**.
3. Select a media file you want to transmit to the playback device.
4. Select a playback device from the on-screen list. If your desired playback device does not appear, touch **Refresh**.

## Receiving Media From Another Device

1. From the **Applications** screen, touch  **AllShare**.
2. Select a media storage device from the on-screen list. If your desired device does not appear, touch **Refresh**.
3. Select **Videos**, **Photos**, or **Music**.
4. Touch  **Menu**, then select a media file you want to download to your phone.
5. Follow the prompts to complete the download.


## Amazon

Shop for merchandise on Amazon.com.

- From the **Applications** menu, touch  **Amazon**.

## Amazon Kindle

Shop for, download, and view ebooks from Amazon.com.

- From the **Applications** menu, touch  **Amazon Kindle**.

## Amazon MP3

Shop for, download, and play MP3 music files from Amazon.com.

- From the **Applications** menu, touch  **Amazon MP3**.


## Appstore

Shop for applications from Amazon.com.

---


**Note:** This app requires you to enable **Settings** → **Applications** → **Unknown sources**. (For more information, refer to “Unknown sources” on page 160.)

---

- From the **Applications** menu, touch  **Appstore**.


## Audible

Shop for, download, and play audio books from Audible.com.

- From the **Applications** menu, touch  **Audible**.


## Browser

Your phone includes a full HTML Browser, to access the internet. For more information about using Browser, see “Browser” on page 79.

- From the **Applications** screen, touch  **Browser**.

## Calculator

Use your phone's Calculator to perform mathematical calculations.



- From the **Applications** screen, touch  **Calculator**.

## Calendar

Record events and appointments to manage your schedule.

1. From the **Applications** screen, touch  **Calendar**.
2. Touch a tab to choose a calendar view:
  - **Month**: Display the current month, and scroll to other months.
  - **Week**: Display the current week, and scroll to other weeks.
  - **Day**: Display today's schedule, and scroll to other days.
  - **List**: Display events in a chronological list.
3. Touch  **Menu** for these options:
  - **Create**: Add a new event to the calendar.
  - **Go to**: Display a specific date.
  - **Today**: Display today's events.
  - **Search**: Search for an event by name.
  - **Delete**: Delete an event.
  - **Settings**: Customize the calendar.

## Customizing the Calendar



1. From the **Applications** screen, touch  **Calendar**.
2. Touch  **Menu**, then touch **Settings** to configure these settings:
  - **View settings:**
    - **Calendars:** View all your calendars.
    - **Calendar sync:** Synchronize calendars from multiple accounts.
    - **Default view:** Set the default view when Calendar opens.
    - **View days as:** Choose a view for a day's events. Select a type: Time grid, or Event list.
    - **First day of week:** Choose a day to begin each week.
    - **Hide declined events:** Enable or disable display of declined events.
    - **Lock time zone:** Lock event time based on your current user-selected time zone). Select a time zone from within the Select time zone field.
    - **Select time zone:** Choose a time zone.

- **Notification settings:**

- **Set alerts and notifications:** Adjusts the event notification method. Choose from: Alert, Status bar notification, and Off.
- **Vibrate:** Activates this notification option. Selections are: Always, Only in Silent mode, or Never.
- **Select ringtone:** Assigns a ringtone to a calendar event notification.

## Sending Events via Bluetooth

Send events as vCalendar files to other Bluetooth devices.

1. From the **Applications** screen, touch  **Calendar**.
2. Touch an event to display its details.
3. Touch  **Menu**, then touch **Send via → Bluetooth**.
4. Follow the prompts to select a paired device, or pair with a new device. (For more information, refer to *"Pairing with a Bluetooth Device"* on page 111.)





## Sending Events via Email

Send events as vCalendar attachments in Email.

---

**Note:** To send Events via email, you must define an email account using the Email application. (For more information, refer to “Email” on page 74.)

---

1. From the **Applications** screen, touch  **Calendar**.
2. Select an event and touch it to display details.
3. Touch  **Menu**, then touch **Send via → Email**.
4. Continue creating the email, as desired. (For more information, refer to “Composing and Sending Email” on page 76.)

## Camera

Take pictures and record video with your phone’s built in Camera-Camcorder. (For more information, refer to “Camera” on page 96 and “Camcorder” on page 98.)

- From the **Applications** screen, touch  **Camera**.

## City ID

Subscribe to City ID to display city and state for incoming calls, and to look up city and state information for phone numbers.

- From the **Applications** menu, touch  **City ID**.

## Clock

The Clock application includes Alarm clock, World clock, Stopwatch, and Timer clock features.

- From the **Applications** screen, touch  **Clock**.

## Daily Perks

View local weather, news, and more.

- From the **Applications** menu, touch  **Daily Perks**.


## Desk Cradle

Launch a landscape mode screen for display and use when your device is docked in an optional desk cradle.

- From the **Applications** screen, touch  **Desk Cradle**.

## Downloads

Displays lists of content previously downloaded via the Internet.

- From the **Applications** screen, touch  **Downloads**.


## Email

Send and receive email using popular email services. (For more information, refer to “*Email*” on page 74.)

- From the **Applications** screen, touch  **Email**.


## Gallery

Use Gallery to view, capture, and manage pictures and videos. (For more information, refer to “*Gallery*” on page 103.)

- From the **Applications** screen, touch  **Gallery**.

## Gmail

Send and receive emails via Gmail, Google’s web-based email. (For more information, refer to “*Gmail*” on page 72.)

- From the **Applications** screen, touch  **Gmail**.


## Google+

Google+ makes messaging and sharing with your friends a lot easier. You can set up Circles of friends, visit the Stream to get updates from your Circles, use Messenger for fast messaging with everyone in your Circles, or use Instant Upload to automatically upload videos and photos to your own private album on Google+.

- From the **Applications** screen, touch  **Google+**.

## HD Games

Shop for High Definition games using the Browser.

- From the **Applications** screen, touch  **HD Games**.

## IMDb




Directly access Amazon’s IMDb (Internet Movie Database) without launching the Browser.

- From the **Applications** screen, touch  **IMDb**.

## Latitude

With Google Latitude, you can see the location of all of your friends on a list or on a map. You can also share or hide your location.


You must first set up your phone to use wireless networks to help pinpoint your location. Also, Latitude works best when Wi-Fi is enabled. (For more information, refer to “*Location & security*” on page 156 and to “*Wi-Fi*” on page 106.)

1. Navigate to a Home screen panel, touch , then touch **Settings** → **Wireless & networks** → **Wi-Fi settings**.
2. Touch **Wi-Fi**. A green check mark appears, indicating the feature is enabled. Your phone begins scanning for Wi-Fi Wireless Access Points (WAPs), or “hot spots”, listing the results of the scan under **Wi-Fi networks**.
3. Touch the desired Wi-Fi network listing to connect to it.
4. Log on to your Google account. (For more information, refer to “*Configuring Your Gmail Account*” on page 72.)
5. Navigate to a Home screen panel, then touch  **Applications** →  **Latitude**. Your Latitude screen appears in the display.

The following options are available:




-  **Latitude:**
  - **Map:** Show a map indicating your location. (For more information, refer to “*Maps*” on page 125.)
  - **Places:** Find locations of Restaurants, Cafes, Bars, Attractions, and More categories.
  - **Navigation:** Display directions to a location from a starting point.
  - **Check in** (appears only after you touch **Check in**, see below): Select your exact location from a pop-up list.
  - **Latitude:** Find family and friends.
  - **Location history:** Show your previous locations on a map.
  - **My Places:** Shows locations you have marked as a favorite such as restaurants, museums, parks, and so forth. Touch and hold on a location and when the screen displays with the address, touch the star in the upper-right corner. It will be listed in your Starred Places.
-  **Check in:** Select your exact location from a pop-up list.
-  **Add friends:** Select from your Contacts or Add via email address.
-  **Refresh friends:** Update available friends' locations.

## Additional Latitude Options

- From your Latitude screen, touch  to display the following additional options:
  - **Map view:** Show a map indicating your location. (For more information, refer to “Maps” on page 125.)
  - **Location settings:**
    - **Location reporting:** Choose whether to have your phone Detect your location, Set your location, or Do not update your location.
    - **Enable location history:** When enabled, tracks changes in your location.
    - **Manage your friends:** Add or remove friends who can share your location.
    - **Sign out of Latitude:** Sign out the current Google account. Lets you change accounts.
    - **Automatic check-ins:** When enabled, checks you in when you arrive at locations you designate.
    - **Check-in notifications:** When enabled, alerts you with suggestions to check in at places.
    - **Manage your places:** View and change your automatic check-in and muted places.

- **Add friends:** Select from your Contacts or Add via email address.
- **Check in:** Select your exact location from a pop-up list.
- **Refresh friends:** Update available friends' locations.

## Sharing your Location with Friends


1. From your Latitude screen, touch  to display your Latitude friends. At first, only your name is displayed.  
– or –  
From the Maps screen, touch  to display your Latitude friends. At first, only your name is displayed.
2. Touch , then touch **Add friends**.
3. Touch **Select from Contacts** or **Add via email address**.
4. Touch a Contact or enter an email address, then touch **Add friends**.
5. At the **Send sharing requests** prompt, touch **Yes**.

Your friend will receive an email or text message with your location marked on a map. They will also receive instructions on how to view your location from the web or use Latitude on their phone or tablet provided it is available. Once they acknowledge your request, their location will display on your phone. They can share their location from their computer, phone, or tablet.

For more information, go to <http://www.google.com/latitude>.

## Let's Golf 3

Play golf on your phone.

1. From the **Applications** screen, touch  **Let's Golf 3**.

## Maps

Use Google Maps to find your current location, search for destinations, and get detailed directions. (For more information, refer to “*Maps*” on page 85.)


1. From the **Applications** screen, touch  **Maps**.

2. Locate the top row of the application to access additional options:

-  **Maps:**
  - **Map:** Return to the map.
  - **Places:** Find locations of Restaurants, Cafes, Bars, Attractions, and More categories.
  - **Navigation:** Display directions to a location from a starting point.
  - **Latitude:** Launch Latitude and find family and friends. (For more information, refer to “*Latitude*” on page 122.)
  - **Location history:** Show your previous locations on a map.
  - **My Places:** allows you to see locations you have marked as a favorite such as restaurants, museums, parks, and so forth. Touch and hold on a location and when the screen displays with the address, touch the star in the upper-right corner. It will be listed in your Starred Places.

-  **Layers:** allows you to switch map views:
  - **Traffic:** (available only in selected areas) Real-time traffic conditions are displayed over roads as color-coded lines. Each color represents how fast the traffic is moving.
  - **Satellite:** Maps uses the same satellite data as Google Earth. Satellite images are not real-time. Google Earth acquires the best imagery available, most of which is approximately one to three years old.
  - **Terrain:** combines a topographical view of the area’s terrain with the current map location.
  - **Transit Lines:** displays the overlapping transit lines on your map.
  - **Latitude:** allows you to see your friend’s locations and share your location with them.
  - **My Maps:** displays a list of your preferred maps.
  - **Bicycling:** displays the overlapping cycling trails on your map.
  - **Wikipedia:** displays any Wikipedia markers and info on your map.
-  **My Location:** when touched, the location displays on the map with a blinking blue dot.

3. Touch  to access the following options:

- **Search:** allows you to search for a place of interest.
- **Directions:** Display directions to a location from a starting point.
- **Clear Map:** Remove all markings and layers you have added from the map.
- **More:** Access the same additional options as touching the Maps icon (.
- **Settings:**
  - **Cache Settings:** Set options to pre-fetch map tiles when not using Wi-Fi, and to clear the cache that holds map tiles.
  - **Location Settings:** View or change your Location settings. (See “*Additional Latitude Options*” on page 123.)
  - **Labs:** Test experimental Maps features not yet ready for “prime time”. These features may change, break, or disappear at any time. Touch a Lab to enable or disable it.
  - **Terms, Privacy & Notices:** Displays the Terms and Conditions, Privacy Policy, or Legal Notices information.
  - **About:** Displays general information about Google Maps, such as Version, Platform, Locale, Total data sent, Total data received, and more.

- **Help:** Access on-line instructions on using Maps.

## Navigating the Map

### Zooming

- Double-touch on the screen to zoom in.
- Touch Zoom in (+) or Zoom out (-).

### Scrolling

- Touch and drag on the screen to reposition the map in the display.

### Touch and Touch and hold

- **Touch and hold** on an area of the map to display pop-up information about the location.
- **Touch** an information balloon for these options:
  - **Map:** Move the map’s focus to this location.
  - **Directions:** Get driving, public transport, or walking directions.
  - **Call:** Call the number provided in the location information.
  - **Street view:** Get a street-level view of this location (if available).
  - **What’s nearby:** Get a list of nearby businesses and points of interest.
  - **Search nearby:** Enter search criteria to find nearby points of interest.
  - **Share this place:** Send the location information via Messaging, Email, Gmail, or Bluetooth.

- **Report a problem with the map:** Send an error report to Google Maps.

## Media Hub


Samsung Media Hub is your one stop for the hottest movie and TV content. With hundreds of titles available at your fingertips, entertaining on the go has never been easier. You can rent or purchase your favorite content and watch from the convenience of anywhere. Featuring the stunning viewing quality Samsung is known for, Samsung Media Hub is your gateway to mobile video like you've never experienced it before.

(For more information, refer to “Media Hub” on page 102.)

---

**Note:** Media Hub service requires a Media Hub account, and depends on service availability.

---


- From the **Applications** screen, touch  **Media Hub**.

## Memo

Create and manage text memos, and send memos via Bluetooth to paired Bluetooth devices.

- From the **Applications** menu, touch  **Memo**.


---

**Note:** You can send a memo via Bluetooth. After creating a memo, touch  **Menu** → **Send via** → **Bluetooth**, then follow the prompts to send the memo to a paired Bluetooth device. To send a saved memo, touch and hold on the Memo to launch Bluetooth. (For more information about using Bluetooth, see “Bluetooth” on page 111.)

---

## Messenger


Messenger lets you bring groups of friends together into a simple group conversation.

- From the **Applications** menu, touch  **Messenger**.



## Mobile TV

You can watch television shows on you device. Select from a list of options.

- From the **Applications** screen, touch  **Mobile TV**.

---

**Important!** After the trial period, charges for service apply.  
Contact U.S. Cellular® for details.

---

## Music Player

Play music files from an optional, installed memory card. (For more information, refer to “*Music Player*” on page 94.)

- From the **Applications** screen, touch  **Music Player**.

## My files


Find, view and manage files stored on an optional installed memory card. If the file is associated with an application on your phone, you can launch the file in the application.

1. From the **Applications** screen, touch  **My files**.
2. Touch a folder and scroll down or up until you locate a file.
3. Touch a file to launch it in the associated application (if the file is associated with an application).
4. While browsing files, use these controls:
  - Touch **Up** to go back up to a higher directory.
  - Touch **Home** to go back to the root directory.
  - Touch  **Menu** for these options:
    - **Share**: Send or upload the file using AllShare, Bluetooth, Email, Gmail, Messaging, Google+, Picasa, Wi-Fi, or YouTube.
    - **Create folder**: Create a new folder for storing files.
    - **Delete**: Erase selected file(s).
    - **View by**: Display files as a List, as a List and details, or as Thumbnails.
    - **List by**: Sort files by Time, Type, Name, or Size.

- **More:** Move, Copy, or Rename files; or change settings for My Files.

## Navigation

Google Maps Navigation is an internet-connected, turn-by-turn, GPS navigation system with voice guidance.

- From the **Applications** screen, touch  **Navigation**.
  - To receive better GPS signals, avoid using your device in the following conditions:
    - Inside a building or between buildings
    - In a tunnel or underground passage
    - In poor weather
    - Around high-voltage or electromagnetic fields
    - In a vehicle with tinted windows


## Places

Find places of interest near your Latitude location. (For more information about Latitude, see “*Latitude*” on page 122.)

- From the **Applications** screen, touch  **Places**.


## Play Books

With Google Play Books, you can find more than 3 million free ebooks and hundreds of thousands more to buy in the eBookstore.

- From the **Applications** menu, touch  **Play Books**.


## Play Music

Play music files from an optional, installed memory card.

- From the **Applications** screen, touch  **Play Music**.  
For more information, refer to “*Play Music App*” on page 88.


## Play Store

Google Play Store provides access to downloadable applications and games to install on your phone. Play Store also lets you provide feedback and comments about an application, or flag an application that might be incompatible with your phone.

1. From the **Applications** screen, touch  **Play Store**.
2. If not already logged in with your Google account, touch **Next**.
3. Touch **Sign in** and enter your Google account information.
4. Touch **Accept** to agree to the Android Market terms of service.

### Downloading a New Android Application

To download a new application, you will need to use your Google account to sign in to Play Store. The Google Play home page provides several ways to find applications. The home page features applications and includes a list of item applications by category, a list of games, a link to search, and a link to My apps.

1. From the **Applications** screen, touch  **Play Store**.

2. Browse through the categories, find an application you're interested in, and touch the name.
3. Read the application descriptions.

---

**Important!** If the selected application requires access to data or control of a function on your phone, Play Store displays the information the application will access.

Touch **OK** if you agree to the conditions of the application. Once you touch **OK** on this screen you are responsible for using this application on the phone and the amount of data it uses. Use this feature with caution.



- 
4. Touch **Install**.

---

**Note:** Use caution with applications which request access to any personal data, functions, or significant amounts of data usage times.

---

5. If prompted, follow the on-screen instructions to pay for the application.

6. Check the progress of the current download by opening the Notifications panel.
7. After the item is downloaded and installed on your phone, the content download icon  appears in the notification area of the status bar.
8. On the Google Play screen, touch  and then touch **My Apps**, touch the installed application in the list, and then touch **Open**.

---

**Tip:** The newly downloaded applications display in the applications list and are shown in alphabetical order if the View Type is set to Alphabetical grid or Alphabetical list, or at the end of the list if View type is set to Customizable grid.

---


---

**Note:** A data plan is required to use this feature. Charges may apply. Please contact U.S. Cellular® for further details.

---


## Portable Wi-Fi Hotspot

Use Portable Wi-Fi Hotspot to share your phone's network connection with a PC or other device through Wi-Fi, using your phone as the portable hotspot.

- From the **Applications** screen, touch  **Portable Wi-Fi Hotspot** → **Portable Wi-Fi Hotspot** to turn the service on. (For more information, refer to “*Portable Wi-Fi Hotspot*” on page 109 and “*Portable Wi-Fi Hotspot*” on page 139.)

## Quick office

Quickoffice™ is a Microsoft Office®-compatible application suite, that provides a central place for managing your documents on and off line.

- From the **Applications** screen, touch  **Quickoffice**.


## Search

With Google Search, you can search the Web and the contents of your phone's application list.

- From the **Applications** screen, touch  **Search**.

## Settings

Configure your phone to your preferences. (For more information, refer to “*Settings*” on page 137.)

- From the **Applications** screen, touch  **Settings**.


## Talk

Use Google Talk to chat with other Google Talk users. (For more information, refer to “*Google Talk*” on page 78.)

- From the **Applications** screen, touch  **Talk**.

## Task manager

View and manage active applications.

- From the **Applications** screen, touch  **Task manager**.

## Tone Room Deluxe

Find, purchase, and download ringtones and ringback tones.

- From the **Applications** screen, touch  **Tone Room Deluxe**.

## Video Player


Play and manage videos stored on an optional, installed microSD memory card. (For more information, refer to “*Video Player*” on page 100.)

- From the **Applications** menu, touch  **Video Player**.

## Voice Dialer

Voice Dialer is advanced speech recognition software that recognizes your spoken commands to dial phone numbers, create messages, and launch phone features such as Contacts, Calendar, and Music Player.

To use Voice Control, speak naturally into your phone, at a distance of 3-12 inches. There is no need to “train” Voice Dialer, it is designed to recognize natural speech.

- From the **Applications** screen, touch  **Voice Dialer**.

---


**Note:** At each step, Voice Dialer displays a list of available commands.

If Voice Dialer does not recognize your command, it will prompt you to confirm.


---

## Call <Name>


Place a call by speaking a contact name.

1. From the **Applications** screen, touch  **Voice Dialer**.
2. At the “**Listening**” prompt, say “**Call**”, followed by: < **A Name**>”, to call the default telephone number for a Contact. Or, say “Call”, followed by the type of number label.
3. Follow the prompts to confirm your selection and place the call.

## Dial <#>


1. From the **Applications** screen, touch  **Voice Dialer**.
2. At the “**Listening**” prompt, say “**Redial**”.
3. Follow the prompts to redial the most recent number called.

## Redial

1. From the **Applications** screen, touch  **Voice Dialer**.
2. At the “**Listening**” prompt, say “**Dial**”, followed by the digits of a phone number.
3. Follow the prompts to confirm your selection and place the call.

## Open <Menu>

Access an application by speaking the application name.

1. From the **Applications** screen, touch  **Voice Dialer**.
2. At the “**Listening**” prompt, say “**Open**”, followed by a menu item or application name.

## Voice Recorder

Record your voice or other sounds, and share recordings via Bluetooth, Messaging, or Gmail.

- From the **Applications** screen, touch  **Voice recorder**.

## Voice Search

Search your phone and the Internet using spoken criteria.

- From the **Applications** screen, touch  **Voice Search**.


## Your Navigator Deluxe

Provides all the features of an advanced car navigation system. Obtain turn-by-turn driving directions with GPS accuracy. Search for any destination (including gas stations, ATMs, restaurants, and more). View detailed maps of any location.

---

**Important!** Your Navigator Deluxe requires you to activate the GPS location function on your phone. (For more information, refer to “*Location & security*” on page 156.)

---

1. From the **Applications** menu, touch  **Your Navigator Deluxe**.

---

**Note:** If the GPS location function on your phone is inactive, follow the prompts to activate it. (For more information, refer to “*Location & security*” on page 156.)

---

---

**Tip:** The first time you launch Your Navigator Deluxe, your phone downloads Your Navigator Deluxe updates and applications not included with Your Navigator Deluxe to save storage. Activating Wi-Fi can save data charges during this download. (For more information, refer to “*Wi-Fi*” on page 106.)

---

2. From the Your Navigator Deluxe Home screen select one of the following options:
- **Drive To:** Obtain turn by turn directions to an address, airport, contact address, and more.
  - **Places:** Search for nearby businesses, the cheapest gas prices, and more.
  - **Maps & Traffic:** View your current location on a map and any traffic in the area.
  - **Local Apps:** Launch applications that enhance Your Navigator Deluxe sessions.

## YouTube


View and upload YouTube videos, right from your phone. (For more information, refer to “*YouTube*” on page 87.)

- From the **Applications** screen, touch  **YouTube**.



## Zappos

Shop for merchandise on Zappos.com.



- From the **Applications** menu, touch  **Zappos**.

## Section 12: Settings

---

This section explains Settings for customizing your phone.

### Accessing Settings

- Touch  **Home** →  **Menu** → **Settings**.

— or —

Navigate to a Home screen panel, then touch



The **Settings** menu appears in the display.

### Wireless & networks

Control your phone's wireless connections.

#### Wi-Fi settings

Your phone supports Wi-Fi 802.11 b/g/n.

#### Turning Wi-Fi On or Off

Turn your phone's Wi-Fi service on or off. When you turn Wi-Fi service on, your phone automatically searches for available, in-range Wireless Access Points (WAPs).

1. From the **Settings** menu, touch **Wireless & networks** → **Wi-Fi settings**.
2. Touch **Wi-Fi** to turn Wi-Fi On or Off. When on, a check mark appears in the check box.

#### Wi-Fi settings

Set up and manage wireless access points.

1. From the **Settings** menu, touch **Wireless & networks** → **Wi-Fi settings**.
2. Touch settings to configure:
  - **Wi-Fi settings**
    - **Wi-Fi**: Touch to turn Wi-Fi on or off. When on, a check mark appears in the check box.
    - **Network notification**: When on, displays a notification when an open network is available. Touch to turn on or off. When on, a check mark appears in the check box.
  - **Wi-Fi networks**: A list of nearby Network Access Points (NAPs) detected by your phone.
  - **Network Settings**
    - **Add Wi-Fi network**: Manually add a new Wi-Fi connection.
    - **Manage Networks**: Forget or Edit the settings for "remembered" networks, that is networks you've already connected to.
    - **Search**: Your phone begins scanning for nearby networks.

- **Advanced:** For more information, refer to “*Advanced Wi-Fi settings*” on page 138.

## Advanced Wi-Fi settings

1. From the **Settings** menu, touch **Wireless & networks** → **Wi-Fi settings** → **Advanced**.

- **Advanced**

- **Wi-Fi sleep policy:** Specify when to switch from Wi-Fi to mobile data for data communications. Touch to choose from **When screen turns off**, **Never when plugged in**, or **Never**.
- **MAC address:** View your phone's MAC address, needed for connecting to some secured networks (not configurable).
- **Proxy:** Touch to enter a proxy number.
- **Port:** Touch to enter a port number.

- **IP settings**

- **Use static IP:** Touch to use a static IP. When enabled, a check mark appears in the check box.
- **IP address:** When using a static IP, enter the IP address.
- **Gateway:** When using a static IP, enter the Gateway.
- **Netmask:** When using a static IP, enter the Netmask.
- **DNS 1:** When using a static IP, enter the DNS 1 value.
- **DNS 2:** When using a static IP, enter the DNS 2 value.

## Wi-Fi Direct settings

Wi-Fi Direct allows device-to-device Wi-Fi connections so you can transfer large amounts of data.

---

**Note:** For information on using Wi-Fi Direct, For more information, refer to “*Enabling Wi-Fi Direct*” on page 108.

---

1. From the **Settings** menu, touch **Wireless & networks** → **Wi-Fi Direct settings**.

A **Search for device** prompt pops-up.

---

**Note:** If you do not want this prompt to appear each time you access Wi-Fi Direct settings, touch **Do not show again**.

---

2. Touch **OK**.

The following options are available on the **Wi-Fi Direct settings** screen:

- **Wi-Fi Direct:** Touch to enable/disable Wi-Fi Direct.
- **Device name:** Touch to change or enter a device name.
- **Status:** Shows the current status of your phone's Wi-Fi Direct interface.
- **Disconnect Wi-Fi- Direct:** Disconnect the current connection.

- **Wi-Fi Direct devices:** Lists the available devices that can accept a Wi-Fi Direct connection.
3. To scan for Wi-Fi Direct devices, touch  **Menu** → **Scan for Device**.

## ***Portable Wi-Fi Hotspot***

Use Portable Wi-Fi Hotspot to share your phone's data network with up to 5 PCs or other devices through Wi-Fi.

---

**Note:** To use Portable Wi-Fi Hotspot, you need the Portable Wi-Fi Hotspot feature from U.S. Cellular<sup>®</sup>. Contact U.S. Cellular for more information.

Portable Wi-Fi Hotspot consumes battery power and uses data service. While the Portable Wi-Fi Hotspot is active, your phone's applications will use the Portable Wi-Fi Hotspot data feature allowance.

---

## Portable Wi-Fi Hotspot On or Off

1. From the **Settings** menu, touch **Wireless & networks** → **Portable Wi-Fi Hotspot**.
2. Touch **Portable Wi-Fi Hotspot** to turn Portable Wi-Fi Hotspot On or Off. When on, a check appears in the check box.

(For more information about activating your Portable Wi-Fi Hotspot, refer to “*Turning On Portable Wi-Fi Hotspot*” on page 109.)

---

**Note:** Using your phone as a Portable Wi-Fi Hotspot consumes battery power and increases your data usage. Roaming while using your phone as a Portable Wi-Fi Hotspot will incur extra data charges.

---

## Portable Wi-Fi Hotspot Settings

1. From the **Settings** menu, touch **Wireless & networks** → **Portable Wi-Fi Hotspot** → **Network Settings**.
2. Touch **Configure** to setup your Portable Wi-Fi Hotspot:

---

**Note:** The first time you touch **Configure**, you are prompted to confirm that you want to setup your Portable Wi-Fi Hotspot. Touch **Yes** to continue.

---

- **Automatic:** Automatically create an SSID and Key for your hotspot.
- **Manual:** Configure your Portable Wi-Fi Hotspot.
  - **Network Name** (SSID): View and edit your phone's name, used by other devices when connecting to your Portable Wi-Fi Hotspot.
  - **Broadcast SSID:** Enable to allow your device's Network Name (SSID) to be broadcast, so other devices can search for it. When enabled, a check appears in the check box. When disabled, your device is “hidden”, and your hotspot can only be accessed by devices you specifically allow.
  - **Security:** Choose a security level.

- **Password:** Touch to require a password to access your phone as a hotspot, and set a password.
- **Show password:** Touch to enable display of your password in the Password field. When disabled, the password is not shown.
- **Broadcast Channel:** Choose Auto to have the phone automatically choose a channel for broadcasting, or choose a channel.

---

**Tip:** By default, your phone's Portable Wi-Fi Hotspot password is your phone number.

---

3. Touch **Manage Devices** to view and manage devices you've allowed to connect to your Portable Wi-Fi Hotspot, then:
  - Touch **View Connected Devices** to view devices connected to your Portable Wi-Fi Hotspot.
  - Touch **Manage Allowed Devices** to manage a list of device you will allow to connect to your Portable Wi-Fi Hotspot.
    - Touch **Allow all devices** to connect to allow any device to connect.
    - Touch **Add device** to enter the MAC address for a new device.

4. Touch **Battery Management** to choose a time period to have Portable Wi-Fi Hotspot remain on after you turn it on (the default is 30 minutes). If you choose Never Turn-Off, the hotspot remains on until you turn it off.

---

**Note:** Using your phone as a Portable Wi-Fi Hotspot consumes battery power and increases your data usage. Roaming while using your phone as a Portable Wi-Fi Hotspot will incur extra data charges.

---

## Bluetooth

Your phone supports Bluetooth® 3.0.

### Bluetooth profiles

Bluetooth profiles are specifications for services supported by individual devices. Profiles improve the ability of different devices to work together. Your phone supports these Bluetooth profiles:

- **Headset:** HSP v1.1 profile supports use of a compatible Bluetooth headset for mono voice.
- **Handsfree:** HFP v1.5 profile supports Bluetooth headsets, and may also support other installed compatible Bluetooth devices with speakerphone capabilities.
- **Stereo:** A2DP v1.0 and AVRCP v1.0 profiles support delivery of stereo audio to a compatible Bluetooth device.
- **Phonebook Access:** PBAP v1.0 profile allows sharing of multiple name card and phonebook entries with a compatible Bluetooth device.
- **Object Push:** OPP v1.1 profile allows sending and receiving of contact name cards (vCard 2.1) and calendar events (vCalendar) between devices.

---

**Note:** This device does not support all Bluetooth profiles. For vehicle/accessory compatibility, contact U.S. Cellular®.

---

### Turning Bluetooth On or Off

Turn your device's Bluetooth service On or Off. For more information about using Bluetooth to exchange information with other Bluetooth devices, see see *"Bluetooth"* on page 111.

1. From the **Settings** menu, touch **Wireless & networks** → **Bluetooth settings**.
2. Touch **Bluetooth** to turn Bluetooth On or Off. When On, a check appears in the check box.

## Bluetooth settings

Use Bluetooth settings to manage Bluetooth connections, set your device's name, and control your device's visibility to other devices.

---

**Note:** Bluetooth must be turned On to access some settings.

---

1. From the **Settings** menu, touch **Wireless & networks** → **Bluetooth settings**.
2. Touch a setting to configure Bluetooth:
  - **Bluetooth:** Touch to turn Bluetooth On or Off. When On, a check appears in the check box.
  - **Device Name:** Your device's default name appears on screen. Touch to change the device name. Available when Bluetooth is turned On.
  - **Discoverable:** Control your phone's visibility to other devices' Bluetooth searches. Touch to turn On or Off. Available when Bluetooth is turned On.
  - **Discoverable time-out:** Select when your phone visibility to other devices ends: after 2 Minutes, 5 Minutes, 1 Hour, or Never.

- **Scan devices:** Touch to scan for nearby discoverable devices. After searching, touch a device to pair with it. For more information, see see *"Pairing with a Bluetooth Device"* on page 111.

## Airplane mode

When airplane mode is activated, all your phone's wireless connections are disabled, and you cannot make or receive calls or messages or connect to networks. While in airplane mode, you can use other features of your phone, such as playing music, watching videos, or other applications.

1. From the **Settings** menu, touch **Wireless & networks**.
2. Touch **Airplane mode** to activate or deactivate airplane mode. When activated, a check appears in the check box.

## Internet connection mode

Use Internet connection mode to share your device's 4G internet connection with another device that connects to your device via USB cable. For more information, refer to *"Internet connection mode"* on page 112.



## VPN settings

The VPN settings menu allows you to set up and manage Virtual Private Network (VPN) connection definitions.

### Adding a VPN

Before you add a VPN, you should contact the network support personnel for the VPN to determine which VPN protocol to use (PPTP, L2TP, L2TP/IPSec PSK, or L2TP/IPSec CRT) and the correct setting values for that protocol.

1. From the **Settings** menu, touch **Wireless & network** → **VPN settings**.
2. Touch **Add VPN** to set up a connection to a VPN.
3. Touch one of the following options:
  - **Add PPTP VPN:** Set up a connection to a VPN with Point-to-Point tunneling protocol.
  - **Add L2TP VPN:** Set up a connection to a VPN with Layer 2 tunneling protocol.
  - **Add L2TP/IPSec PSK VPN:** Set up a connection to a VPN with pre-shared key-based Layer 2/IPsec tunneling protocol.
  - **Add L2TP/IPSec CRT VPN:** Set up a connection to a VPN with Certificate-based Layer 2/IPsec tunneling protocol.

To establish a PPTP (Point-to-Point Tunneling Protocol) connection, enter or select values for the following settings:

1. VPN name (a name for this connection).
2. Set VPN server.
3. Enable Encryption.
4. DNS search domains.

To establish a L2TP (Layer 2 Tunneling Protocol) connection, enter or select values for the following settings:

1. VPN name (a name for this connection).
2. Set VPN server.
3. Enable L2TP secret.
4. Set L2TP secret.
5. DNS search domains.

To establish a L2TP/IPSec PSK (Pre-shared key based L2TP/IPSec) connection, enter or select values for the following settings:

1. VPN name (a name for this connection).
2. Set VPN server.
3. Set IPSec pre-shared key.
4. Enable L2TP secret.
5. Set L2TP secret.

6. DNS search domains.

**To establish a L2TP/IPSec CRT (Certificate based L2TP/IPSec) connection, enter or select values for the following settings:**

1. VPN name.
2. Set VPN server.
3. Enable L2TP secret.
4. Set L2TP secret.
5. Set user certificate.

---

**Note:** A user certificate must be installed to use this setting.

---

6. Set CA certificate.

---

**Note:** A CA certificate must be installed to use this setting.

---

7. DNS search domains.

## **Mobile networks**

Before you use applications such as Google Maps and find your location or search for places of interest, you must enable the Mobile networks options.

- From the **Settings** menu, touch **Wireless & network** → **Mobile networks**.

The following options display:

### **Use Packet Data**

To activate access to U.S. Cellular's data network (making it possible to use such applications such as Browser, Email, and YouTube), this option must be enabled. It is enabled by default.

- Touch **Use packet data** to create a check mark and activate the feature.

### **Data Roaming**

Data roaming lets you connect to your wireless provider's partner networks and access data services when you are out of U.S. Cellular's area of coverage.

- Touch **Data roaming** to create a check mark and activate the feature.

## System selection

You can select whether your phone supports roaming outside your home area in U.S. Cellular's network.

1. From the **Settings** menu, touch **Wireless & networks** → **Mobile networks** → **System select**.
2. Select one of the following options:
  - **LTE/CDMA**: Lets your phone automatically access LTE or CDMA mobile networks when available.
  - **CDMA**: Restricts your phone to CDMA mobile networks. When you select this option, you are prompted to also choose one of the following Roaming options:
    - **Home only**: Restrict your phone to your home network's coverage area. When outside the coverage area, your phone will not roam, and call functions and other wireless features will not be available.
    - **Automatic**: Allow your phone to automatically acquire service based on default settings, using U.S. Cellular's network and the networks of roaming partners.

## Call settings

### ***Voicemail***

Review and/or update the Voicemail number for accessing your voice mailbox.

1. From the **Settings** menu, touch **Call settings** → **Voicemail**. Your Voicemail number appears in the display.
2. To change your voice mailbox access number, touch **Voicemail number**. The **Voicemail number** pop-up and a phone-style numeric keypad appear in the display.
3. Enter the new voice mailbox access number and touch **OK**.

## Ignore with message

Create messages to use when rejecting incoming calls. (For more information, refer to “*Sending Calls to Voicemail*” on page 41.)

1. From the **Settings** menu, touch **Call settings** → **Ignore with message**.
2. Touch **Create**.
3. Enter the message text, then touch **Save**.

---


**Note:** To change a message, touch it, enter any changes, then touch **Save**.

To erase messages, touch  **Menu** → **Delete**.

---

## View call timer

View your phone's call time counters.

1. From the **Settings** menu, touch **Call settings** → **View call timer**. The Last call, Outgoing Calls, Incoming Calls, All calls, Last Reset, Lifetime Calls, All Data, Sent Data, Received Data, and Lifetime Data timers and counters appear.
2. To reset all timers and counters except Lifetime Calls and Lifetime Data, touch  **Menu** → **Reset**.

## Auto retry

When enabled, your phone will automatically re-attempt a call when it encounters a network busy signal.

1. From the **Settings** menu, touch **Call settings**.
2. Touch **Auto retry** to enable or disable automatic call retry. When enabled, a check mark appears in the check box.

## DTMF tones

Set the length of DTMF (Dual Tone Multiple Frequency) tones that your phone sends. DTMF tones are used as input by some automated call systems.

1. From the **Settings** menu, touch **Call settings** → **DTMF tones**.
2. Touch **Normal** or **Long**.

## TTY mode

When enabled, TTY Mode allows your phone to work with a TTY device attached to the Headset Jack. Before using your phone with a TTY device, you'll need to enable TTY Mode.

1. From the **Settings** menu, touch **Call settings** → **TTY mode**.
2. Touch **TTY Off**, **TTY Full**, **TTY HCO** (TTY + Hear), or **TTY VCO** (TTY + Talk).

## Call Restrictions

Call Restrictions lets you limit calls made with and to your phone

1. From the **Settings** menu, touch **Call settings** → **Call Restrictions**.
2. Touch **Incoming** to choose to **Allow All** Incoming calls, **Allow Contacts** Incoming calls only, or to **Allow None**.
3. Touch **Outgoing** to choose to **Allow All** Outgoing calls, **Allow Contacts** Outgoing calls only, or to **Allow None**.

## Privacy settings

When enabled, Privacy settings encrypts your voice calls for enhanced privacy.

1. From the **Settings** menu, touch **Call settings**.
2. Touch **Privacy settings** to enable or disable voice privacy. When enabled, a check mark appears in the check box.

## Auto Answer

When enabled Auto Answer lets you set your phone to automatically answer calls when you receive them or after a few seconds delay.

1. From the **Settings** menu, touch **Call settings**.
2. Touch **Auto Answer**, then select **Off**, **After 1 Second**, **After 3 Seconds**, or **After 5 Seconds**.

## Emergency Number

Emergency Numbers lets you set up to 3 numbers that your phone will be able to call with your phone in Airplane Mode or locked. (For more information, refer to “*Dialing Emergency Numbers*” on page 39.)

---

**Note:** 911 is preset as one of the Emergency numbers.

---

1. From the **Settings** menu, touch **Call settings** → **Emergency Number**.
2. Touch one of the emergency numbers to change it or enter a new value.
3. To save your changes, touch **Save**.

## Sound

### Silent mode

Temporarily silence all the sounds your phone makes except for media playback and alarms.

1. From the **Settings** menu, touch **Sound**.
2. Touch **Silent mode** to enable or disable silent mode.

When enabled, a check mark appears in the check box.

### Vibrate

When enabled, your phone vibrates to alert you to incoming calls, as well as playing the call ringtone.

- From the **Settings** menu, touch **Sound** → **Vibrate** to set your phone to Always vibrate, Never vibrate, vibrate Only in silent mode, or Only when not in silent mode.

---

**Note:** The Vibrate setting is independent of other call sounds settings. For example, if you have Silent mode enabled with Vibrate set to Always, your phone won't play a ringtone, but will vibrate for an incoming call.

---

## Volume

Adjust the volume levels for incoming call and notification ringtones.

1. From the **Settings** menu, touch **Sound → Volume**.
2. Touch and drag the slider to set **Incoming call volume**.

---

**Note:** You can also adjust **Incoming call volume** from the Home screen by pressing the **Volume Key**.

---

3. Touch and drag the slider to set **Media volume**.

---

**Note:** You can set **Media volume** during playback by pressing the **Volume Key**.

---

4. Touch and drag the slider, or press the Volume key, to set **System volume**.
5. Touch **Use incoming call volume for notifications** to set notification tones to the same volume as the incoming call ringer. (When enabled, a check mark appears in the check box.)  
– or –  
Touch and drag the slider to set **Notification volume**.
6. Touch **OK** to save your setting(s).

## Phone ringtone

Choose a default ringtone for incoming voice calls.

---

**Tip:** You can also set songs as ringtones for all calls, or for a selected contact. (For more information, refer to “*Setting a song as a ringtone*” on page 95.)

---

1. From the **Settings** menu, touch **Sound → Phone ringtone**.
2. Touch a ringtone to hear a sample and select it.
3. Touch **OK** to save the setting.

## Notification ringtone

Select a default ringtone for message, alarm, and other notifications.

---

**Tip:** You can also set songs as alarm ringtones. (For more information, see “*Setting a song as a ringtone*” on page 95.)

---

1. From the **Settings** menu, touch **Sound → Notification ringtone**.
2. Touch a ringtone to hear a sample and select it.
3. Touch **OK** to save the setting.

## Audible touch tones

When enabled, tones play for when you dial numbers on the Phone Dialer.

1. From the **Settings** menu, touch **Sound**.
2. Touch **Audible touch tones** to enable or disable tones.  
When enabled, a check mark appears in the check box.

## Audible selection

When enabled, tones play when you touch the screen for selections (other than the Phone Dialer).

1. From the **Settings** menu, touch **Sound**.
2. Touch **Audible selection** to enable or disable tones.  
When enabled, a check mark appears in the check box.

## Screen lock sounds

When enabled, sounds play when you lock or unlock the screen. (For more information, refer to “*Securing Your Phone*” on page 19.)

1. From the **Settings** menu, touch **Sound**.
2. Touch **Screen lock sounds** to enable or disable screen lock sounds. When enabled, a check mark appears in the check box.



## Haptic feedback

When enabled, the phone vibrates to indicate screen touches and other interactions.

- From the **Settings** menu, touch **Sound → Haptic feedback** to enable or disable screen touch feedback vibration. When enabled, a check mark appears in the check box.

## Vibration intensity

When Haptic feedback option is enabled, lets you adjust the intensity of the Haptic feedback vibration.

1. From the **Settings** menu, touch **Sound → Vibration intensity**. The **Vibration intensity** popup appears.
2. Touch and slide the setting to change it.
3. Touch **OK** to save your new setting.

## Emergency tone

When enabled (the default setting) and during an Emergency (911) Call, the phone plays a tone that emergency personnel can use to locate your phone.

---

**Caution!** When you are endangered by intruders, you should disable **Emergency tone** before placing an Emergency Call.

---

- From the **Settings** menu, touch **Sound → Emergency tone**. The following options are available:
  - **Off**: Disables Emergency tone playback.
  - **Alert**: Enables Emergency tone playback.
  - **Vibrate**: Your phone vibrates when you place an Emergency Call.

## Display

### Font style

Select the font used to display text in screens.

1. From the **Settings** menu, touch **Display → Font style**.
2. Touch a font to select it. You are prompted to verify your selection.
3. Touch **Get fonts online** to download additional fonts.

### Brightness

Set the default screen brightness.

1. From the **Settings** menu, touch **Display → Brightness**.
2. Touch **Automatic brightness** to enable or disable automatic screen brightness adjustment to ambient light levels. When enabled, a check appears in the box.
3. With **Automatic brightness** disabled, touch and drag the slider to set the brightness.
4. Touch **OK** to save the setting.

### Auto-rotate screen

Enable or disable automatic rotation of the screen when you turn the phone clockwise or counterclockwise.

1. From the **Settings** menu, touch **Display**.
2. Touch **Auto-rotate screen** to enable or disable automatic screen orientation. When enabled, a check appears in the box.

### Animation

Set the level of animations for transitions from one window to another.

1. From the **Settings** menu, touch **Display → Animation**.
2. Touch **No animation**, **Some animations**, or **All animations**.

## Screen timeout

Set the length of delay between the last key press or screen touch and the automatic screen timeout (dim and lock).

1. From the **Settings** menu, touch **Display** → **Screen timeout**.
2. Touch a setting (**15 seconds** / **30 seconds** / **1 minute** / **2 minutes** / **10 minutes**) to select it.

## Keypad timeout

Set the length of delay between the last key press or screen touch and the automatic keypad timeout (dim and lock).

1. From the **Settings** menu, touch **Display** → **Keypad timeout**.
2. Touch a setting (**1.5 seconds** / **6 seconds** / **Always off** / **Always on**) to select it.

## Power saving mode

When enabled, your phone will automatically analyze the screen and adjust the brightness to conserve battery power.

1. From the **Settings** menu, touch **Display**.
2. Touch **Power saving mode** to enable or disable the mode. When enabled, a check appears in the check box.

## Power saving mode

When enabled, Power saving mode extends available usage time of your phone by activating the Power saving mode settings when the battery charge drops to a level you select.

## Use Power saving mode

Enable or disable Power saving mode.

1. From the **Settings** menu, touch **Power saving mode**.
2. Touch **Use Power saving mode** to enable or disable Power saving mode. When enabled, the check mark in the box to the left lights.

## Power saving settings

Choose which actions your phone will take when battery power drops to the percentage you set with **Power saving mode on**.

1. From the **Settings** menu, touch **Power saving mode** → **Power saving settings**. The following options are available:

- **Power saving mode on:** Select at what level of battery charge your phone enters Power saving mode. The following options are available:
  - **10% battery power**
  - **20% battery power**
  - **30% battery power**
  - **40% battery power**
  - **50% battery power**

- **Power saving mode settings:**

- **Turn off Bluetooth:** Disables Bluetooth when battery power drops.
- **Turn off GPS:** Disables GPS reception when battery power drops.
- **Turn off Sync:** Disables Sync function when battery power drops.
- **Brightness:** Enables/disables your selected Brightness level.
- **Brightness:** Choose the screen brightness level used when battery power drops.
- **Screen timeout:** Choose how long the screen remains at the Brightness level before turning off.

2. Touch or select values for the desired Power saving mode options.

### Power saving tips

- From the **Settings** menu, touch **Power saving mode** → **Power saving tips** for additional information on how to select Power saving mode settings.

## Location & security

### My Location

#### E911

Indicates your phone supports E911 location service. This option cannot be disabled.

#### Standalone GPS services

Enable or disable location service from Standalone GPS services.

---

**Note:** Standalone location services must be enabled to use some applications.

---

---

**Note:** To receive better GPS signals, avoid using your device in the following conditions:

- Inside a building or between buildings
  - In a tunnel or underground passage
  - In poor weather
  - Around high-voltage or electromagnetic fields
  - In a vehicle with tinted windows
- 

---

**Important!** By selecting **Standalone GPS services**, you are allowing access to all location information by any third party through web access or any software or peripheral components you choose to install, download, add or attach to the device or any other means. Enabling this functionality could pose certain risks to users of this device.

---

1. From the **Settings** menu, touch **Location & security**.
2. Touch **Standalone GPS services** to enable or disable location services based on Standalone GPS. When enabled, a check mark appears in the check box.

## Google location services

Enable or disable location services from Google, Inc.

---

**Note:** Google location services must be enabled to use some applications.

---

**Important!** By selecting **Google location services**, you are enabling Google location-enabled services access to certain location information available through this network or device.

---

1. From the **Settings** menu, touch **Location & security**.
2. Touch **Google location services** to enable or disable Google location services. When enabled, a check mark appears in the check box.

## Screen unlock settings

The default lock screen prevents accidental call dialing or activation of features or applications.

To protect your phone from unauthorized use, use a personal screen unlock pattern, a Personal Identification Number (PIN), or a password.

For more information about using the lock and unlock features of your phone, see *"Securing Your Phone"* on page 19.

## Set screen lock

Choose settings for unlocking your screen.

For more information about using the lock and unlock features of your phone, see “*Securing Your Phone*” on page 19.

1. From the **Settings** screen, touch **Location & security**.
2. Touch **Set screen lock/Change screen lock** for these settings:
  - **None**: Touch to disable all screen lock settings.
  - **Pattern**: A screen unlock pattern is a touch gesture you create and use to unlock your device. Follow the prompts to create or change your screen unlock pattern.
  - **PIN**: Touch to create a Personal Identification Number to use for unlocking the screen.
  - **Password**: Touch to create a password for unlocking the screen.
3. Follow the prompts to create or change your screen unlock pattern.

## Passwords

### Visible passwords

When enabled, password characters will display briefly as you touch them while entering passwords.

1. From the **Settings** menu, touch **Location & security**.
2. Touch **Visible passwords** to enable or disable brief displays of password characters. When enabled, a check mark appears in the check box.

## Device Administration

### Select device administrators

Add or remove device administrators.

1. From the **Settings** menu, touch **Location & security**.
2. Touch **Select device administrators**.

## Credential storage

### Use secure credentials

You can install credentials from an optional installed memory card, and use the Credential storage settings to allow applications to access the secure certificates and other credentials.

---

**Note:** You must have installed encrypted certificates from a memory card to use this feature.

---

1. From the **Settings** menu, touch **Location & security**.
2. Touch **Use secure credentials** to enable or disable.  
When enabled, a check mark appears in the check box.

### Install encrypted certificates

Install encrypted certificates from an optional installed memory card.

---

**Note:** You must have installed a memory card containing encrypted certificates to use this feature.

---

1. From the **Settings** menu, touch **Location & security**.
2. Touch **Install encrypted certificates**, then choose a certificate and follow the prompts to install.

## Set password

Set or change a password to protect credentials.

1. From the **Settings** menu, touch **Location & security**.
2. Touch **Set password**, then follow the prompts.

### Clear storage

Clear stored credentials and reset the password.

---

**Note:** This setting only appears if you have installed encrypted certificates.

---

1. From the **Settings** menu, touch **Location & security**.
2. Touch **Clear storage** to clear stored credentials and reset the password.



## Applications

You can download and install applications from Android Market, or create applications using the Android SDK and install them on your phone. Use Applications settings to manage applications on your phone.

---

**Warning!** Because this device can be configured with system software not provided by or supported by Google or any other company, end-users operate these devices at their own risk.

---

### Unknown sources

When enabled, allows installation of applications from sources other than the Android Market.


1. From the **Settings** menu, touch **Applications**.
2. Touch **Unknown sources** to enable or disable the setting. When enabled, a check mark appears in the check box.

### Quick launch

Touch this setting to assign pre-defined keyboard shortcuts to Apps installed on your phone.

## Manage applications

Manage and remove applications from your phone.

1. From the **Settings** menu, touch **Applications** → **Manage applications**. The following lists are available:
  - **Downloaded**: All applications that you have downloaded and installed on your phone.
  - **All**: All applications installed on your phone.
  - **On SD card**: All applications installed on the microSD memory card.
  - **Running**: All applications currently running in phone memory.
2. Touch the tab for the list you want to view.
3. Touch an application to view and update information about the application, including memory usage, default settings and permissions.
4. Touch  **Back** to return to Applications settings.

## Running services

View and control services running on your phone.

---


**Warning!** Not all services can be stopped, and stopping services may have undesirable consequences on the application or Android System.

---

1. From the **Settings** menu, touch **Applications → Running services**.
2. To stop a service, touch the service, then touch **Stop** at the confirmation prompt.

## Memory usage

View lists of applications and the amount of memory used by each.

1. From the **Settings** menu, touch **Applications → Memory usage**. The following lists are available:
  - **Downloaded**: All applications that you have downloaded and installed on your phone.
  - **All**: All applications installed on your phone.
  - **On SD card**: All applications installed on the microSD memory card.
  - **Running**: All applications currently running in phone memory.
2. Touch the tab for the list you want to view.
3. Touch  **Menu** to sort the list by the amounts of memory used to store applications or alphabetically by application names.
4. Touch an application to view its information, to control its running, and to move it to the microSD card or phone memory or un-install it, if possible.

## Battery use

View a list of phone subsystems and the percentage of battery power used by each of them.

- From the **Settings** menu, touch **Applications → Battery use**. Touch an item to view subsystem information.

## Development

Set options for application development.

### USB debugging

When enabled, allows debugging of a phone application when the phone is attached to a PC by a USB cable.

---

**Note:** This setting is used for application development purposes.

---

1. From the **Settings** menu, touch **Applications → Development**.
2. Touch **USB debugging** to enable or disable the setting. When enabled, a check mark appears in the check box.

## Allow mock locations

This setting is used by developers when developing location-based applications.

---

**Note:** This setting is used for application development purposes.

---

1. From the **Settings** menu, touch **Applications → Development**.
2. Touch **Allow mock locations** to enable or disable the setting. When enabled, a check mark appears in the box.

## Accounts & sync

Set up and manage your accounts, including your Google and Backup Assistant accounts.

### General sync settings

#### Background data

When enabled, all accounts can sync, send, and receive data at any time, in the background.

---

**Important!** Disabling background data can extend battery life and lower data use. Some applications may still use the background data connection, even if this setting is disabled.

---

1. From the **Settings** menu, touch **Accounts & sync**.
2. Touch **Background data** to enable or disable the setting.  
When enabled, a check mark appears in the check box.

#### Auto-sync

When enabled, all accounts sync data at any time, automatically.

1. From the **Settings** menu, touch **Accounts & sync**.
2. Touch **Auto-sync** to enable or disable the setting. When enabled, a check mark appears in the check box.

## Manage accounts

Use Manage accounts to set up and configure your accounts.

---

**Note:** Available settings depend on the type of account. Not all settings are available for all accounts.

---

1. From the **Settings** menu, touch **Accounts & sync**.
2. Under **Manage accounts**, touch the account to modify its settings.

For more information about managing Google account, see “*Managing a Google account*” on page 55.

For more information about managing a Corporate Exchange account, see “*Managing a Microsoft Exchange account*” on page 56.

## Adding an account

1. From the **Settings** menu, touch **Accounts & sync**
2. Under **Manage accounts**, touch **Add account** and follow the prompts to enter your credentials and set up the account.

---

**Tip:** For more information about adding accounts, see *“Accounts”* on page 54.

---

## Removing an account

---

**Important!** Removing an account also deletes all of its messages, contacts and other data from the phone.

---

1. From the **Settings** menu, touch **Accounts & sync**.
2. Touch an account to access its settings.
3. Touch **Remove account**, then touch **Remove account** at the prompt to remove the account and delete all its messages, contacts, and other data.

## Privacy

Use Privacy settings to manage use of personal information by your phone.

### Personal Data

#### Factory data reset

Use Factory data reset to return your phone to its factory defaults. This setting erases all data from your phone, including your Google or other email account settings, system and application data and settings, and downloaded applications. It will not erase current system software and bundled applications, or files stored on an optional installed memory card, such as music or photos.

1. From the **Settings** menu, touch **Privacy**.
2. Touch **Factory data reset**, then follow the prompts to perform the reset.

## SD card & phone storage

Manage the use of memory resources in your phone's internal memory, and on an optional installed memory card.

### External SD card

1. From the **Settings** menu, touch **SD card & phone storage**.
2. View **Total space** and **Available space** memory usage on an optional installed memory card (not user-configurable).
3. Touch **Unmount SD card** to prepare the memory card for safe removal or formatting. (For more information, see *"Removing a Memory Card"* on page 19.)
4. Touch **Format SD card** to erase the memory card and prepare it for use with your phone. (For more information, see *"Format a Memory Card"* on page 113.)

## System storage

View the amount of your phone's internal user memory available for your use. Your phone contains 2GB of internal user memory.

---

**Note:** This option cannot be configured.

---

- From the **Settings** menu, touch **SD card & phone storage**.

## Search

Search settings let you set the boundaries for your Web and internal phone searches.

### Google Search settings

- From the **Settings** menu, touch **Search**. The following options are available:
  - **Google search:**
    - **Clear history:** Choose whether to show your personalized search history.
    - **Use My Location:** Use My Location to filter Google search results and information from other Google services.
    - **Search on google.com:** Use your local domain (www.google.com) to filter Google search results and information from other Google services.
    - **Terms of Service:** View the latest Google Search terms of service using the Browser.
    - **Open Source Licenses:** View the latest licenses for Open Source software used in Google Search.

## Language & keyboard

### Language settings

#### Select locale

Set the language used by your phone's screens.

1. From the **Settings** menu, touch **Language & keyboard** → **Select locale**.
2. Select a language/locale from the list.

#### User dictionary

Add or remove words from the user dictionary on your phone.

- From the **Settings** menu, touch **Language & keyboard** → **User dictionary**.
  - To add a word, touch  **Menu** → **Add**; enter the word; and touch **OK**.
  - To remove a word, touch it, and select **Delete** from the pop-up.

## Text settings

Configure text entry options to your preferences.

### Select input method

Select the default on-screen keypad that appears when you touch a text entry field.

1. From the **Settings** menu, touch **Language & keyboard** → **Select input method**.
2. Select **Samsung keypad** or **Swype**.

---

**Note:** For details about these on-screen keypads, see *“Entering Text”* on page 46.

---

## Swype

Configure Swype settings. Swype is a new way to enter text by gliding your finger over the characters on the keyboard. For more information, see *“Using the Swype Keyboard”* on page 51.

1. From the **Settings** menu, touch **Language & keyboard** → **Swype** to enable/disable Swype.
2. Touch **Swype** (Swype settings) to access the following options:

Touch items to enable or disable the setting. When enabled, a check mark appears in the check box.

- **Select Input Method:** Switch between Samsung keypad and Swype.
- **How to Swype:** Provides tips on how to use Swype.
- **Personal dictionary:** Setup and manage your own dictionary.
- **Preferences:** View and modify the following Swype options:
  - **Audio feedback:** When enabled, plays sounds as you enter text.
  - **Vibrate on keypress:** check this field to have the phone vibrate each time you touch a key on the keyboard.
  - **Show tips:** When enabled, the phone displays helpful tips.



- **Auto-spacing:** When enabled, inserts spaces automatically when you pause entering text.
- **Auto-capitalization:** When enabled, automatically capitalizes the first letter of the first word in a sentence.
- **Show complete trace:** When enabled, briefly display the Swype trace.
- **Word suggestion:** When enabled, suggests possible matching words as you enter text.
- **Speed vs. accuracy:** Send the sensitivity of Swype text recognition.
- **Reset Swype's dictionary:** Deletes all of the words you have added and loads the default dictionary.
- **About: Version:** View the current Swype software version.
- **Language Options:** Set the language to use with Swype.

## Samsung keypad

Configure Samsung keypad settings. For more information about entering text with the Samsung keypad, see *“Using the Samsung Keypad”* on page 48.

1. From the **Settings** menu, touch **Language & keyboard** → **Samsung keypad** to enable/disable the Samsung keypad.
2. From the **Settings** menu, touch **Language & keyboard** → **Samsung keypad** (Samsung keypad settings) to access the following options:

Touch items to enable or disable the setting. When enabled, a check mark appears in the check box.

- **Portrait keypad types:** Select which type of Samsung keypad appears when you touch a text entry field with your phone in upright position, either Qwerty Keypad, or 3x4 Keypad.
- **Input languages:** Enable/disable keypad input languages. When enabled, languages can be changed by touching and sliding across the keypad spacebar. (Available languages: **English**, **Español**, and **한국어**.)

- **XT9:** When enabled, lists words that include your key presses.
- **XT9 advanced settings:** Lets you enable those XT9 features you want to use and disable those you don't want to use.
- **Keypad sweeping:** When enabled, lets you select text entry modes by sweeping across the Samsung keypad.
- **Auto-capitalization:** When enabled, automatically capitalizes the first letter of the first word in a sentence.
- **Voice input:** When enabled, lets you enter text by speaking.
- **Auto-full stop:** When enabled, automatically places a period (.) at the end of a line of text when you press the space bar twice.
- **Tutorial:** Learn about this keypad's functions.

## Device keyboard

Device keyboard settings let you enable or disable **Auto-replace** (automatic word replacement), **Auto-cap** (automatic capitalization), and **Auto-punctuate** (automatic punctuation) for your phone's retractable QWERTY keyboard.

## Voice input & output

### Voice input

#### Voice recognition settings

Voice recognition lets you conduct searches by speaking to your phone.

1. From the **Settings** menu, touch **Voice input & output** → **Voice recognition settings**.
2. Touch a setting to configure:
  - **Language:** Select your preferred spoken language from the list.
  - **SafeSearch:** (Applies only to Google searches.) Select how closely you want Voice recognition to monitor your speech for explicit images: **Off** (none), **Moderate**, or **Strict**.
  - **Block offensive words:** Omits offensive words from your searches.
  - **Personalized recognition:** When enabled, improves your phone's speech recognition accuracy.
  - **Google Account dashboard:** Use to manage your collected data.

## Voice output

### Text-to-speech settings

Text-to-speech provides audible readout of text, for example, the contents of text messages, and the Caller ID for incoming calls.

1. From the **Settings** menu, touch **Voice input & output** → **Text-to-speech settings**.
  2. Touch a setting to configure:
    - **Listen to an example**: Play a sample of speech synthesis (available if voice data is installed).
    - **Driving mode**: When enabled, reads out the CallerID for incoming calls and reads out new notifications.
    - **Always use my settings**: When enabled, settings you make override the application's default settings.
    - **Default settings**: Configure settings to your preferences. When Always use my settings is enabled, these settings override the application's default settings.
- **Default engine**: Set the speech synthesis engine for spoken text.

- **Install voice data**: Download and install the speech synthesis data needed to activate Text-to-speech from Android Market (free).
- **Speech rate**: Set the speed at which the text is spoken.
- **Language**: Set the language voice for spoken text.
- **Engines**: Set language(s) supported by available speech synthesis engine(s).
- **Pico TTS**: Lets you install additional language support.

## Accessibility

Accessibility services are special features to make using the phone easier for those with certain physical disabilities. Use the Accessibility settings to activate these services.

1. From the **Settings** menu, touch **Accessibility**.
2. Touch **Accessibility** to activate or deactivate accessibility services. When activated, a check appears in the box.

## Accessibility services

Enable or disable accessibility services.

---

**Note:** You must activate the **Accessibility services** setting before enabling services.

---

1. From the **Settings** menu, touch **Accessibility**.
2. Touch a service to enable or disable the service. When enabled, a check mark appears in the check box:
  - **SoundBack:** When enabled, plays tones for touch actions.
  - **KickBack:** When enabled, vibrates for touch actions.
  - **TalkBack:** When enabled, recites menu options, application titles, contacts, and other items when scrolling and making selections.

## The power key

When enabled, this option lets you end calls by pressing the Power-Lock key.

- From the **Settings** menu, touch **Accessibility → The power key ends calls** to enable/disable this option. When enabled, a check mark appears in the check box.

## Date & time

By default, your phone receives date and time information from the wireless network. When you are outside network coverage, you may want to set date and time information manually using the Date & time settings.

1. From the **Settings** menu, touch **Date & time**.
2. Touch a setting to configure:
  - **Automatic:** Touch to enable or disable automatic date and time updates from the wireless network. When enabled, a check appears in the check box.
  - **Set date:** Enter the current date (only available when the Automatic setting is disabled).
  - **Select time zone:** Choose your local time zone (only available when the Automatic setting is disabled).
  - **Set time:** Enter the current time (only available when the Automatic setting is disabled).
  - **Use 24-hour format:** Set the format for time displays.
  - **Select date format:** Set the format for date displays.

## About phone

View information about your phone, including status, legal information, hardware and software versions, and a tutorial.

1. From the **Settings** menu, touch **About phone**.
2. Touch items to view details:
  - **Software Update:** Allows you to either manually check for new firmware and update your device or confirm the current status information. This feature enables you to use your phone to connect to the network and upload any new phone software directly to your phone. The phone automatically updates with the latest available software when you access this option.
  - **Status:** View Battery status, Battery level, IMEI (D), MEID (D), MEID (H), SIM ID, IMSI, Phone number, MIN, PRL version, Network, Signal strength, Mobile network type, Service state, Roaming, Mobile network state, Wi-Fi MAC address, Bluetooth address, and Up time.
  - **Battery use:** Display the processes and applications that are currently running. Touch and hold on an item to view details.
  - **Legal information:** Display open source licenses and Google info.

- **System tutorial:** View a tutorial to help you learn how to use your phone. Follow the prompts to move through the tutorial topics.
- **Hardware version:** Display the hardware version of your phone.
- **Model number:** Display your phone's model number.
- **Firmware version:** Display the firmware version of your phone.
- **Baseband version:** Display the baseband version of your phone.
- **Kernel version:** Display the kernel version of your phone.
- **Build number:** Display your phone's build number.

## Section 13: Health and Safety Information

---

This section outlines the safety precautions associated with using your phone. The terms “mobile device” or “cell phone” are used in this section to refer to your phone. **Read this information before using your mobile device.**

### Exposure to Radio Frequency (RF) Signals

The U.S. Food and Drug Administration (FDA) has published information for consumers relating to Radio Frequency (RF) exposure from wireless phones. The FDA publication includes the following information:

#### ***Do cell phones pose a health hazard?***

Many people are concerned that cell phone radiation will cause cancer or other serious health hazards. The weight of scientific evidence has not linked cell phones with any health problems.

Cell phones emit low levels of Radio Frequency (RF) energy. Over the past 15 years, scientists have conducted hundreds of studies looking at the biological effects of the radio frequency energy emitted by cell phones. While some researchers have reported biological changes associated

with RF energy, these studies have failed to be replicated. The majority of studies published have failed to show an association between exposure to radio frequency from a cell phone and health problems.

The low levels of RF cell phones emit while in use are in the microwave frequency range. They also emit RF at substantially reduced time intervals when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects.

The biological effects of radio frequency energy should not be confused with the effects from other types of electromagnetic energy.

Very high levels of electromagnetic energy, such as is found in X-rays and gamma rays, can ionize biological tissues. Ionization is a process where electrons are stripped away from their normal locations in atoms and molecules. It can permanently damage biological tissues including DNA, the genetic material.

The energy levels associated with radio frequency energy, including both radio waves and microwaves, are not great enough to cause ionization of atoms and molecules. Therefore, RF energy is a type of non-ionizing radiation. Other types of non-ionizing radiation include visible light, infrared radiation (heat), and other forms of electromagnetic radiation with relatively low frequencies.

While RF energy does not ionize particles, large amounts can increase body temperatures and cause tissue damage. Two areas of the body, the eyes and the testes, are particularly vulnerable to RF heating because there is relatively little blood flow in them to carry away excess heat.

### **Research Results to Date: Is there a connection between RF and certain health problems?**

The results of most studies conducted to date say no. In addition, attempts to replicate and confirm the few studies that have shown a connection have failed.

The scientific community at large therefore believes that the weight of scientific evidence does not show an association between exposure to Radio Frequency (RF) from cell phones and adverse health outcomes. Still the scientific community has supported additional research to address gaps in knowledge. Some of these studies are described below.

### **Interphone Study**

Interphone is a large international study designed to determine whether cell phones increase the risk of head and neck cancer. A report published in the International Journal of Epidemiology (June, 2010) compared cell phone usage for more than 5,000 people with brain tumors (glioma and meningioma) and a similar number of healthy controls.

Results of this study did NOT show that cell phones caused brain cancer. In this study, most people had no increased risk of brain cancer from using cell phones. For people with the heaviest use of cell phones (an average of more than ½ hour per day, every day, for over 10 years) the study suggested a slight increase in brain cancer. However, the authors determined that biases and errors prevented any conclusions being drawn from this data. Additional information about Interphone can be found at

[http://www.iarc.fr/en/media-centre/pr/2010/pdfs/pr200\\_E.pdf](http://www.iarc.fr/en/media-centre/pr/2010/pdfs/pr200_E.pdf).

Interphone is the largest cell phone study to date, but it did not answer all questions about cell phone safety. Additional research is being conducted around the world, and the FDA continues to monitor developments in this field.



## **International Cohort Study on Mobile Phone Users (COSMOS)**

The COSMOS study aims to conduct long-term health monitoring of a large group of people to determine if there are any health issues linked to long-term exposure to radio frequency energy from cell phone use. The COSMOS study will follow approximately 300,000 adult cell phone users in Europe for 20 to 30 years. Additional information about the COSMOS study can be found at

<http://www.ukcosmos.org/index.html>.

## **Risk of Brain Cancer from Exposure to Radio Frequency Fields in Childhood and Adolescence (MOBI-KIDS)**

MOBI-KIDS is an international study investigating the relationship between exposure to radio frequency energy from communication technologies including cell phones and brain cancer in young people. This is an international multi-center study involving 14 European and non-European countries. Additional information about MOBI-KIDS can be found at

[http://www.creal.cat/programes-recerca/en\\_projectes-creal/view.php?ID=39](http://www.creal.cat/programes-recerca/en_projectes-creal/view.php?ID=39).

## **Surveillance, Epidemiology, and End Results (SEER) Program of the National Cancer Institute**

The National Cancer Institute (NCI) actively follows cancer statistics in the United States to detect any change in rates of new cases for brain cancer. If cell phones play a role in risk for brain cancer, rates should go up, because heavy cell phone use has been common for quite some time in the U.S. Between 1987 and 2005, the overall age-adjusted incidence of brain cancer did not increase. Additional information about SEER can be found at

<http://seer.cancer.gov/>.

## **Cell Phone Industry Actions**

Although the existing scientific data do not justify FDA regulatory actions, the FDA has urged the cell phone industry to take a number of steps, including the following:

- Support-needed research on possible biological effects of RF for the type of signal emitted by cell phones;
- Design cell phones in a way that minimizes any RF exposure to the user; and
- Cooperate in providing users of cell phones with the current information on cell phone use and human health concerns.

The FDA also is working with voluntary standard-setting bodies such as the Institute of Electrical and Electronics Engineers (IEEE), the International Commission on Non-Ionizing Radiation Protection (ICNIRP), and others to assure that safety standards continue to adequately protect the public.

## **Reducing Exposure: Hands-Free Kits and Other Accessories**

### **Steps to Reduce Exposure to Radio Frequency Energy**

If there is a risk from being exposed to radio frequency energy (RF) from cell phones - and at this point we do not know that there is - it is probably very small. But, if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your RF exposure.

- Reduce the amount of time spent using your cell phone;
- Use speaker mode or a headset to place more distance between your head and the cell phone.

### **Hands-Free Kits**

Hands-free kits may include audio or Bluetooth® headsets and various types of body-worn accessories such as belt-clips and holsters. Combinations of these can be used to reduce RF energy absorption from cell phones.

Headsets can substantially reduce exposure because the phone is held away from the head in the user's hand or in approved body-worn accessories. Cell phones marketed in the U.S. are required to meet RF exposure compliance requirements when used against the head and against the body.

Because there are no known risks from exposure to RF emissions from cell phones, there is no reason to believe that hands-free kits reduce risks. Hands-free kits can be used for convenience and comfort. They are also required by law in many states if you want to use your phone while driving.

### **Cell Phone Accessories that Claim to Shield the Head from RF Radiation**

Because there are no known risks from exposure to RF emissions from cell phones, there is no reason to believe that accessories which claim to shield the head from those emissions reduce risks. Some products that claim to shield the user from RF absorption use special phone cases, while others involve nothing more than a metallic accessory attached to the phone.

Studies have shown that these products generally do not work as advertised. Unlike “hands-free” kits, these so-called “shields” may interfere with proper operation of the phone. The phone may be forced to boost its power to compensate, leading to an increase in RF absorption.

### **Children and Cell Phones**

The scientific evidence does not show a danger to any users of cell phones from RF exposure, including children and teenagers. The steps adults can take to reduce RF exposure apply to children and teenagers as well.

- Reduce the amount of time spent on the cell phone;
- Use speaker mode or a headset to place more distance between the head and the cell phone.

Some groups sponsored by other national governments have advised that children be discouraged from using cell phones at all. For example, The Stewart Report from the United Kingdom made such a recommendation in December 2000. In this report, a group of independent experts noted that no evidence exists that using a cell phone causes brain tumors or other ill effects. Their recommendation to limit cell phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

Additional information on the safety of RF exposures from various sources can be obtained from the following organizations (updated 10/1/2010):

- FCC RF Safety Program:  
<http://www.fcc.gov/oet/rfsafety/>.
- Environmental Protection Agency (EPA):  
<http://www.epa.gov/radtown/wireless-tech.html>.
- Occupational Safety and Health Administration (OSHA):  
<http://www.osha.gov/SLTC/radiofrequencyradiation/>.  
(Note: This web address is case sensitive.)
- National Institute for Occupational Safety and Health (NIOSH):  
<http://www.cdc.gov/niosh/>.
- World Health Organization (WHO):  
<http://www.who.int/peh-emf/en/>.
- International Commission on Non-Ionizing Radiation Protection:  
<http://www.icnirp.de>.
- Health Protection Agency:  
<http://www.hpa.org.uk/Topics/Radiation/>.

- US Food and Drug Administration:  
[http://www.fda.gov/Radiation-EmittingProducts/  
RadiationEmittingProductsandProcedures/  
HomeBusinessandEntertainment/CellPhones/default.htm](http://www.fda.gov/Radiation-EmittingProducts/RadiationEmittingProductsandProcedures/HomeBusinessandEntertainment/CellPhones/default.htm).

## **Specific Absorption Rate (SAR) Certification Information**

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the exposure limits for Radio Frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government.

These FCC RF exposure limits are derived from the recommendations of two expert organizations: the National Council on Radiation Protection and Measurement (NCRP) and the Institute of Electrical and Electronics Engineers (IEEE). In both cases, the recommendations were developed by scientific and engineering experts drawn from industry, government, and academia after extensive reviews of the scientific literature related to the biological effects of RF energy.

The RF exposure limit set by the FCC for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR is a measure of the rate of absorption of RF energy by the human body

expressed in units of watts per kilogram (W/kg). The FCC requires wireless phones to comply with a safety limit of 1.6 watts per kilogram (1.6 W/kg).

The FCC SAR limit incorporates a substantial margin of safety to give additional protection to the public and to account for any variations in measurements.

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum reported value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output of the phone.

Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the SAR limit established by the FCC. Tests for each model phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC. For body-worn operation, this phone has been tested and meets

FCC RF exposure guidelines when used with an accessory that contains no metal and that positions the mobile device a minimum of 1.0 cm from the body.

Use of other accessories may not ensure compliance with FCC RF exposure guidelines. The FCC has granted an Equipment Authorization for this mobile phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines.

The maximum SAR values for this model phone as reported to the FCC are:

- **Head:** 1.26 W/Kg.
- **Body:** 1.49 W/Kg.

SAR information on this and other model phones can be accessed online on the FCC's website through <http://transition.fcc.gov/oet/rfsafety/sar.html>. To find information that pertains to a particular model phone, this site uses the phone FCC ID number which is usually printed somewhere on the case of the phone. Sometimes it may be necessary to remove the battery pack to find the number. Once you have the FCC ID number for a particular phone, follow the instructions on the website and it should provide values for typical or maximum SAR for a particular phone. Additional

SAR information can also be obtained at <http://www.fcc.gov/encyclopedia/specific-absorption-rate-sar-cellular-telephones>.

## FCC Part 15 Information to User

Pursuant to part 15.21 of the FCC Rules, you are cautioned that changes or modifications not expressly approved by Samsung could void your authority to operate the device.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Smart Practices While Driving

### On the Road - Off the Phone

The primary responsibility of every driver is the safe operation of his or her vehicle.

Responsible drivers understand that no secondary task should be performed while driving whether it be eating, drinking, talking to passengers, or talking on a mobile phone - unless the driver has assessed the driving conditions and is confident that the secondary task will not interfere with their primary responsibility. **Do not engage in any activity while driving a moving vehicle which may cause you to take your eyes off the road or become so absorbed in the activity that your ability to concentrate on the act of driving becomes**

**impaired.** Samsung is committed to promoting responsible driving and giving drivers the tools they need to understand and address distractions.

**Check the laws and regulations on the use of mobile devices and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas. For example, only hands-free use may be permitted in certain areas.**

Before answering calls, consider your circumstances. Let the call go to voicemail when driving conditions require. Remember, driving comes first, not the call!

If you consider a call necessary and appropriate, follow these tips:

- Use a hands-free device;
- Secure your phone within easy reach;
- Place calls when you are not moving;
- Plan calls when your car will be stationary;
- Do not engage in stressful or emotional conversations;
- Let the person with whom you are speaking know that you are driving and will suspend the call if necessary;
- Do not take notes or look up phone numbers while driving;

Notice regarding legal restrictions on mounting this device in an automobile:

Laws in some states may prohibit mounting this device on or near the windshield of an automobile. In other states, the law may permit mounting this device only in specific locations in the automobile. Be sure to consult the state and local laws or ordinances where you drive before mounting this device in an automobile. Failure to comply with these restrictions could result in fines, penalties, or other damages.

Never mount this device in a manner that will obstruct the driver's clear view of the street and traffic.

**Never use wireless data services such as text messaging, Web browsing, or e-mail while operating a vehicle.**

**Never watch videos, such as a movie or clip, or play video games while operating a vehicle.**

For more information, go to <http://www.ctia.org>.

## Battery Use and Safety

---

**Important! Handle and store batteries properly to avoid injury or damage.** Most battery issues arise from improper handling of batteries and, particularly, from the continued use of damaged batteries.

---

- **Do not disassemble, crush, puncture, shred, or otherwise attempt to change the form of your battery.** Do not put a high degree of pressure on the battery. This can cause leakage or an internal short-circuit, resulting in overheating.
- **Do not let the phone or battery come in contact with liquids.** Liquids can get into the phone's circuits, leading to corrosion. Even when the phone appears to be dry and appears to operate normally, the circuitry could slowly corrode and pose a safety hazard. If the phone and/or battery get wet, have them checked by your service provider or contact Samsung, even if they appear to be working properly.
- **Do not place your battery in or near a heat source.** Excessive heating can damage the phone or the battery and could cause the phone or the battery to explode. Do not dry a wet or damp battery with an appliance or heat source such as a microwave oven, hair dryer, iron, or radiator. Avoid leaving your phone in your car in high temperatures.
- **Do not dispose of the phone or the battery in a fire.** The phone or the battery may explode when overheated.

- **Do not handle a damaged or leaking battery.** Do not let leaking battery fluid come in contact with your eyes, skin or clothing. For safe disposal options, contact your nearest Samsung-authorized service center.
- **Avoid dropping the cell phone.** Dropping the phone or the battery, especially on a hard surface, can potentially cause damage to the phone and battery. If you suspect damage to the phone or battery, take it to a service center for inspection.
- **Never use any charger or battery that is damaged in any way.**
- **Do not allow the battery to touch metal objects.** Accidental short-circuiting can occur when a metallic object (coin, key, jewelry, clip, or pen) causes a direct connection between the + and - terminals of the battery (metal strips on the battery), for example when you carry a spare battery in a pocket or bag. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.

---

**Important!** Use only Samsung-approved batteries, and recharge your battery only with Samsung-approved chargers which are specifically designed for your phone.

---

## **WARNING!**

**Use of a non-Samsung-approved battery or charger may present a risk of fire, explosion, leakage, or other hazard.** Samsung's warranty does not cover damage to the phone caused by non-Samsung-approved batteries and/or chargers.

- **Do not use incompatible cell phone batteries and chargers.**  
Some websites and second-hand dealers not associated with reputable manufacturers and carriers, might be selling incompatible or even counterfeit batteries and chargers. Consumers should purchase manufacturer or carrier-recommended products and accessories. If unsure about whether a replacement battery or charger is compatible, contact the manufacturer of the battery or charger.
- **Misuse or use of incompatible phones, batteries, and charging devices could result in damage to the equipment and a possible risk of fire, explosion, or leakage, leading to serious injuries, damages to your phone, or other serious hazard.**



## Samsung Mobile Products and Recycling

Samsung cares for the environment and encourages its customers to recycle Samsung mobile devices and genuine Samsung accessories.

Proper disposal of your mobile device and its battery is not only important for safety, it benefits the environment. Batteries must be recycled or disposed of properly.

Recycling programs for your mobile device, batteries, and accessories may not be available in your area.

We've made it easy for you to recycle your old Samsung mobile device by working with respected take-back companies in every state in the country.

### Drop It Off

You can drop off your Samsung-branded mobile device and batteries for recycling at one of our numerous Samsung Recycling Direct (SM) locations. A list of these locations may be found at:

[http://pages.samsung.com/us/recyclingdirect/usactivities\\_environment\\_samsungrecyclingdirect\\_locations.jsp](http://pages.samsung.com/us/recyclingdirect/usactivities_environment_samsungrecyclingdirect_locations.jsp)

Samsung-branded devices and batteries will be accepted at these locations for no fee.

Consumers may also recycle their used mobile device or batteries at many retail or carrier-provided locations where mobile devices and batteries are sold. Additional information regarding specific locations may be found at: <http://www.epa.gov/epawaste/partnerships/plugin/cellphone/index.htm> or at <http://www.call2recycle.org/>.

### Mail It In

The Samsung Mobile Take-Back Program will provide Samsung customers with a free recycling mailing label. Just go to

[http://www.samsung.com/us/aboutsamsung/citizenship/usactivities\\_environment\\_samsungrecyclingdirect.html?INT=STA\\_recycle\\_your\\_phone\\_page](http://www.samsung.com/us/aboutsamsung/citizenship/usactivities_environment_samsungrecyclingdirect.html?INT=STA_recycle_your_phone_page) and follow the instructions to print out a free pre-paid postage label and then send your old mobile device or battery to the address listed, via U.S. Mail, for recycling.

Dispose of unwanted electronics through an approved recycler.

To find the nearest recycling location, go to our website:

[www.samsung.com/recyclingdirect](http://www.samsung.com/recyclingdirect)

Or call, (877) 278-0799.

## Follow local regulations regarding disposal of mobile devices and batteries

Dispose of your mobile device and batteries in accordance with local regulations. In some areas, the disposal of these items in household or business trash may be prohibited. Help us protect the environment - recycle!

---

**Warning!** Never dispose of batteries in a fire because they may explode.

---

## UL Certified Travel Charger

The Travel Charger for this phone has met applicable UL safety requirements. Please adhere to the following safety instructions per UL guidelines:

**FAILURE TO FOLLOW THE INSTRUCTIONS OUTLINED MAY LEAD TO SERIOUS PERSONAL INJURY AND POSSIBLE PROPERTY DAMAGE.**

**IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS.**

**DANGER - TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS.**

FOR CONNECTION TO A SUPPLY NOT IN NORTH AMERICA, USE AN ATTACHMENT PLUG ADAPTOR OF THE PROPER CONFIGURATION FOR THE POWER OUTLET.

THIS POWER UNIT IS INTENDED TO BE CORRECTLY ORIENTED IN A VERTICAL OR HORIZONTAL OR FLOOR MOUNT POSITION.

## Display / Touch-Screen

Please note the following information when using your mobile device:

### WARNING REGARDING DISPLAY

The display on your mobile device is made of glass or acrylic and could break if your mobile device is dropped or if it receives significant impact. Do not use if screen is broken or cracked as this could cause injury to you.

## WARRANTY DISCLAIMER: PROPER USE OF A TOUCH-SCREEN MOBILE DEVICE

If your mobile device has a touch-screen display, please note that a touch-screen responds best to a light touch from the pad of your finger or a non-metallic stylus. Using excessive force or a metallic object when pressing on the touch-screen may damage the tempered glass surface and void the warranty. For more information, please refer to the “Standard Limited Warranty”.

## GPS

Certain Samsung mobile devices can use a Global Positioning System (GPS) signal for location based applications. A GPS uses satellites controlled by the U.S. Government that are subject to changes implemented in accordance with the Department of Defense policy and the 2008 Federal Radio navigation Plan (FRP). Changes may affect the performance of location-based technology on your mobile device.

Even with GPS, when you make an emergency call:

- Always tell the emergency responder your location to the best of your ability; and

- Remain on the mobile device for as long as the emergency responder instructs you.

## Navigation

Maps, directions, and other navigation-data, including data relating to your current location, may contain inaccurate or incomplete data, and circumstances can and do change over time. In some areas, complete information may not be available. **Therefore, you should always visually confirm that the navigational instructions are consistent with what you see before following them. All users should pay attention to road conditions, closures, traffic, and all other factors that may impact safe driving or walking. Always obey posted road signs.**

## Emergency Calls



This mobile device, like any wireless mobile device, operates using radio signals, wireless and landline networks, as well as user-programmed functions, which cannot guarantee connection in all conditions, areas, or circumstances.

Therefore, you should never rely solely on any wireless mobile device for essential communications (medical emergencies, for example). Before traveling in remote or underdeveloped areas, plan an alternate method of contacting emergency services personnel. Remember, to

make or receive any calls, the mobile device must be switched on and in a service area with adequate signal strength.

Emergency calls may not be possible on all wireless mobile device networks or when certain network services and/or mobile device features are in use. Check with local service providers.

#### **To make an emergency call:**

1. If the mobile device is not on, switch it on.
2. From the Home screen, touch  **Phone**.
3. Key in the emergency number for your present location (for example, 911 or other official emergency number).  
Emergency numbers vary by location.
4. Touch the “Send” key. 

If certain features are in use (call blocking, for example), you may first need to deactivate those features before you can make an emergency call. Consult your User Manual and your local cellular service provider. When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your mobile device may be the only means of communication at the scene of an accident; do not cut off the call until given permission to do so.

## **Care and Maintenance**

Your mobile device is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill any warranty obligations and allow you to enjoy this product for many years:

#### **Keep your Samsung Mobile Device away from:**

##### **Liquids of any kind**

Keep the mobile device dry. Precipitation, humidity, and liquids contain minerals that will corrode electronic circuits. If the mobile device does get wet, do not accelerate drying with the use of an oven, microwave, or dryer, because this may damage the mobile device and could cause a fire or explosion.

Do not use the mobile device with a wet hand. Doing so may cause an electric shock to you or damage to the mobile device.

##### **Extreme heat or cold**

Avoid temperatures below 0°C / 32°F or above 45°C / 113°F.

### **Microwaves**

Do not try to dry your mobile device in a microwave oven. Doing so may cause a fire or explosion.

### **Dust and dirt**

Do not expose your mobile device to dust, dirt, or sand.

### **Cleaning solutions**

Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the mobile device. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.

### **Shock or vibration**

Do not drop, knock, or shake the mobile device. Rough handling can break internal circuit boards.

### **Paint**

Do not paint the mobile device. Paint can clog the device's moving parts or ventilation openings and prevent proper operation.

## **Responsible Listening**

---

**Caution! Avoid potential hearing loss.**

---

Damage to hearing occurs when a person is exposed to loud sounds over time. The risk of hearing loss increases as sound is played louder and for longer durations. Prolonged exposure to loud sounds (including music) is the most common cause of preventable hearing loss. Some scientific research suggests that using portable audio devices, such as portable music players and cell phones, at high volume settings for long durations may lead to permanent noise-induced hearing loss.

This includes the use of headphones (including headsets, earbuds, and Bluetooth® or other wireless devices). Exposure to very loud sound has also been associated in some studies with tinnitus (a ringing in the ear), hypersensitivity to sound, and distorted hearing. Individual susceptibility to noise-induced hearing loss and potential hearing problem varies. Additionally, the amount of sound produced by a portable audio device varies depending on the nature of the sound, the device settings, and the headphones that are used. As a result, there is no single volume setting that is appropriate for everyone or for every combination of sound, settings, and equipment.

You should follow some common sense recommendations when using any portable audio device:

- Always turn the volume down before plugging the earphones into an audio source.
- Set the volume in a quiet environment and select the lowest volume at which you can hear adequately.
- Be aware that you can adapt to higher volume settings over time, not realizing that the higher volume may be harmful to your hearing.
- When using headphones, turn the volume down if you cannot hear the people speaking near you or if the person sitting next to you can hear what you are listening to.
- Do not turn the volume up to block out noisy surroundings. If you choose to listen to your portable device in a noisy environment, use noise-cancelling headphones to block out background environmental noise. By blocking background environment noise, noise cancelling headphones should allow you to hear the music at lower volumes than when using earbuds.
- Limit the amount of time you listen. As the volume increases, less time is required before your hearing could be affected.

- Avoid using headphones after exposure to extremely loud noises, such as rock concerts, that might cause temporary hearing loss. Temporary hearing loss might cause unsafe volumes to sound normal.
- Do not listen at any volume that causes you discomfort. If you experience ringing in your ears, hear muffled speech, or experience any temporary hearing difficulty after listening to your portable audio device, discontinue use and consult your doctor.

You can obtain additional information on this subject from the following sources:

### **American Academy of Audiology**

11730 Plaza American Drive, Suite 300  
Reston, VA 20190

Voice: (800) 222-2336

Email: [info@audiology.org](mailto:info@audiology.org)

Internet:

<http://www.audiology.org/Pages/default.aspx>

**National Institute on Deafness and Other  
Communication Disorders**

National Institutes of Health  
31 Center Drive, MSC 2320  
Bethesda, MD 20892-2320  
Email: [nidcdinfo@nih.gov](mailto:nidcdinfo@nih.gov)

Internet:  
<http://www.nidcd.nih.gov/>

**National Institute for Occupational Safety  
and Health (NIOSH)**

395 E Street, S.W., Suite 9200  
Patriots Plaza Building  
Washington, DC 20201  
Voice: 1-800-35-NIOSH  
(1-800-356-4674)  
1-800-CDC-INFO (1-800-232-4636)  
Outside the U.S. 513-533-8328

Email: [cdcinfo@cdc.gov](mailto:cdcinfo@cdc.gov)

Internet:  
[http://www.cdc.gov/niosh/topics/noise/  
default.html](http://www.cdc.gov/niosh/topics/noise/default.html)

1-888-232-6348 TTY

## **Operating Environment**

Remember to follow any special regulations in force in any area, and always switch your mobile device off whenever it is forbidden to use it, or when it may cause interference or danger. When connecting the mobile device or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

## **Using Your Mobile Device Near Other Electronic Devices**

Most modern electronic equipment is shielded from Radio Frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless mobile device. Consult the manufacturer to discuss alternatives.

## Implantable Medical Devices

A minimum separation of six (6) inches should be maintained between a handheld wireless mobile device and an implantable medical device, such as a pacemaker or implantable cardioverter defibrillator, to avoid potential interference with the device.

Persons who have such devices:

- Should ALWAYS keep the mobile device more than six (6) inches from their implantable medical device when the mobile device is turned ON;
- Should not carry the mobile device in a breast pocket;
- Should use the ear opposite the implantable medical device to minimize the potential for interference;
- Should turn the mobile device OFF immediately if there is any reason to suspect that interference is taking place;
- Should read and follow the directions from the manufacturer of your implantable medical device. If you have any questions about using your wireless mobile device with an implantable medical device, consult your health care provider.

For more information see: <http://www.fcc.gov/oet/rfsafety/rf-faqs.html#>.

## Other Medical Devices

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch your mobile device off in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

## Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle before using your mobile device in a motor vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

## Posted Facilities

Switch your mobile device off in any facility where posted notices require you to do so.

## Potentially Explosive Environments

Switch your mobile device off when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion



or fire resulting in bodily injury or even death. Users are advised to switch the mobile device off while at a refueling point (service station).

Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants, or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), areas where the air contains chemicals or particles, such as grain, dust, or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

### **When your Device is Wet**

Do not turn on your device if it is wet. If your device is already on, turn it off and remove the battery immediately (if the device will not turn off or you cannot remove the battery, leave it as-is). Then, dry the device with a towel and take it to a service center.

## **FCC Hearing Aid Compatibility (HAC) Regulations for Wireless Devices**

The U.S. Federal Communications Commission (FCC) has established requirements for digital wireless mobile devices to be compatible with hearing aids and other assistive hearing devices.

When individuals employing some assistive hearing devices (hearing aids and cochlear implants) use wireless mobile devices, they may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and mobile devices also vary in the amount of interference they generate.

The wireless telephone industry has developed a rating system for wireless mobile devices to assist hearing device users find mobile devices that may be compatible with their hearing devices. Not all mobile devices have been rated. Mobile devices that are rated have the rating on their box or a label located on the box.

The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not

be able to use a rated mobile device successfully. Trying out the mobile device with your hearing device is the best way to evaluate it for your personal needs.

**M-Ratings:** Wireless mobile devices rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than mobile devices that are not labeled. M4 is the better/higher of the two ratings. M-ratings refer to enabling acoustic coupling with hearing aids that do not operate in telecoil mode.

**T-Ratings:** Mobile devices rated T3 or T4 meet FCC requirements and are likely to generate less interference to hearing devices than mobile devices that are not labeled. T4 is the better/higher of the two ratings. T-ratings refer to enabling inductive coupling with hearing aids operating in telecoil mode.

 
Hearing devices may also be rated. Your hearing aid manufacturer or hearing health professional may help you find this rating. Higher ratings mean that the hearing device is relatively immune to interference noise.

Under the current industry standard, American National Standards Institute (ANSI) C63.19, the hearing aid and wireless mobile device rating values are added together to indicate how usable they are together. For example, if a

hearing aid meets the M2 level rating and the wireless mobile device meets the M3 level rating, the sum of the two values equals M5.

Under the standard, this should provide the hearing aid user with normal use while using the hearing aid with the particular wireless mobile device. A sum of 6 or more would indicate excellent performance.

However, these are not guarantees that all users will be satisfied. T ratings work similarly.

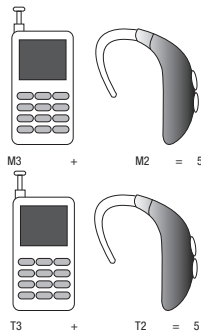

The HAC rating and measurement procedure are described in the American National Standards Institute (ANSI) C63.19 standard.

### **HAC for Newer Technologies**

This phone has been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing aids.

It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Consult your service provider or the manufacturer of this phone for information on hearing aid compatibility. If you have questions about return or exchange policies, consult your service provider or phone retailer.

### **Restricting Children's Access to Your Mobile Device**

Your mobile device is not a toy. Do not allow children to play with it because they could hurt themselves and others, damage the mobile device, or make calls that increase your mobile device bill.

Keep the mobile device and all its parts and accessories out of the reach of small children.

## **FCC Notice and Cautions**

### **FCC Notice**

The mobile device may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the mobile device if such interference cannot be eliminated. Vehicles using liquefied petroleum gas (such as propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protection Association.

### **Cautions**

Any changes or modifications to your mobile device not expressly approved in this document could void your warranty for this equipment and void your authority to operate this equipment. Only use approved batteries, antennas, and chargers. The use of any unauthorized accessories may be dangerous and void the mobile device warranty if said accessories cause damage or a defect to the mobile device.

Although your mobile device is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending, or sitting on it.

## **Other Important Safety Information**

- Only qualified personnel should service the mobile device or install the mobile device in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.
- Ensure that any mobile devices or related equipment installed in your vehicle are securely mounted.
- Check regularly that all wireless mobile device equipment in your vehicle is mounted and operating properly.
- When using a headset in dry environments, static electricity can build up in the headset and cause a small quick static electrical shock. To minimize the risk of electrostatic discharge from the headset avoid using the headset in extremely dry environments or touch a grounded unpainted metal object to discharge static electricity before inserting the headset.
- Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the mobile device, its parts, or accessories.
- For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including installed or portable wireless equipment near or in the area over the air bag or in the air bag deployment area. If wireless equipment is improperly installed and the air bag inflates, serious injury could result.
- Switch your mobile device off before boarding an aircraft. The use of wireless mobile devices in aircraft is illegal and may be dangerous to the aircraft's operation. Check with appropriate authorities before using any function of a mobile device while on an aircraft.
- Failure to observe these instructions may lead to the suspension or denial of cell phone services to the offender, or legal action, or both.
- While using your device, leave some lights on in the room and do not hold the screen too close to your eyes.
- Seizures or blackouts can occur when you are exposed to flashing lights while watching videos or playing games for extended periods. If you feel any discomfort, stop using the device immediately.

- Reduce risk of repetitive motion injuries. When you repetitively perform actions, such as pressing keys, drawing characters on a touch screen with your fingers, or playing games, you may experience occasional discomfort in your hands, neck, shoulders, or other parts of your body. When using your device for extended periods, hold the device with a relaxed grip, press the keys lightly, and take frequent breaks. If you continue to have discomfort during or after such use, stop use and see a physician.
- If your device has a camera flash or light, do not use the flash or light close to the eyes of people or pets. [122011]

## Section 14: Warranty Information

---

### Standard Limited Warranty

#### What is covered and for how long?

SAMSUNG TELECOMMUNICATIONS AMERICA, LLC (“SAMSUNG”) warrants that SAMSUNG’s handsets and accessories (“Products”) are free from defects in material and workmanship under normal use and service for the period commencing upon the date of purchase by the first consumer purchaser and continuing for the following specified period of time after that date:

Phone	1 Year
Batteries	1 Year
Case/Pouch/Holster	90 Days
Other Phone Accessories	1 Year

#### What is not covered?

This Limited Warranty is conditioned upon proper use of the Product.

This Limited Warranty does not cover: (a) defects or damage resulting from accident, misuse, abnormal use, abnormal conditions, improper storage, exposure to liquid, moisture, dampness, sand or dirt, neglect, or unusual physical, electrical or electromechanical stress; (b) scratches, dents and cosmetic damage, unless caused by SAMSUNG; (c) defects or damage resulting from excessive force or use of a metallic object when pressing on a touch screen; (d) equipment that has the serial number or the enhancement data code removed, defaced, damaged, altered or made illegible; (e) ordinary wear and tear; (f) defects or damage resulting from the use of Product in conjunction or connection with accessories, products, or ancillary/peripheral equipment not furnished or approved by SAMSUNG; (g) defects or damage resulting from improper testing, operation, maintenance, installation, service, or adjustment not furnished or approved by SAMSUNG; (h) defects or damage resulting from external causes such as collision with an object, fire, flooding, dirt, windstorm, lightning, earthquake, exposure to weather conditions, theft, blown fuse, or improper use of any electrical source; (i) defects or damage resulting from cellular signal reception

or transmission, or viruses or other software problems introduced into the Product; or (j) Product used or purchased outside the United States. This Limited Warranty covers batteries only if battery capacity falls below 80% of rated capacity or the battery leaks, and this Limited Warranty does not cover any battery if (i) the battery has been charged by a battery charger not specified or approved by SAMSUNG for charging the battery; (ii) any of the seals on the battery are broken or show evidence of tampering; or (iii) the battery has been used in equipment other than the SAMSUNG phone for which it is specified.

#### **What are SAMSUNG's obligations?**

During the applicable warranty period, provided the Product is returned in accordance with the terms of this Limited Warranty, SAMSUNG will repair or replace the Product, at SAMSUNG's sole option, without charge. SAMSUNG may, at SAMSUNG's sole option, use rebuilt, reconditioned, or new parts or components when repairing any Product, or may replace the Product with a rebuilt, reconditioned or new Product.

Repaired/replaced cases, pouches and holsters will be warranted for a period of ninety (90) days. All other repaired/replaced Products will be warranted for a period equal to the

remainder of the original Limited Warranty on the original Product or for ninety (90) days, whichever is longer. All replaced Products, parts, components, boards and equipment shall become the property of SAMSUNG. Except to any extent expressly allowed by applicable law, transfer or assignment of this Limited Warranty is prohibited.

#### **What must you do to obtain warranty service?**

To obtain service under this Limited Warranty, you must return the Product to an authorized phone service facility in an adequate container for shipping, accompanied by the sales receipt or comparable proof of sale showing the original date of purchase, the serial number of the Product and the seller's name and address.

To obtain assistance on where to deliver the Product, please call SAMSUNG Customer Care at 1-888-987-4357. If SAMSUNG determines that any Product is not covered by this Limited Warranty, you must pay all parts, shipping, and labor charges for the repair or return of such Product.

You should keep a separate backup copy of any contents of the Product before delivering the Product to SAMSUNG for warranty service, as some or all of the contents may be deleted or reformatted during the course of warranty service.

### **What are the limits on SAMSUNG's liability?**

THIS LIMITED WARRANTY SETS OUT THE FULL EXTENT OF SAMSUNG'S RESPONSIBILITIES, AND THE EXCLUSIVE REMEDY REGARDING THE PRODUCTS.

ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL SAMSUNG BE LIABLE FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT OR FOR, WITHOUT LIMITATION, COMMERCIAL LOSS OF ANY SORT; LOSS OF USE, TIME, DATA, REPUTATION, OPPORTUNITY, GOODWILL, PROFITS OR SAVINGS; INCONVENIENCE; INCIDENTAL, SPECIAL, CONSEQUENTIAL OR PUNITIVE DAMAGES; OR DAMAGES ARISING FROM THE USE OR INABILITY TO USE THE PRODUCT. SOME STATES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, OR THE DISCLAIMER OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS AND DISCLAIMERS MAY NOT APPLY TO YOU.

SAMSUNG MAKES NO WARRANTIES OR REPRESENTATIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, AS TO THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE

OR SUITABILITY OF ANY THIRD-PARTY SOFTWARE OR EQUIPMENT USED IN CONJUNCTION WITH THE PRODUCT, OR THE ABILITY TO INTEGRATE ANY SUCH SOFTWARE OR EQUIPMENT WITH THE PRODUCT, WHETHER SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT IS INCLUDED WITH THE PRODUCT DISTRIBUTED BY SAMSUNG OR OTHERWISE. RESPONSIBILITY FOR THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE AND SUITABILITY OF ANY SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT RESTS SOLELY WITH THE USER AND THE DIRECT VENDOR, OWNER OR SUPPLIER OF SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT.

Nothing in the Product instructions or information shall be construed to create an express warranty of any kind with respect to the Products. No agent, employee, dealer, representative or reseller is authorized to modify or extend this Limited Warranty or to make binding representations or claims, whether in advertising, presentations or otherwise, on behalf of SAMSUNG regarding the Products or this Limited Warranty.

This Limited Warranty gives you specific legal rights, and you may also have other rights that vary from state to state.



### **What is the procedure for resolving disputes?**

ALL DISPUTES WITH SAMSUNG ARISING IN ANY WAY FROM THIS LIMITED WARRANTY OR THE SALE, CONDITION OR PERFORMANCE OF THE PRODUCTS SHALL BE RESOLVED EXCLUSIVELY THROUGH FINAL AND BINDING ARBITRATION, AND NOT BY A COURT OR JURY.

Any such dispute shall not be combined or consolidated with a dispute involving any other person's or entity's Product or claim, and specifically, without limitation of the foregoing, shall not under any circumstances proceed as part of a class action. The arbitration shall be conducted before a single arbitrator, whose award may not exceed, in form or amount, the relief allowed by the applicable law. The arbitration shall be conducted according to the American Arbitration Association (AAA) Commercial Arbitration Rules applicable to consumer disputes. This arbitration provision is entered pursuant to the Federal Arbitration Act. The laws of the State of Texas, without reference to its choice of laws principles, shall govern the interpretation of the Limited Warranty and all disputes that are subject to this arbitration provision. The arbitrator shall decide all issues of interpretation and application of this arbitration provision and the Limited Warranty.

For any arbitration in which your total damage claims, exclusive of attorney fees and expert witness fees, are \$5,000.00 or less ("Small Claim"), the arbitrator may, if you prevail, award your reasonable attorney fees, expert witness fees and costs as part of any award, but may not grant SAMSUNG its attorney fees, expert witness fees or costs unless it is determined that the claim was brought in bad faith. In a Small Claim case, you shall be required to pay no more than half of the total administrative, facility and arbitrator fees, or \$50.00 of such fees, whichever is less, and SAMSUNG shall pay the remainder of such fees. Administrative, facility and arbitrator fees for arbitrations in which your total damage claims, exclusive of attorney fees and expert witness fees, exceed \$5,000.00 ("Large Claim") shall be determined according to AAA rules. In a Large Claim case, the arbitrator may grant to the prevailing party, or apportion among the parties, reasonable attorney fees, expert witness fees and costs. Judgment may be entered on the arbitrator's award in any court of competent jurisdiction. This arbitration provision also applies to claims against SAMSUNG's employees, representatives and affiliates if any such claim arises from the Product's sale, condition or performance.

You may opt out of this dispute resolution procedure by providing notice to SAMSUNG no later than 30 calendar days from the date of the first consumer purchaser's purchase of the Product. To opt out, you must send notice by e-mail to [optout@sta.samsung.com](mailto:optout@sta.samsung.com), with the subject line: "Arbitration Opt Out." You must include in the opt out e-mail (a) your name and address; (b) the date on which the Product was purchased; (c) the Product model name or model number; and (d) the IMEI or MEID or Serial Number, as applicable, if you have it (the IMEI or MEID or Serial Number can be found (i) on the Product box; (ii) on the Product information screen, which can be found under "Settings;" (iii) on a label on the back of the Product beneath the battery, if the battery is removable; and (iv) on the outside of the Product if the battery is not removable). Alternatively, you may opt out by calling 1-888-987-4357 no later than 30 calendar days from the date of the first consumer purchaser's purchase of the Product and providing the same information. These are the only two forms of notice that will be effective to opt out of this dispute resolution procedure. Opting out of this dispute resolution procedure will not affect the coverage of the Limited Warranty in any way, and you will continue to enjoy the benefits of the Limited Warranty.

### **Severability**

If any portion of this Limited Warranty is held to be illegal or unenforceable, such partial illegality or unenforceability shall not affect the enforceability of the remainder of the Limited Warranty.

### ***Precautions for Transfer and Disposal***

If data stored on this device is deleted or reformatted using the standard methods, the data only appears to be removed on a superficial level, and it may be possible for someone to retrieve and reuse the data by means of special software.

To avoid unintended information leaks and other problems of this sort, it is recommended that the device be returned to Samsung's Customer Care Center for an Extended File System (EFS) Clear which will eliminate all user memory and return all settings to default settings. Please contact the **Samsung Customer Care Center** for details.

---

**Important!** Please provide warranty information (proof of purchase) to Samsung's Customer Care Center in order to provide this service at no charge. If the warranty has expired on the device, charges may apply.

---

Samsung Telecommunications America, LLC  
1301 E. Lookout Drive  
Richardson, Texas 75082

Phone: 1-800-SAMSUNG  
Phone: 1-888-987-HELP (4357)

©2012 Samsung Telecommunications America, LLC. All rights reserved.

No reproduction in whole or in part allowed without prior written approval. Specifications and availability subject to change without notice. [111611]

## **End User License Agreement for Software**

**IMPORTANT. READ CAREFULLY:** This End User License Agreement (“EULA”) is a legal agreement between you (either an individual or a single entity) and Samsung Electronics Co., Ltd. for software owned by Samsung Electronics Co., Ltd. and its affiliated companies and its third party suppliers and licensors that accompanies this EULA, which includes computer software and may include associated media, printed materials, “online” or electronic documentation (“Software”).

BY CLICKING THE “I ACCEPT” BUTTON (OR IF YOU BYPASS OR OTHERWISE DISABLE THE “I ACCEPT”, AND STILL INSTALL, COPY, DOWNLOAD, ACCESS OR OTHERWISE USE THE SOFTWARE), YOU AGREE TO BE BOUND BY THE TERMS OF THIS EULA. IF YOU DO NOT ACCEPT THE TERMS IN THIS EULA, YOU MUST CLICK THE “DECLINE” BUTTON, AND DISCONTINUE USE OF THE SOFTWARE.

**1. GRANT OF LICENSE.** Samsung grants you the following rights provided that you comply with all terms and conditions of this EULA: You may install, use, access, display and run one copy of the Software on the local hard disk(s) or other permanent storage media of one computer and use the Software on a single computer or a mobile device at a time, and you may not make the Software available over a network where it could be used by multiple computers at the same time. You may make one copy of the Software in machine-readable form for backup purposes only; provided that the backup copy must include all copyright or other proprietary notices contained on the original.

**2. RESERVATION OF RIGHTS AND OWNERSHIP.** Samsung reserves all rights not expressly granted to you in this EULA. The Software is protected by copyright and other intellectual

property laws and treaties. Samsung or its suppliers own the title, copyright and other intellectual property rights in the Software. The Software is licensed, not sold.

**3. LIMITATIONS ON END USER RIGHTS.** You may not reverse engineer, decompile, disassemble, or otherwise attempt to discover the source code or algorithms of, the Software (except and only to the extent that such activity is expressly permitted by applicable law notwithstanding this limitation), or modify, or disable any features of, the Software, or create derivative works based on the Software. You may not rent, lease, lend, sublicense or provide commercial hosting services with the Software.

**4. CONSENT TO USE OF DATA.** You agree that Samsung and its affiliates may collect and use technical information gathered as part of the product support services related to the Software provided to you, if any, related to the Software. Samsung may use this information solely to improve its products or to provide customized services or technologies to you and will not disclose this information in a form that personally identifies you.

**5. UPGRADES.** This EULA applies to updates, supplements and add-on components (if any) of the Software that Samsung may provide to you or make available to you after

the date you obtain your initial copy of the Software, unless we provide other terms along with such upgrade. To use Software identified as an upgrade, you must first be licensed for the Software identified by Samsung as eligible for the upgrade. After upgrading, you may no longer use the Software that formed the basis for your upgrade eligibility.

**6. SOFTWARE TRANSFER.** You may not transfer this EULA or the rights to the Software granted herein to any third party unless it is in connection with the sale of the mobile device which the Software accompanied. In such event, the transfer must include all of the Software (including all component parts, the media and printed materials, any upgrades, this EULA) and you may not retain any copies of the Software. The transfer may not be an indirect transfer, such as a consignment. Prior to the transfer, the end user receiving the Software must agree to all the EULA terms.

**7. EXPORT RESTRICTIONS.** You acknowledge that the Software is subject to export restrictions of various countries. You agree to comply with all applicable international and national laws that apply to the Software, including the U.S. Export Administration Regulations, as well as end user, end use, and destination restrictions issued by U.S. and other governments.

8. **TERMINATION.** This EULA is effective until terminated. Your rights under this License will terminate automatically without notice from Samsung if you fail to comply with any of the terms and conditions of this EULA. Upon termination of this EULA, you must cease all use of the Software and destroy all copies, full or partial, of the Software.

9. **THIRD-PARTY APPLICATIONS.** Certain third-party applications may be included with, or downloaded to this mobile device. SAMSUNG makes no representations whatsoever about any of these applications. Since SAMSUNG has no control over such applications, Purchaser acknowledges and agrees that SAMSUNG is not responsible for the availability of such applications and is not responsible or liable for any content, advertising, products, services, or other materials on or available from such applications. Purchaser expressly acknowledges and agrees that use of third-party applications is at Purchaser's sole risk and that the entire risk of unsatisfactory quality, performance, accuracy and effort is with Purchaser. It is up to Purchaser to take precautions to ensure that whatever Purchaser selects to use is free of such items as viruses, worms, Trojan horses, and other items of a destructive nature. References on this mobile device to any names, marks, products, or services of any third-parties are provided solely as a convenience to

Purchaser, and do not constitute or imply an endorsement, sponsorship, or recommendation of, or affiliation with the third-party or its products and services. Purchaser agrees that SAMSUNG shall not be responsible or liable, directly or indirectly, for any damage or loss caused or alleged to be caused by, or in connection with, use of or reliance on any such third-party content, products, or services available on or through any such application. Purchaser acknowledges and agrees that your use of any third-party application is governed by such third-party application provider's Terms of Use, License Agreement, Privacy Policy, or other such agreement and that any information or personal data you provide, whether knowingly or unknowingly, to such third-party application provider, will be subject to such third-party application provider's privacy policy, if such a policy exists. SAMSUNG DISCLAIMS ANY RESPONSIBILITY FOR ANY DISCLOSURE OF INFORMATION OR ANY OTHER PRACTICES OF ANY THIRD-PARTY APPLICATION PROVIDER.

10. **Disclaimer of Warranty Regarding Third-Party Applications.** SAMSUNG DOES NOT WARRANT OR MAKE ANY REPRESENTATIONS REGARDING THE AVAILABILITY, USE, TIMELINESS, SECURITY, VALIDITY, ACCURACY, OR RELIABILITY OF, OR THE RESULTS OF THE USE OF, OR OTHERWISE RESPECTING, THE CONTENT OF ANY

THIRD-PARTY APPLICATION WHETHER SUCH THIRD-PARTY APPLICATION IS INCLUDED WITH THE PRODUCT DISTRIBUTED BY SAMSUNG, IS DOWNLOADED, OR OTHERWISE OBTAINED. USE OF ANY THIRD-PARTY APPLICATION IS DONE AT PURCHASER'S OWN DISCRETION AND RISK AND PURCHASER IS SOLELY RESPONSIBLE FOR ANY DAMAGE TO YOUR MOBILE DEVICE OR LOSS OF DATA THAT RESULTS FROM THE DOWNLOADING OR USE OF SUCH THIRD-PARTY APPLICATIONS. SAMSUNG EXPRESSLY DISCLAIMS ANY WARRANTY REGARDING WHETHER PURCHASER'S PERSONAL INFORMATION IS CAPTURED BY ANY THIRD-PARTY APPLICATION PROVIDER OR THE USE TO WHICH SUCH PERSONAL INFORMATION MAY BE PUT BY SUCH THIRD-PARTY APPLICATION PROVIDER. ANY THIRD-PARTY APPLICATIONS PROVIDED WITH THIS MOBILE DEVICE ARE PROVIDED "AS IS" AND ON AN "AS AVAILABLE" BASIS, WITHOUT WARRANTIES OF ANY KIND FROM SAMSUNG, EITHER EXPRESS OR IMPLIED. TO THE FULLEST EXTENT POSSIBLE PURSUANT TO APPLICABLE LAW, SAMSUNG DISCLAIMS ALL WARRANTIES EXPRESS, IMPLIED, OR STATUTORY, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY, SATISFACTORY QUALITY OR WORKMANLIKE EFFORT, FITNESS FOR A PARTICULAR PURPOSE, RELIABILITY OR AVAILABILITY,

ACCURACY, LACK OF VIRUSES, QUIET ENJOYMENT, NON-INFRINGEMENT OF THIRD PARTY RIGHTS OR OTHER VIOLATION OF RIGHTS. SAMSUNG DOES NOT WARRANT AGAINST INTERFERENCE WITH YOUR ENJOYMENT OF THE THIRD-PARTY APPLICATION, THAT THE FUNCTIONS CONTAINED IN THE THIRD-PARTY APPLICATION WILL MEET PURCHASER'S REQUIREMENTS, THAT THE OPERATION OF THE THIRD-PARTY APPLICATION WILL BE UNINTERRUPTED OR ERROR-FREE, OR THAT DEFECTS IN THE THIRD-PARTY APPLICATION WILL BE CORRECTED. PURCHASER ASSUMES THE ENTIRE COST OF ALL NECESSARY SERVICING, REPAIR, OR CORRECTION. SOME JURISDICTIONS DO NOT ALLOW EXCLUSIONS OR LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. NO ADVICE OR INFORMATION, WHETHER ORAL OR WRITTEN, OBTAINED BY PURCHASER FROM SAMSUNG SHALL BE DEEMED TO ALTER THIS DISCLAIMER OF WARRANTY REGARDING THIRD-PARTY APPLICATIONS, OR TO CREATE ANY WARRANTY.

11. Limitation of Liability. SAMSUNG WILL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND ARISING OUT OF OR RELATING TO THE USE OR THE INABILITY TO USE ANY THIRD-PARTY APPLICATION, ITS CONTENT OR FUNCTIONALITY, INCLUDING BUT NOT LIMITED TO DAMAGES

CAUSED BY OR RELATED TO ERRORS, OMISSIONS, INTERRUPTIONS, DEFECTS, DELAY IN OPERATION OR TRANSMISSION, COMPUTER VIRUS, FAILURE TO CONNECT, NETWORK CHARGES, AND ALL OTHER DIRECT, INDIRECT, SPECIAL, INCIDENTAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES EVEN IF SAMSUNG HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. NOT WITHSTANDING THE FOREGOING, SAMSUNG'S TOTAL LIABILITY TO PURCHASER FOR ALL LOSSES, DAMAGES, CAUSES OF ACTION, INCLUDING BUT NOT LIMITED TO THOSE BASED ON CONTRACT, TORT, OR OTHERWISE, ARISING OUT OF PURCHASER'S USE OF THIRD-PARTY APPLICATIONS ON THIS MOBILE DEVICE, OR ANY OTHER PROVISION OF THIS EULA, SHALL NOT EXCEED THE AMOUNT PURCHASER PAID SPECIFICALLY FOR ANY SUCH THIRD-PARTY APPLICATION THAT WAS INCLUDED WITH THIS MOBILE DEVICE. THE FOREGOING LIMITATIONS, EXCLUSIONS, AND DISCLAIMERS (INCLUDING SECTIONS 9, 10, AND 11) SHALL APPLY TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, EVEN IF ANY REMEDY FAILS ITS ESSENTIAL PURPOSE.

12. U.S. Government End Users Restricted Rights. The Software is licensed only with "restricted rights" and as "commercial items" consisting of "commercial software" and "commercial software documentation" with only those rights as are granted to all other end users pursuant to the terms and conditions herein. All Software and Products provided to the United States Government pursuant to solicitations issued on or after December 1, 1995 is provided with the commercial rights and restrictions described elsewhere herein. All Software and Products provided to the United States Government pursuant to solicitations issued prior to December 1, 1995 are provided with RESTRICTED RIGHTS as provided for in FAR, 48 CFR 52.227-14 (JUNE 1987) or DFAR, 48 CFR 252.227-7013 (OCT 1988), as applicable.

13. APPLICABLE LAW. This EULA is governed by the laws of TEXAS, without regard to conflicts of laws principles. This EULA shall not be governed by the UN Convention on Contracts for the International Sale of Goods, the application of which is expressly excluded. If a dispute, controversy or difference is not amicably settled, it shall be finally resolved by arbitration in Seoul, Korea in accordance with the

Arbitration Rules of the Korean Commercial Arbitration Board. The award of arbitration shall be final and binding upon the parties.

14. ENTIRE AGREEMENT; SEVERABILITY. This EULA is the entire agreement between you and Samsung relating to the Software and supersedes all prior or contemporaneous oral or written communications, proposals and representations with respect to the Software or any other subject matter covered by this EULA. If any provision of this EULA is held to be void, invalid, unenforceable or illegal, the other provisions shall continue in full force and effect.

## **Social Hub**

### ***Legal Terms and Privacy***

Samsung's Social Hub and (if applicable) the website where you accessed this Disclaimer (collectively, the "Service"), is being made available to you by Samsung Electronics Co., Ltd., and its affiliates and suppliers (collectively "Samsung") subject to the following enclosed documents:

- Social Hub Terms and Conditions which governs your use of the Service generally;

- Social Hub End User License Agreement which specifically governs your use of the software which forms part of, or enables you to access, the Service; and
- Social Hub Privacy Policy which governs our collection and use of personal information in connection with your access to and use of the Service.

By using the Service, you agree to be bound by the above documents. Please read through those documents to make sure you understand the basis on which Samsung is providing the Service to you.

You will be able to access additional features available at [socialhub.samsungmobile.com](http://socialhub.samsungmobile.com).

### ***Social Hub Terms and Conditions***

#### ***Acceptance of the Terms***

These Social Hub Terms and Conditions together with the Social Hub Privacy Policy and Social Hub End User Licence Agreement (collectively "Terms") govern your use of Social Hub, which comprises all content and services accessible through Social Hub (including third party content and services), and (if applicable) the website where you accessed these Terms (collectively the "Service"). The Terms constitute an agreement between you and Samsung



Electronics Co., Ltd., and its affiliates (collectively "Samsung") with respect to the Service. By using the Service, you agree to be legally bound to the Terms.

You are not allowed to use the Service if you do not agree to the Terms. To the extent permitted by applicable law, Samsung reserves the right to modify, update, supplement, revise or otherwise change the Terms, and to impose new or additional rules, policies, terms or conditions in relation to the Service, from time to time with or without notice to you ("Amendments").

Samsung may provide you with notice of the Amendments by sending an email message to the email address listed in your account information (if any), or by posting the notice on the Social Hub website.

Such Amendments will be effective immediately and incorporated into the Terms upon sending or posting of such notice. You are responsible for regularly reviewing the Terms. Your continued use of the Service will be deemed to constitute your acceptance of any and all such Amendments.

## **Eligibility**

To use the Service, you must be at least sixteen (16) years of age. If you are at least sixteen (16 ) years of age but are a minor for legal purposes where you live, you must review the

Terms and have your parent or legal guardian accept the Terms on your behalf in order for you to use the Service. The person accepting the Terms on your behalf must be legally competent.

## **Your Information**

When required to provide information in connection with your use of the Service, you agree to provide truthful and complete information. Providing misleading information about your identity is forbidden. When you first use the Service, you may be required to create a username and a password.

You (and your parent or legal guardian, if you are a minor) are personally responsible for any use of the Service with your username and password.

You agree to take due care in protecting your username and password against misuse by others and promptly notify Samsung about any misuse.

## **Termination of Service**

Samsung may terminate or restrict your access to certain parts of the Service if there is an indication that you have breached the Terms or at any time in its sole discretion.

## **Your Material**

Except as set forth in the Social Hub Privacy Policy, Samsung shall not be responsible for any removal of the information or content you have submitted in the course of using the Service ("Material") when your access to the Service is terminated. Your submission of Material in the course of using the Service does not transfer ownership rights in the Material to Samsung. After the Material is removed from the Service by either you or Samsung, some traces of the Material may remain and copies of the Material may still reside within the servers used in providing the Service. However, Samsung does not claim ownership in your Material.

You represent and warrant that you have obtained any consents, permission or licenses that may be required for you to have the legal right to submit any Material. Samsung reserves the right to terminate your access to the Service if Samsung determines, at its sole discretion, that you have repeatedly submitted infringing Materials to the Service.

## **Using the Service**

You agree to:

- Use the Service only for your private, non-commercial purposes;
- Comply with applicable laws, the Terms and good manners;

- Not submit unlawful, offensive, abusive, pornographic, harassing, libelous or other inappropriate Material;
- Respect the privacy of others;
- Obtain any consents, permission or licenses that may be required for you to have the legal right to submit any Material; and
- Not distribute or post spam, unreasonably large files, chain letters, pyramid schemes, viruses or any other technologies that may harm the Service, or the interest or property of the Service users.

Unauthorized use of the Service (including any use in contravention of the Terms) is prohibited and may result in criminal prosecution and/or civil liability.

## **Restrictions**

You and any third party directed by You must not display, copy, store, modify, sell, publish or redistribute the Service (whether all or any portion of it), and such displaying, copying, storing, modification, sale, publishing and redistribution shall be prohibited unless you have obtained all necessary rights and permissions from Samsung and the owners and right holders of such the Service or relevant part.

You must not use the Service for any purposes other than those permitted under the Terms. Without limiting this restriction, you must not use the service for any illegal purposes, to make unsolicited offers or advertisements, to impersonate or falsely claim affiliation with any person or entity, to misrepresent, harass, defraud or defame others, to post obscene or unreasonably offensive material, to negatively present the Service, nor for any commercial purposes.

Except as expressly permitted by the Terms, and except to the extent that applicable laws prevent Samsung from restraining you from doing so, you are not allowed to disassemble, reverse engineer, tamper with the Service, transmit malicious code or collect information of other users through the Service.

You may not take any action to interrupt the functionality of or tamper with the Service or any content or service contained in or provided through the Service, or any servers used in providing the Service, or to unreasonably affect others' enjoyment of the Service in any way.

### ***Actions Required by Law***

Samsung may need to comply with lawful interception and/or data retention requirements imposed by your country of residence or any other country in which you use the Service. Samsung may restrict access to any part of the Service or terminate your access to the Service, at any time in its sole discretion if required by law or by the relevant authorities or regulatory agencies to do so.

### ***Third Party Sites and Content***

The Service may allow access to sites on the Internet that are owned or operated by third parties. Access to such sites does not imply that Samsung endorses the site or the conduct, products or services on the site. Upon accessing any such site, you must review and agree to the rules of use of the relevant site before using the site.

You acknowledge and agree that Samsung has no control over the content, products or services of third-party sites and does not assume any responsibility for or in respect of such content, products or services. Third party content and services may be terminated or interrupted at any time, and Samsung makes no representation or warranty that any content or service will remain available for any period of

time. Samsung expressly disclaims any responsibility or liability for any interruption or suspension of any third party content or service.

In addition, Samsung is neither responsible nor liable for customer service related to third party sites. Any question or request for service relating to third party sites should be made directly to the relevant site operator.

### **Subscription Information**

Use of the Service may involve transmission of data through your service provider's network. Your network service provider may charge you for such data transmission. Samsung assumes no responsibility for the payment of any such charges.

### **Availability**

The Service may be network dependent - contact your network service provider for more information. Samsung reserves the right, in its sole discretion, to change, improve and correct the Service. The Service may not be available during maintenance breaks and other times. Samsung may also decide to discontinue the Service or any part thereof in its sole discretion. In such case you will be provided with prior notification.

Samsung does not represent or warrant that the Service, or any part thereof, is appropriate or available for use in any particular jurisdiction. If you choose to access the Service, you do so on your own initiative and at your own risk, and you are responsible for complying with all US federal, state and local laws, rules and regulations.

### **Dealings with Others**

You may interact with other users on or through the Service. You agree that any such interactions do not involve Samsung and are solely between you and the other user(s).

### **Intellectual Property**

The Service and related software are protected under international copyright laws and you are hereby notified that copyrights are claimed by Samsung.

Subject to the Terms, Samsung retains all right, title and interest in the Service and in all Samsung's products, software and other properties provided to you or used by you through the Service.

### **Personal Data**

The Social Hub Privacy Policy and the following additional provisions govern the use of your personal information. When you access the Service, Samsung may ask for or otherwise

collect certain personal information such as your email address along with your user name and password and, in certain cases, your mobile phone number so that we can communicate with you, for example to send notifications of incoming messages. When you use the Service, certain technical information such as the type and serial number of your mobile device, Internet protocol address, your mobile network and country codes, timezone, technical details of your client as well as your transactions with Samsung, for example your acceptance of the Terms, will be automatically collected by Samsung.

The purposes for which Samsung may use such data are explained in the Social Hub Privacy Policy. Samsung may also participate with your selected service providers in maintaining your contact lists.

The third party services and content you access through the Service and the telecommunications carriers and the network through which you access the Service are provided and hosted by your selected third party content and service providers who typically has a privacy policy of its own. We recommend you familiarize yourself with your service provider's privacy policy. Samsung is not responsible for the privacy or any other practices of such service providers. Although your messages will be transmitted through

Samsung's servers, Samsung will not process the content or headers of your messages for any purpose other than as necessary to deliver and manage your messages, unless otherwise required by law.

In connection with certain services accessible via the Service, Samsung may cooperate with your operator and other third parties. Samsung may receive from such third parties certain device specific non-personal information, such as device serial number of the devices sold by the operator with preinstalled software for the Service. Such information may be used for analyzing the activation of the Service.

## **LIMITATION OF LIABILITY**

THE SERVICE IS PROVIDED ON "AS IS" AND "AS AVAILABLE" BASIS. TO THE FULLEST EXTENT PERMITTED BY THE LAW AND SUBJECT TO THE TERMS, SAMSUNG DOES NOT WARRANT THAT THE SERVICE WILL BE UNINTERRUPTED OR ERROR OR VIRUS-FREE.

TO THE FULLEST EXTENT PERMITTED BY THE LAW AND SUBJECT TO THE TERMS, NO WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTIES OF TITLE OR NON-INFRINGEMENT OR IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS

FOR A PARTICULAR PURPOSE, IS MADE IN RELATION TO THE AVAILABILITY, ACCURACY, RELIABILITY, OF THE SERVICE, INCLUDING ANY INFORMATION OR CONTENT PROVIDED THROUGH THE SERVICE. YOU EXPRESSLY AGREE AND ACKNOWLEDGE THAT THE USE OF THE SERVICE IS AT YOUR SOLE RISK AND THAT YOU MAY BE EXPOSED TO CONTENT FROM VARIOUS SOURCES.

SAMSUNG SHALL NOT BE HELD RESPONSIBLE FOR ANY THIRD PARTY CONTENT OR SERVICE THAT MAY BE ACCESSED THROUGH THE SERVICE, NOR SHALL SAMSUNG BE HELD RESPONSIBLE FOR MALICIOUS CODE CONTAINED ON OR DISTRIBUTED THROUGH BY THIRD PARTIES.

YOU ASSUME FULL RESPONSIBILITY FOR ANY DAMAGES, LOSSES, COSTS, OR HARM ARISING FROM YOUR USE OF OR INABILITY TO USE THE SERVICE. TO THE EXTENT PERMITTED BY LAW, EXCEPT FOR LIABILITY FOR DEATH OR PERSONAL INJURY CAUSED BY GROSS NEGLIGENCE OR INTENTIONAL MISCONDUCT, SAMSUNG DISCLAIMS ALL LIABILITIES WITH RESPECT TO YOUR USE OF THE SERVICE (INCLUDING DIRECT, INDIRECT, INCIDENTAL, PUNITIVE OR CONSEQUENTIAL DAMAGES).

IF THERE IS A CLAIM THAT WE HAVE BREACHED ANY OF THE PROVISIONS IN THE TERMS, THIS DOES NOT AFFECT OR INVALIDATE THE OTHER PROVISIONS.

CERTAIN STATUTORY PROVISIONS UNDER APPLICABLE LAW MAY IMPLY WARRANTIES OR CONDITIONS OR IMPOSE OBLIGATIONS UPON SAMSUNG WHICH CANNOT BE EXCLUDED, RESTRICTED OR MODIFIED OR CANNOT BE EXCLUDED, RESTRICTED OR MODIFIED EXCEPT TO A LIMITED EXTENT. THE TERMS MUST BE READ SUBJECT TO THESE STATUTORY PROVISIONS. IF THESE STATUTORY PROVISIONS APPLY, TO THE EXTENT TO WHICH SAMSUNG IS ABLE TO DO SO, SAMSUNG LIMITS ITS LIABILITY UNDER THOSE PROVISIONS TO, AT ITS OPTION, IN THE CASE OF SERVICES (A) THE SUPPLYING OF THE SERVICES AGAIN; OR (B) THE PAYMENT OF THE COST OF HAVING THE SERVICES SUPPLIED AGAIN AND, IN THE CASE OF GOODS, (A) THE REPLACEMENT OF THE GOODS OR THE SUPPLY OF EQUIVALENT GOODS; (B) THE REPAIR OF THE GOODS; (C) THE PAYMENT OF THE COST OF REPLACING THE GOODS OR OF ACQUIRING EQUIVALENT GOODS; OR (D) THE PAYMENT OF THE COST OF HAVING THE GOODS REPAIRED.

## ***Indemnification***

You agree to defend, indemnify and hold harmless Samsung from and against any and all third party claims and all liabilities, assessments, losses, costs or damages resulting from or arising out of i) your breach of the Terms, ii) your infringement or violation of any intellectual property, other rights or privacy of a third party, iii) misuse of the Service by a third party where such misuse was made possible due to your failure to take reasonable measures to protect your username and password against misuse.

## ***Choice of Law***

Except where prohibited by applicable law or provided otherwise herein, the Terms shall be governed by the laws of the State of New York without regard to its conflict of law provisions.

You and Samsung agree to submit to the non-exclusive jurisdiction of the competent courts in the State of New York to resolve any legal matters arising from the Terms. Notwithstanding this, you agree that Samsung shall still be allowed to apply for injunctive remedies (or equivalent type of urgent legal relief) in any jurisdiction.

## ***Miscellaneous***

The Terms (including all documents comprising the Terms) constitute the entire agreement between you and Samsung, and supersedes any prior agreement between you and Samsung, with respect to your use of the Service. Your use of any third-party content or service accessed via the Service will be governed by the terms and conditions furnished with, and applicable to that content or service. If any provision of the Terms is held invalid, illegal or unenforceable, that portion of the Terms shall be construed in a manner consistent with applicable law to reflect, as nearly as possible, the original intentions of the parties, and the remaining portion of the Terms shall remain in full force and effect. Samsung's failure to enforce any right or provision of the Terms will not constitute a waiver of such provision, or any other provision of the Terms.

Samsung will not be liable or responsible for any failure to fulfill any of its obligations under the Terms which failure is due to any cause or condition beyond the reasonable control of Samsung. If there is any conflict between these Social Hub Terms and Conditions and the Social Hub Privacy Policy, the provisions of these Social Hub Terms and Conditions shall

prevail. The provisions of the Terms that are intended to or by their nature should survive termination of your use of the Service shall remain valid after any such termination.

## **Social Hub Privacy Policy**

Samsung Electronics Co., Ltd. ("Samsung") is committed to protecting the online privacy of visitors, users and customers to our Social Hub service. This privacy policy ("Privacy Policy") forms part of the Terms which govern your use of Social Hub(excluding any third party content and services), and (if applicable) the website where you accessed this Privacy Policy, (collectively, the "Service"). The purpose of the Privacy Policy is to inform you about the types of information we gather about you when you access or use the Service, how we may use that information, and if and how we disclose it to third parties.

All users of the Service are required to provide true, current, complete and accurate personal information when prompted and we will reject and delete any entry that we believe in good faith to be incorrect, false, falsified, or fraudulent, or inconsistent with or in violation of the Privacy Policy.

We will provide you with an opportunity to give your consent in relation to your use of the Service. Separate from such consent, your access or use of the Service will be construed

as your acceptance of the Privacy Policy and of our collection, use, disclosure, management and storage of your personal information as described below. We may, from time to time, transfer or merge any personal information collected off-line to our online databases or store off-line information in an electronic format. We may also combine personal information we collect online with information available from other sources, including information received from our affiliates, marketing companies, or advertisers. This Privacy Policy covers all such personal information and will remain in full force and effect as long as you are a user of the Service, even if your use of or participation in any particular service, feature, function or promotional activity terminates, expires, ceases, is suspended or deactivated for any reason.

## **INFORMATION THAT WE COLLECT**

### ***Personal Information***

We may request that you supply us with "personal" information, such as your name, e-mail address, mailing address, home or work telephone number in the course of you accessing or using the Service, such as via registration forms, surveys, and polls. In each such case, you will know what categories of information we collect because you will actively provide the information to us. You may not be able to



fully utilize all of the features or components of the Service if you choose not to provide certain information. If you do choose to give us personal information through the Service, we will collect and retain that information.

### ***Non-Personal Information***

When you use the Service, we may also collect "non-personal" information. We consider "non-personal information" to be information that, by itself, cannot be used to identify or contact you personally, such as demographic information (your age, gender, income, education, profession, zip code, etc.). Non-personal information may also include technical information, such as your IP address and other anonymous data involving your use of the Service.

Non-personal information may also include information that you provide us through your use of the Service, such as the terms you enter into the search functions of Social Hub, mail inbox and instant messenger. We reserve the right to use or disclose non-personal information in any way we see fit.

## **USE OF INFORMATION WE COLLECT**

### ***Our Services***

We use your personal information to provide you with any services that you may request or require, to communicate with you and to allow you to participate in online surveys. We

use aggregated non-personal information about our users to understand the demographics of users of the Service, such as the percentage of male and female users, the geographic distribution of our users, the age ranges of our users, a combination of these and/or other demographics. We may also use the personal or non-personal information we collect to analyze how Service is being used, and to improve the content of the Service, and for marketing and promotional efforts.

### ***E-mail Communications***

If you send us an e-mail with questions or comments, we may use your personal information to respond to your questions or comments, and we may save your questions or comments for future reference. Aside from our reply to such an e-mail, it is not our standard practice to send you e-mail unless you request a particular service that involves e-mail communications. However, you consent to us contacting you by e-mail, and sending you information about products and services which we believe may be of interest to you. You may have the opportunity to subscribe to an electronic newsletter in which case information about the Service or our advertisers will be sent to your e-mail address. We will provide you with the option to change your preferences and opt-out of receiving those communications. You may request

at any time that we not e-mail you in future by clicking the "unsubscribe" link which is included at the bottom of any e-mail that you receive from us. If you unsubscribe, we will make reasonable efforts to discontinue e-mail communications to you as soon as practicable.

## **DISCLOSURE OF INFORMATION TO THIRD PARTIES**

### ***Aggregate Information***

Except as specifically set forth in this Privacy Policy, we do not share your personal information with any third party without your permission. We may disclose aggregate information, such as demographic information, and our statistical analyses to third parties, including advertisers or other business partners. This aggregate information does not include your personal information.

### ***Service Providers***

We sometimes engage unaffiliated businesses to assist us in providing you certain services. For example, we may use third parties to provide advertising, marketing and promotional assistance, provide e-mail services, or facilitate our online services. In those instances, we may need to share your personal information with them.

We require these companies to use your personal information only to provide the particular product or service and do not authorize them to use your personal information for any other reason. We sometimes offer promotions in conjunction with a third party sponsor.

If you choose to participate in those promotions, we may share your information with the sponsor if they need it to send you a product or other special promotion they offer.

### ***Third Party Advertisers***

We may use third-party advertising companies to deliver specific advertisements to you. These companies may collect non-personal information about your visits to Social Hub in order to provide advertisements about products and services that may be of interest to you.

These companies may also aggregate your non-personal information for use in targeted advertising, marketing research, and other similar purposes. These companies may place their own cookies on your computer. If you want to prevent a third-party advertiser from collecting and using this information, you may visit each third party advertiser's website directly and opt-out.

## **Other Disclosures**

We may disclose personal information when we are required or requested to do so by law, court order or other government or law enforcement authority or regulatory agency; to enforce or apply our rights and agreements; or when we believe in good faith that disclosing this information is necessary or advisable, including, for example, to protect the rights, property, or safety of the Service and Samsung, our users, or others.

## **CHILDREN**

The Service is not designed for use by children without their parent's supervision. We ask that anyone under the age of sixteen (16) not submit any personal information through the Service. We do not knowingly collect any personal information from children under the age of eighteen, and therefore we do not knowingly distribute such information to third parties.

## **SECURITY OF THE INFORMATION WE COLLECT**

The security of your personal information is important to us. We maintain physical, electronic, and procedural safeguards to secure your personal information. However, there is

always some risk in transmitting information electronically. The personal information we collect is stored within databases that we control.

As we deem appropriate, we use security measures consistent with industry standards, such as firewalls and encryption technology, to protect your information. However, we cannot guarantee the security of our databases, nor can we guarantee that information you supply won't be intercepted while being transmitted to us over the Internet.

## **CHAT ROOMS AND OTHER PUBLIC AREAS**

Our third party service and content providers may offer chat, user reviews, bulletin boards, or other public functions and any posting by you is considered public information available to other users. Any posting is governed in accordance with the third party service and content providers' terms and conditions. You should take care not to use personal information in your screen name or other information that might be publicly available to other users.

## **Archived Information**

We maintain archives of web logs, database, and other systems and information in relation to the Service. Please note that it is possible some of this information may remain

archived after we delete the information from its active database. We maintain archives for disaster recovery, legal and other non-marketing purposes.

### ***How can I update my profile?***

You can help us maintain the accuracy of your profile by notifying us when you change zip/postal code, country of residence, age range, or e-mail address. If at any time you wish to update your information or stop receiving communication from us, sign in to the Service and then select 'update your profile' to change your preferences.

## **CONTESTS AND SWEEPSTAKES**

Registration may be required to enter promotions such as contests and sweepstakes on Social Hub. These registration or entry processes may require your submission of personal information such as your first and last name, street address, city, state and zip code, e-mail address, telephone number and date of birth. The entry page and/or rules for the promotion will provide the specific requirements for the promotion. You may also have the opportunity to opt-in to special offers from our advertisers in connection with these promotions.

## **ACCURACY OF THE INFORMATION WE COLLECT**

Any questions you may have regarding this Privacy Policy, the accuracy of your personal information or the use of your personal information, or any requests that we correct, update, or remove your information in our databases, should be directed via e-mail to [s.dufresne@Samsung.com](mailto:s.dufresne@Samsung.com), or via regular mail to:

Samsung Telecommunications America, LLC  
1301 E. Lookout Drive, Richardson, TX 75082  
Attn: Customer Support Department

After receiving a request to change your information, we will make reasonable efforts to ensure that all of your personal information stored in databases we actively use to operate the Service will be updated, corrected, changed or deleted, as appropriate, as soon as reasonably practicable. However, we reserve the right to retain in our archival files any information we remove from or change in our active databases. We may retain such information to resolve disputes, troubleshoot problems and enforce our Terms.

In addition, it is not technologically possible to remove each and every record of the information you have provided to us. A copy of your personal information may exist in a non-erasable form that will be difficult or impossible for us to locate.

## **CHANGES TO PRIVACY POLICY**

This Privacy Policy is effective as of May 29, 2010 and complies with Samsung's Corporate Privacy Policy. We reserve the right to change this Privacy Policy at any time, and will post any such changes to this Privacy Policy on the Social Hub website. Please refer back to the Social Hub website on a regular basis to obtain the most up to date Privacy Policy.

## **Social Hub End User License Agreement**

### **1. SOCIAL HUB**

This end user license ("License") allows you to use Social Hub ("Software") made available on your mobile device. This License is a legally binding agreement between you and Samsung Electronics Co. Ltd. the ("Licensor").

## **2. LICENSE**

2.1 Licensor grants you for the term of this License a limited, personal, non-exclusive, non-transferable license to use the Software in object code executable only form on a single device for non-commercial uses.

2.2 All rights not expressly granted to you under this License are reserved to Licensor, and you agree not to take or permit any action with respect to the Software that is not expressly authorised under this License. For the avoidance of doubt, you have no right to use, incorporate into other products, copy, modify, translate or transfer to any third party the Software or any modification, adaptation or copy of the Software or any part thereof, nor to decompile, reverse engineer, or disassemble the binary code of the Software, either in whole or in part, except as expressly provided in this License.

2.3 The Software is licensed to you only. You may not rent, lease, sub-license, sell, assign, pledge, transfer or otherwise dispose of the Software, on a temporary or permanent basis without the prior written consent of Licensor.

### **3. OWNERSHIP OF INTELLECTUAL PROPERTY RIGHTS**

3.1 Your only right to use the Software is by virtue of this License and you acknowledge that all intellectual property rights in or relating to the Software and all parts of the Software are and shall remain the exclusive property of Licensor or its licensors.

3.2 You agree that you will not remove or alter any copyright notices or similar proprietary devices, including without limitation any electronic watermarks or other identifiers, that may be incorporated in the Software or any copy of the Software.

### **4. CONFIDENTIALITY**

4.1 The structure, organisation and source code of the Software are the valuable trade secrets and proprietary confidential information of Licensor and its licensors. You agree not to provide or disclose any such confidential information in the Software or derived from it to any third party.

4.2 The provisions of clause 4.1 will not apply to any information which is:

4.2.1 lawfully obtained free of any duty of confidentiality (otherwise than directly or indirectly from Licensor); or

4.2.2 already in your possession, provided that Licensee can show such possession from written records (other than as a result of a breach of this clause 4); or

4.2.3 which you can demonstrate is in the public domain (other than as a result of a breach of this clause 4).

4.3 To the extent that any information is necessarily disclosed pursuant to a statutory or regulatory obligation or court order, such disclosure shall not be a breach of this clause 4 provided you do what you can to prevent any such disclosure.

### **5. WARRANTY AND SUPPORT**

The Software is provided "as is" with no representation, guarantee or warranty of any kind as to its functionality or that it does not and will not infringe any third party rights (including intellectual property rights). Licensor has no obligation under this License to provide technical or other support to you.

### **6. LIMITATION AND EXCLUSION OF LIABILITY**

6.1 Licensor does not exclude its liability (if any) to you:

6.1.1 for personal injury or death resulting from Licensor's negligence;

6.1.2 for fraud; or

6.1.3 for any matter for which it would be illegal for Licensor to exclude or to attempt to exclude its liability.

6.2 LICENSOR MAKES NO EXPRESS WARRANTIES WITH RESPECT TO THE SOFTWARE AND LICENSOR HEREBY EXCLUDES (TO THE FULLEST EXTENT PERMISSIBLE IN LAW), ALL CONDITIONS, WARRANTIES (INCLUDING WITHOUT LIMITATION ANY WARRANTY THAT THE SOFTWARE WILL MEET YOUR REQUIREMENTS OR THAT ITS OPERATION WILL BE UNINTERRUPTED OR ERROR FREE) AND STIPULATIONS, EXPRESS (OTHER THAN THOSE SET OUT IN THIS LICENSE) OR IMPLIED, STATUTORY, CUSTOMARY OR OTHERWISE WHICH, BUT FOR SUCH EXCLUSION, WOULD OR MIGHT SUBSIST IN FAVOUR OF YOU. EXCEPT AS SET OUT IN THIS LICENSE YOU ASSUME THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE SOFTWARE.

6.3 SUBJECT TO CLAUSE 6.1 LICENSOR WILL BE UNDER NO LIABILITY TO YOU WHATSOEVER (WHETHER IN CONTRACT, TORT (INCLUDING NEGLIGENCE), BREACH OF STATUTORY DUTY, RESTITUTION OR OTHERWISE) FOR ANY INJURY, DEATH, DAMAGE OR DIRECT, INDIRECT OR CONSEQUENTIAL LOSS (ALL THREE OF WHICH TERMS INCLUDE, WITHOUT LIMITATION, PURE ECONOMIC LOSS, LOSS OF PROFITS,

LOSS OF BUSINESS, LOSS OF DATA, LOSS OF SAVINGS, DEPLETION OF GOODWILL AND LIKE LOSS) HOWSOEVER CAUSED ARISING OUT OF OR IN CONNECTION WITH:

6.3.1 THE SOFTWARE, OR THE MANUFACTURE OR SALE OR SUPPLY, OR FAILURE OR DELAY IN SUPPLY, OF THE SOFTWARE BY LICENSOR OR ON THE PART OF LICENSOR'S EMPLOYEES, AGENTS OR SUB-CONTRACTORS;

6.3.2 ANY BREACH BY LICENSOR OF ANY OF THE EXPRESS OR IMPLIED TERMS OF THIS LICENSE;

6.3.3 ANY USE MADE OF THE SOFTWARE; OR

6.3.4 ANY STATEMENT MADE OR NOT MADE, OR ADVICE GIVEN OR NOT GIVEN, BY OR ON BEHALF OF LICENSOR.

6.4 Disclaimer of Certain Damages. IN NO EVENT SHALL SAMSUNG BE LIABLE TO YOU OR ANY PARTY RELATED TO YOU FOR ANY INDIRECT, INCIDENTAL, CONSEQUENTIAL, SPECIAL, EXEMPLARY, OR PUNITIVE DAMAGES OR LOST PROFITS, EVEN IF SAMSUNG HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THIS LIMITATION WILL APPLY REGARDLESS OF THE THEORY OF LIABILITY, WHETHER FRAUD, MISREPRESENTATION, BREACH OF CONTRACT, NEGLIGENCE, PERSONAL INJURY, PRODUCTS LIABILITY, INTELLECTUAL PROPERTY INFRINGEMENT, OR ANY OTHER THEORY REGARDLESS OF WHETHER OR NOT SAMSUNG HAS

BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THIS MEANS THAT YOU WILL NOT SEEK, AND HEREBY WAIVE, ANY INDIRECT, SPECIAL, CONSEQUENTIAL, TREBLE, OR PUNITIVE DAMAGES FROM SAMSUNG. THIS LIMITATION AND WAIVER ALSO APPLIES TO ANY CLAIMS YOU MAY BRING AGAINST ANY OTHER PARTY TO THE EXTENT THAT SAMSUNG WOULD BE REQUIRED TO INDEMNIFY THAT PARTY FOR SUCH CLAIM.

6.5 You acknowledge that the above provisions of this clause 6 are reasonable for the Software and you will accept such risk and/or insure accordingly.

6.6 Any rights that you have as a consumer are not affected by this clause 6.

## **7. TERM AND TERMINATION**

7.1 This License shall commence upon the earlier of your acceptance of this License or your activation of the Software and shall continue until terminated in accordance with clause 7.2 or otherwise in accordance with this License.

7.2 This License will terminate automatically if you fail to comply with any term or condition of this License or if you cease to use the Software for any reason.

7.3 Upon termination of this License for any reason whatsoever Licensor retains the right to permanently disable your access to the Software.

7.4 The termination of this License howsoever arising is without prejudice to the rights, duties and liabilities of either party accrued prior to termination. Clauses 2.2, 2.3, 3, 4, 5, 6, 7.3, 8, 9 and 10 of this License will continue to be enforceable notwithstanding termination.

## **8. GOVERNING LAW AND JURISDICTION**

8.1 The formation, existence, construction, performance, validity and all aspects whatsoever of this License or of any term of this License will be governed by the laws of the State of New York.

8.2 The courts in New York City will have non-exclusive jurisdiction to settle any disputes which may arise out of or in connection with this License. The parties irrevocably agree to submit to that jurisdiction.

## **9. COMPLIANCE WITH APPLICABLE LAW**

You acknowledge and agree that notwithstanding the fact that this License is governed by the laws of the Republic of Korea, you may be subject to additional laws in other jurisdictions with respect to your use of the Software. You



will comply with the laws of any jurisdiction that apply to the Software, including without limitation any applicable export laws or regulations.

## **10. GENERAL**

10.1 If any clause or part of this License is found by any court, tribunal, administrative body or authority of competent jurisdiction to be illegal, invalid or unenforceable then that provision will, to the extent required, be severed from this License and will be ineffective without, as far as is possible, modifying any other clause or part of this License and this will not affect any other provisions of this License which will remain in full force and effect.

10.2 No failure or delay by any party to exercise any right, power or remedy will operate as a waiver of it nor will any partial exercise preclude any further exercise of the same, or of some other right, power or remedy.

10.3 The parties to this License do not intend that any of its terms will be enforceable by any person not a party to it.

10.4 This License contains all the terms which the parties have agreed in relation to the subject matter of this License and supersedes any prior written or oral agreements, representations or understandings between the parties in relation to such subject matter.

10.5 Licensor reserves the right to revise the terms of this License by updating the License on its web site, or by notifying you by post or by e-mail. You are advised to check the Licensor's website periodically for notices concerning revisions. Your continued use of the Software shall be deemed to constitute acceptance of any revised terms.

10.6 You will be deemed to have accepted the terms of this License by using the Software on any device.

## A

**Abc mode** 49

**Accessibility settings**

services 171

Text-to-speech 170

**Accounts**

adding a Corporate account 55

adding a Google account 54

setting up a Facebook account 58

setting up a Twitter account 58

**Airplane mode** 143

**Android Market** 130

**Applications**

downloading new 130

**Applications settings**

allow mock locations 162

development 162

managing 160

running services 161

unknown sources 160

USB debugging 162

## B

**Back key** 29

**Battery**

charging 13

cover, installing 12

cover, removing 8

indicator 11

installing 12

removing 14

**Battery Use & Safety** 182

**Bluetooth**

pairing with a device 111

profiles 142

settings 143

turning on or off 111

**Browser** 79

settings 84

## C

**Calculator** 118

**Calendar** 118

**Call log**

creating/updating contacts 43

making calls 43

managing 43

sending messages 43

**Call settings**

auto retry 147

DTMF tones 147

ignore with message 147

TTY mode 148

voice privacy 148

**Calls**

answering 41

call-waiting 42

ending 42

from Call log 41

from Contacts 40

from Favorites 40

in-call options 42

- rejecting 41
- sending to voicemail 41
- silencing a ringer 42
- three-way 41
- using the Dialer 38
- Voice Dialer 40

## **Camcorder**

- recording video 99
- settings 99

## **Camera**

- settings 97
- taking pictures 96

## **Care and Maintenance** 187

## **Children and Cell Phones** 178

## **Clock** 120

## **Contacts**

- activities 67
- creating 59
- creating from Call log 60
- creating from the Dialer 60
- display options 62
- exporting and importing 64
- Get Friends 61
- groups 65

- history 67
- linking 62
- My Profile 65
- namecards 63
- setting a picture as contact icon 105
- speed dials 68
- starred contacts 64
- synchronizing with accounts 61
- updating 60
- updating from Call log 43, 61
- updating from Dialer 61

## **Corporate email accounts** 55

## **D**

## **Display / Touch-Screen** 185

### **Display settings**

- animation 153
- auto-rotate screen 153
- brightness 153
- keyboard timeout 154
- screen timeout 154

## **Do cell phones pose a health hazard?** 174

## **Downloading**

- New application 130

## **E**

## **E911** 149

## **Email**

- account settings 77
- combined Inbox 76
- composing and sending 76
- configuring accounts 74
- Corporate accounts 55
- refreshing your accounts 76

## **Emergency Calls** 39, 186

## **Entering Text**

- Changing the Text Entry Mode 49
- Using 123Sym Mode 50
- Using Abc Mode 49
- Using Symbol/Numeric Mode 50

## **Exchange account** 55

## **Exposure to Radio Frequency (RF)**

- Signals** 174

## F

### Facebook

setting up an account 58

### FCC Hearing Aid Compatibility (HAC)

Regulations for Wireless

Devices 192

### FCC Notice and Cautions 194

## G

### Gallery 103

sharing pictures and video 104

viewing pictures and video 103

### Get Friends 61

### Getting Started

Setting Up Your Phone 7

### Gmail

account settings 73

composing and sending 73

configuring your account 72

refreshing your account 72

### Google

Android Market 130

Gmail 72

managing an account 55

Maps 85

setting up an account 54

Talk 78

Voice Search 87

your account 15

YouTube 87, 135

### Google Play Music 88

### GPS 186

### Groups

adding contacts 66

creating 65

sending a message 67

## H

### Health and Safety Information 174

### Home key 29

### Home screen 31

adding shortcuts 35

adding widgets 33

customizing 32

folders 36

primary shortcuts 32

wallpaper 37

## I

### Icons

Annunciator Line 27

## K

### Keypad

Changing Text Input 49

## L

### Locking and Unlocking

unlocking the keypad 20

## M

### Maps 85

### Market 130

### Memory Card

formatting 113

installing 18

removing 19

### Memory card

formatting 113

installing 18

removing 19

### Memory settings

external SD card 165

system storage 165

### Menu

context-sensitive 29

key 29

## **Messages**

- creating and sending 69
- email 74
- Gmail 72
- Google Talk (IM) 78
- managing 70
- settings 71
- Talk 78
- threaded view 70
- types 69

## **Mobile networks** 145

## **Music**

- creating a playlist 95
- playing 94
- setting a song as a ringtone 95

## **Music App**

- Adding Songs to Playlists 93
- Changing Library View 89
- Creating a Playlist 93
- Deleting a Playlist 94
- Listening 90
- Music Application 88
- Now Playing Screen 91
- Options While Playing 92

- Playing 90
- Playing a Playlist 93
- Registration 88
- Searching for Music 90
- Tab Options 91

## **My Location** 156

## **My Profile** 65

- sending via Bluetooth or Gmail 65

## **N**

## **Namecards**

- sending 63

## **Navigation** 29

- command keys 29, 32
- context-sensitive menus 30
- touch gestures 29

## **New applications**

- Downloading 130

## **Notification Panel** 30

## **O**

## **Operating Environment** 190

## **Other Important Safety**

## **Information** 195

## **P**

## **Pairing with Bluetooth** 111

## **Phone settings**

- Date & time 172
- language 166

## **Picture ID**

- setting 105

## **Pictures**

- Gallery 103
- setting as wallpaper 105
- sharing 104
- taking 96

## **Playlists**

- creating 95

## **Portable Wi-Fi Hotspot Settings** 140

## **Powering On and Off** 15

## **Privacy**

- voice 148

## **Privacy settings**

- personal data 164

## **Q**

## **QWERTY keyboards**

- slide-out keyboard 24
- Virtual Keyboard Types 48

## R

### **Reducing Exposure**

- Hands-Free Kits and Other Accessories 177

### **Reset**

- factory data 164

### **Responsible Listening** 188

### **Restricting Children's Access to Your**

- Mobile Device** 194

### **Ringtones**

- notification 151
- setting 150
- setting a song as a ringtone 95

### **Roaming** 17

## S

### **Samsung keypad**

- configuring 48
- entering text 48

### **Samsung Mobile Products and**

- Recycling** 184

### **Screen Keyboards**

- Samsung 48
- Swype 51

### **Security**

- locking and unlocking 19
- locking the phone 19
- screen unlock pattern 157

### **Security settings**

- credential storage 159
- screen unlock pattern 157
- visible passwords 158

### **Settings** 137

### **Sharing pictures and video** 104

### **Silent mode** 149

### **SIM card**

- installation 8
- Installing 8
- removing 10

### **Smart Practices While Driving** 181

### **Social Hub** 207

### **Sound settings**

- audible selection tones 151
- audible touch tones 151
- haptic feedback 152
- notification ringtone 151
- silent mode 149
- vibrate 149
- voice call ringtone 150

### **Specific Absorption Rate (SAR)**

### **Certification Information** 179

### **Speed Dials**

- assigning 68
- removing or reassigning 68

### **Standard Limited Warranty** 197

### **Swype**

- configuring 52
- help 52

### **Swype keyboard**

- entering text 51

### **Symbol/Numeric mode** 50

### **Synchronization settings**

- auto-sync 163
- background data 163

### **System Tutorial** 16

## T

### Text

- changing input method 48
- entering 46
- using Samsung keypad 48
- using Swype keyboard 51
- virtual QWERY keyboard 47

### Text Input

- Abc mode 49
- numeric mode 50
- symbol mode 50

### Text settings

- Swype 167

### Threaded view 70

### Tone Room Deluxe 132

### Touch Screen

- audible touch tones 151
- haptic feedback 152
- orientation setting 153

### TTY Mode 17

- settings 148

### Turning Your Phone On and Off 15

### Tutorial, System 16

## Twitter

- setting up an account 58

## U

### UL Certified Travel Charger 185

### Understanding Your Phone

- Back View 25
- Front View 22
- Open View of Your Phone 24
- Side Views 23

### Unlocking

- using an unlock pattern 20

### Unlocking your phone

- set an unlock pattern 157

### USB

- port 23

## V

### Videos

- Gallery 103
- recording 99
- sharing 104

### Voice Commands 133

- calling 133
- opening menus or applications 134

### Voice Search 87

### Voicemail

- checking 16, 44
- sending calls to 45
- setting up 16, 44

### Volume

- key 23

### VPN

- Connecting to a VPN 112

### VPN settings 144

## W

### **Wallpaper**

setting 105

### **Warranty Information** 197

### **Wi-Fi**

adding a connection

manually 107

scanning and connecting 107

settings 137

turning on or off 106

### **Wireless Networking**

Bluetooth 111

Dial Up Networking 145

Wi-Fi 106

## Y

### **Your Navigator Deluxe** 134

**YouTube** 87, 135